Agilent 1260 Infinity Binary Pump VL

User Manual

Agilent Technologies

Notices

© Agilent Technologies, Inc. 2008, 2010

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Agilent Technologies, Inc. as governed by United States and international copyright laws.

Manual Part Number

G1312-90007

Edition

06/10

Printed in Germany

Agilent Technologies
Hewlett-Packard-Strasse 8
76337 Waldbronn

This product may be used as a component of an in vitro diagnostic system if the system is registered with the appropriate authorities and complies with the relevant regulations. Otherwise, it is intended only for general laboratory use.

Warranty

The material contained in this document is provided "as is," and is subject to being changed, without notice, in future editions. Further, to the maximum extent permitted by applicable law, Agilent disclaims all warranties, either express or implied, with regard to this manual and any information contained herein, including but not limited to the implied warranties of merchantability and fitness for a particular purpose. Agilent shall not be liable for errors or for incidental or consequential damages in connection with the furnishing, use, or performance of this document or of any information contained herein. Should Agilent and the user have a separate written agreement with warranty terms covering the material in this document that conflict with these terms, the warranty terms in the separate agreement shall control.

Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

Restricted Rights Legend

If software is for use in the performance of a U.S. Government prime contract or subcontract, Software is delivered and licensed as "Commercial computer software" as defined in DFAR 252.227-7014 (June 1995), or as a "commercial item" as defined in FAR 2.101(a) or as "Restricted computer software" as defined in FAR 52.227-19 (June 1987) or any equivalent agency regulation or contract clause. Use, duplication or disclosure of Software is subject to Agilent Technologies' standard commercial license terms, and non-DOD Departments and Agencies of the U.S. Government will receive no greater than Restricted Rights as defined in FAR 52.227-19(c)(1-2) (June 1987). U.S. Government users will receive no greater than Limited Rights as defined in FAR 52.227-14 (June 1987) or DFAR 252.227-7015 (b)(2) (November 1995), as applicable in any technical data.

Safety Notices

CAUTION

A **CAUTION** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a **CAUTION** notice until the indicated conditions are fully understood and met.

WARNING

A WARNING notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a WARNING notice until the indicated conditions are fully understood and met.

Contents

1 Introduction 7

Introduction to the Binary Pump 8
Overview of the Binary Pump 9
Early Maintenance Feedback 14
Instrument Layout 15
Electrical Connections 16
Interfaces 18
Setting the 8-bit Configuration Switch (On-Board LAN) 24

2 Site Requirements and Specifications 31

Site Requirements 32
Physical Specifications 35
Performance Specifications 36

3 Installing the Pump 39

Unpacking the Binary Pump 40
Optimizing the Stack Configuration 43
Installing the Binary Pump 48
Connecting Modules and Control Software 51
Flow Connections of the Binary Pump with Solvent Selection Valve 54
Flow Connections of the Binary Pump Without Solvent Selection Valve 57
Priming and Purging the System 60

4 Using the Binary Pump 63

Hints for Successful Use of the Binary Pump 64
Solvent Information 66
Prevent Blocking of Solvent Filters 67
Algae Growth in HPLC Systems 68

5 Optimizing Performance 71

When to Use a Vacuum Degasser 72
When to Use the Seal Wash Option active seal wash 73
Choosing the Right Pump Seals 74
When to Remove the Static Mixer 75
How to Optimize the Compressibility Compensation Setting 76

6 Troubleshooting and Diagnostics 79

Status Indicators 80
Status Indicators 81
User Interfaces 83
Agilent Lab Advisor Software 84

7 Error Information 85

What Are Error Messages 87
General Error Messages 88
Module Error Messages 94

8 Test Functions and Calibration 115

Pressure Test 116
Leak Test 121

9 Maintenance 129

Introduction to Maintenance and Repair 130
Warnings and Cautions 131
Overview of Maintenance and Repair 132
Cleaning the Module 134
Checking and Cleaning the Solvent Filter 135
Exchanging the Purge Valve Frit or the Purge Valve 137
Removing the Pump Head Assembly 140
Disassembling the pump head 142
Exchanging the Pump Seals 143
Seal Wear-in Procedure 145
Exchanging the Plungers 146
Exchanging the Wash Seals 147
Reinstalling the Pump Head Assembly 149

Exchanging the Inlet Valve 151
Exchanging the Outlet Valve 153
Installation of the Solvent Selection Valve Upgrade Kit 155
Exchanging the Solvent Selection Valve 157
Installing the Active Seal Wash Option 160
Exchanging the Active Inlet Valve 164
Exchanging the Active Inlet Valve Cartridge 166
Exchanging the Optional Interface Board 168
Replacing the Module's Firmware 170

10 Parts for Maintenance 171

Parts and Materials 172
Pump Head Assembly Without Seal Wash 175
Pump Head Assembly with Seal Wash Option 177
Outlet Valve 179
Purge Valve Assembly 180
Active Inlet Valve Assembly 181
Accessory Kit 182
Seal Wash Option G1312-68711 183
Solvent Cabinet 184
Bottle Head Assembly 185
Hydraulic Path with Solvent Selection Valve 186
Hydraulic Path without Solvent Selection Valve 188

11 Identifying Cables 191

Cable Overview 192
Analog Cables 194
Remote Cables 196
BCD Cables 199
CAN/LAN Cables 201
External Contact Cable 202
Agilent Module to PC 203
Agilent 1200 Module to Printer 204

12 Appendix 205

General Safety Information 206
The Waste Electrical and Electronic Equipment Directive 209
Batteries Information 210
Radio Interference 211
Sound Emission 212
Solvent Information 213
Agilent Technologies on Internet 214

1 Introduction

Introduction to the Binary Pump 8
Overview of the Binary Pump 9
How Does the Binary Pump Work? 10
How Does Compressibility Compensation Work? 13
How Does Variable Stroke Volume Work? 13
Early Maintenance Feedback 14
Instrument Layout 15
Electrical Connections 16
Serial Number Information (ALL) 17
Electrical Connections 16
Interfaces 18
Overview Interfaces 20
Setting the 8-bit Configuration Switch (On-Board LAN) 24
Communication Settings for RS-232C 27
Special Settings 29

This chapter gives an introduction to the module, instrument overview and internal connectors.

Introduction to the Binary Pump

The binary pump comprises two identical pumps integrated into one housing. It provides gradient generation byhigh-pressure mixing. Degassing is not included but a vacuum degasser is available as a separate product for applications that require best flow stability especially at low flow rates or maximum detector sensitivity. This is most likely required to run small internal diameter columns (2 mm and 1 mm i.d.) which require low flow rates. A solvent selection valve (optional) will allow to select a binary mixture (isocratic and gradient) from four independent solvent bottles. An active seal wash (optional) is available when the pump is used with concentrated buffer solutions.

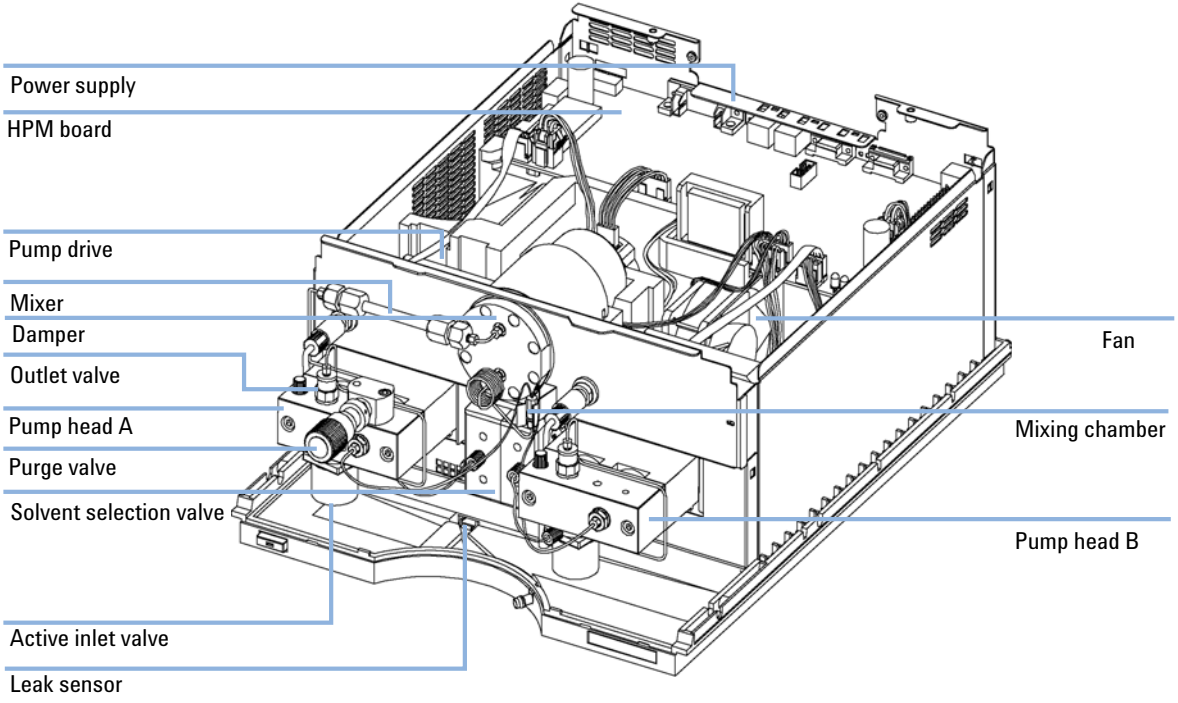

Figure 1 Overview of the Binary Pump

Overview of the Binary Pump

The binary pump is based on a two-channel, dual-piston in-series design which comprises all essential functions that a solvent delivery system has to fulfill. Metering of solvent and delivery to the high-pressure side are performed by two pump assemblies which can generate pressure up to 400 bar.

Each channel comprises a pump assembly including pump drive, pump head, active inlet valve which has a replaceable cartridge, and outlet valve. Both channels are connected in a low-volume mixing chamber which is connected by a capillary coil to a damping unit and a mixer. A purge valve including a PTFE frit is fitted at the pump outlet for convenient priming of the pumping system.

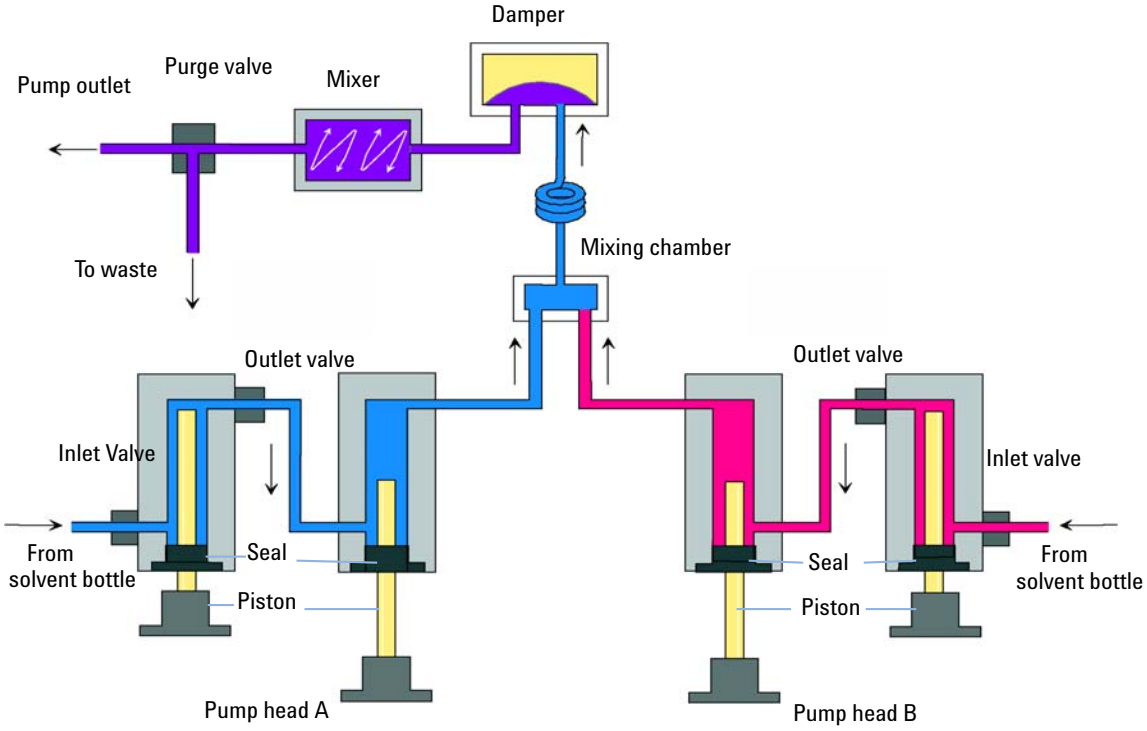

Figure 2 The Hydraulic Path

A seal wash (optional) is available when the pump is used with buffer solutions.

How Does the Binary Pump Work?

The liquid runs from the solvent reservoir through an active inlet valve. Each side of the binary pump comprises two substantially identical pump units. Both pump units comprise a ball-screw drive and a pump head with two sapphire pistons for reciprocating movement.

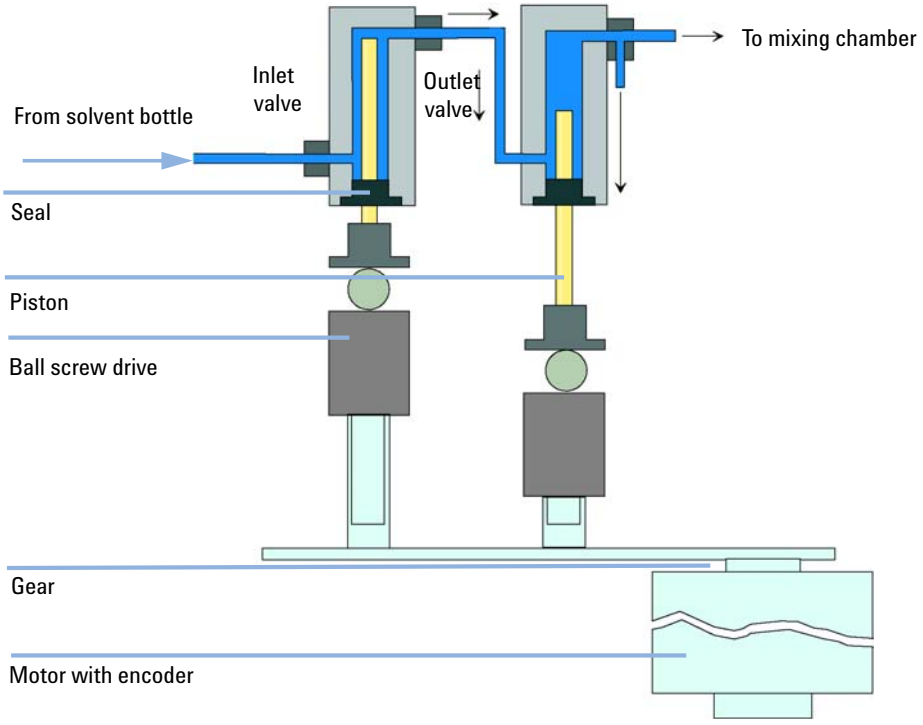

Figure 3 Principle of Pump Unit

A servo-controlled variable reluctance motor drives the two ball-screw drives in opposite directions. The gears for the ball-screw drives have different circumferences (ratio 2:1) allowing the first piston to move at double the speed of the second piston. The solvent enters the pump heads close to the bottom limit and leaves it at its top. The outer diameter of the piston is smaller than the inner diameter of the pump-head chamber allowing the solvent to fill the gap in between. The first piston has a stroke volume in the range of 20 µl to 100 µl depending on the flow rate. The microprocessor controls all flow rates in a range of 1 µl/min to 5 ml/min. The inlet of the first pumping unit is connected to the active inlet valve which is processor-controlled opened or closed allowing solvent to be drawn into the first pump unit.

The outlet of the pump unit is connected directly to the second pump unit. The outlet of the second pump unit is connected via a small mixing chamber, a coil

and the damping unit to the purge valve assembly. The outlet of the purge valve assembly is then connected to the following chromatographic system.

When turned on, the pump runs through an initialization procedure to determine the upper dead-center of the first piston of both pump channels. The first piston moves slowly upwards to the mechanical stop of the pump head and from there it moves back a predetermined path length. The controller stores this piston position in memory. After this initialization the pump starts operation with the set parameters for the two pump channels.

The active inlet valve is opened and the down moving piston draws solvent into the first pump head. At the same time the second piston is moving upwards delivering into the system. After a controller-defined stroke length (depending on the flow rate) the drive motors are stopped and the active inlet valve is closed. The motor direction is reversed and moves the first piston up until it reaches the stored upper limit and at the same time moving the second piston downwards.

Then the sequence starts again moving the pistons up and down between the two limits. During the upward movement of the first piston the solvent in the pump head is pressed through the outlet ball valve into the second pumping unit. The second piston draws in half of the volume displaced by the first piston and the remaining half volume is directly delivered into the system. During the drawing stroke of the first piston, the second piston delivers the drawn volume into the system.

Table 1 Pump Details

Delay volume	From mixing point to pump outlet, dependent on back pressure (180 – 480 µL without mixer, 600 – 900 µL with mixer)
Materials in contact with mobile phase	
Pump head	SST, gold, sapphire, ceramic
Active inlet valve	SST, sapphire, ruby, ceramic, PTFE
Outlet valve	SST, gold, sapphire, ruby, tantalum
Adapter	SST, gold
Purge valve	SST, gold, PTFE, ceramic
Damping unit	Gold, SST

For pump specifications, see “Performance Specifications” on page 36.

How Does Compressibility Compensation Work?

The compressibility of the solvents in use will affect retention-time stability when the back pressure in the system changes (for example, ageing of column). In order to minimize this effect, the pump provides a compressibility compensation feature which optimizes the flow stability according to the solvent type. The compressibility compensation is set to a default value and can be changed through the user interface.

Without a compressibility compensation the following will happen during a stroke of the first piston. The pressure in the piston chamber increases and the volume in the chamber will be compressed depending on backpressure and solvent type. The volume displaced into the system will be reduced by the compressed volume.

With a compressibility value set the processor calculates a compensation volume, that is depending on the backpressure in the system and the selected compressibility. This compensation volume will be added to the normal stroke volume and compensates the previous described *loss* of volume during the delivery stroke of the first piston.

How Does Variable Stroke Volume Work?

Due to the compression of the pump-chamber volume each piston stroke of the pump will generate a small pressure pulsation, influencing the flow stability of the pump. The amplitude of the pressure pulsation depends mainly on the stroke volume and the compressibility compensation for the solvent in use. Small stroke volumes generate pressure pulsations of smaller amplitude than higher stroke volumes at the same flow rate. In addition, the frequency of the pressure pulsations is higher. This decreases the influence of flow pulsations on quantitative results.

In gradient mode smaller stroke volumes result in a lower flow ripple improve composition ripple.

The module uses a processor-controlled spindle system for driving its pistons. The normal stroke volume is optimized for the selected flow rate. Small flow rates use a small stroke volume while higher flow rates use a higher stroke volume.

By default, the stroke volume for the pump is set to AUTO mode. This means that the stroke is optimized for the flow rate in use. A change to larger stroke volumes is possible but not recommended.

Early Maintenance Feedback

Maintenance requires the exchange of components which are subject to wear or stress. Ideally, the frequency at which components are exchanged should be based on the intensity of usage of the module and the analytical conditions, and not on a predefined time interval. The early maintenance feedback (**EMF**) feature monitors the usage of specific components in the instrument, and provides feedback when the user-selectable limits have been exceeded. The visual feedback in the user interface provides an indication that maintenance procedures should be scheduled.

EMF Counters

EMF counters increment with use and can be assigned a maximum limit which provides visual feedback in the user interface when the limit is exceeded. Some counters can be reset to zero after the required maintenance procedure.

Using the EMF Counters

The user-settable **EMF** limits for the **EMF Counters** enable the early maintenance feedback to be adapted to specific user requirements. The useful maintenance cycle is dependent on the requirements for use. Therefore, the definition of the maximum limits need to be determined based on the specific operating conditions of the instrument.

Setting the EMF Limits

The setting of the **EMF** limits must be optimized over one or two maintenance cycles. Initially the default **EMF** limits should be set. When instrument performance indicates maintenance is necessary, take note of the values displayed by the **EMF counters**. Enter these values (or values slightly less than the displayed values) as **EMF** limits, and then reset the **EMF counters** to zero. The next time the **EMF counters** exceed the new **EMF** limits, the **EMF** flag will be displayed, providing a reminder that maintenance needs to be scheduled.

Instrument Layout

The industrial design of the module incorporates several innovative features. It uses Agilent's E-PAC concept for the packaging of electronics and mechanical assemblies. This concept is based upon the use of expanded polypropylene (EPP) layers of foam plastic spacers in which the mechanical and electronic boards components of the module are placed. This pack is then housed in a metal inner cabinet which is enclosed by a plastic external cabinet. The advantages of this packaging technology are:

- virtual elimination of fixing screws, bolts or ties, reducing the number of components and increasing the speed of assembly/disassembly,
- the plastic layers have air channels molded into them so that cooling air can be guided exactly to the required locations,
- the plastic layers help cushion the electronic and mechanical parts from physical shock, and
- the metal inner cabinet shields the internal electronics from electromagnetic interference and also helps to reduce or eliminate radio frequency emissions from the instrument itself.

Electrical Connections

- The CAN bus is a serial bus with high speed data transfer. The two connectors for the CAN bus are used for internal module data transfer and synchronization.
- One analog output provides signals for integrators or data handling systems.
- The interface board slot is used for external contacts and BCD bottle number output or LAN connections.
- The REMOTE connector may be used in combination with other analytical instruments from Agilent Technologies if you want to use features such as start, stop, common shut down, prepare, and so on.
- With the appropriate software, the RS-232C connector may be used to control the module from a computer through a RS-232C connection. This connector is activated and can be configured with the configuration switch.
- The power input socket accepts a line voltage of 100 – 240 VAC ± 10 % with a line frequency of 50 or 60 Hz. Maximum power consumption varies by module. There is no voltage selector on your module because the power supply has wide-ranging capability. There are no externally accessible fuses, because automatic electronic fuses are implemented in the power supply.

NOTE Never use cables other than the ones supplied by Agilent Technologies to ensure proper functionality and compliance with safety or EMC regulations.

Serial Number Information (ALL)

The serial number information on the instrument labels provide the following information:

CCXZZ00000	Format
CC	Country of manufacturing (DE Germany)
X	Alphabetic character A-Z (used by manufacturing)
ZZ	Alpha-numeric code 0-9, A-Z, where each combination unambiguously denotes a module (there can be more than one code for the same module)
00000	Serial number

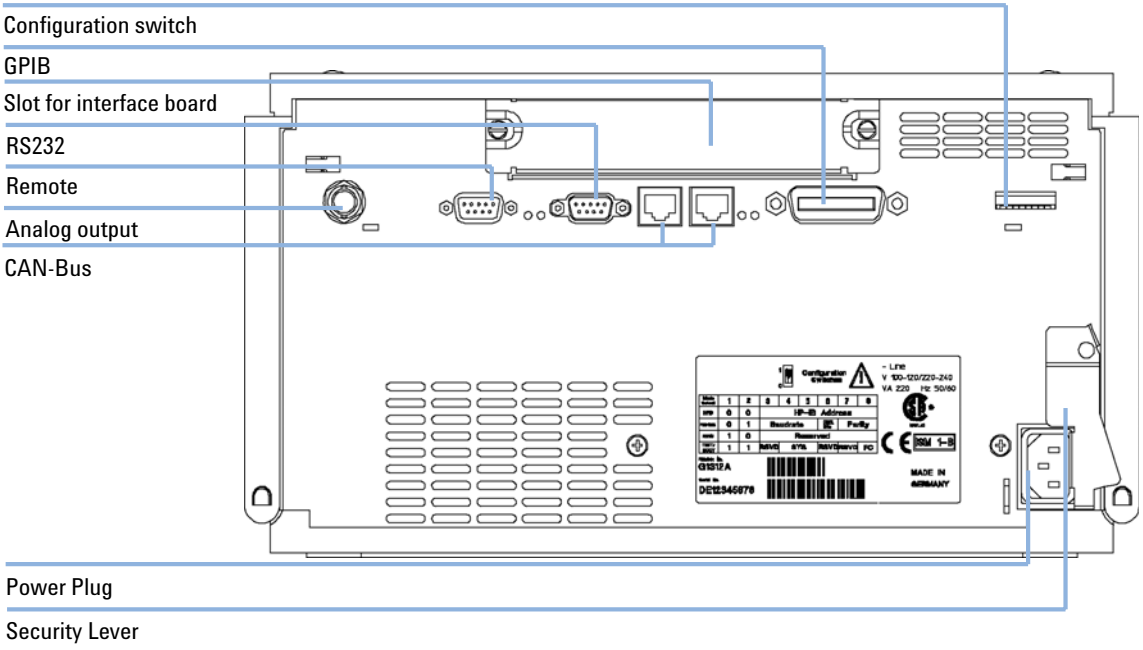

Figure 4 Rear View of Binary Pump - Electrical Connections and Label

Interfaces

The Agilent 1200 Infinity Series modules provide the following interfaces:

Table 2 Agilent 1200 Infinity Series Interfaces

Module	CAN	LAN/BCD (optional)	LAN (on-board)	RS-232	Analog	APG Remote	Special
Pumps							
G1310B Iso Pump G1311B Quat Pump G1311C Quat Pump VL G1312B Bin Pump G1312C Bin Pump VL 1376A Cap Pump G2226A Nano Pump	2	Yes	No	Yes	1	Yes	
G4220A/B Bin Pump	2	No	Yes	Yes	No	Yes	
G1361A Prep Pump	2	Yes	No	Yes	No	Yes	CAN-DC- OUT for CAN slaves
Samplers							
G1329B ALS G2260A Prep ALS	2	Yes	No	Yes	No	Yes	THERMOSTAT for G1330B
G1364B FC-PS G1364C FC-AS G1364D FC-µS G1367E HiP ALS G1377A HiP micro ALS G2258A DL ALS	2	Yes	No	Yes	No	Yes	THERMOSTAT for G1330B CAN-DC- OUT for CAN slaves
G4226A ALS	2	Yes	No	Yes	No	Yes	
Detectors							
G1314B VWD VL G1314C VWD VL+	2	Yes	No	Yes	1	Yes	
G1314E/F VWD	2	No	Yes	Yes	1	Yes	

Table 2 Agilent 1200 Infinity Series Interfaces

Module	CAN	LAN/BCD (optional)	LAN (on-board)	RS-232	Analog	APG Remote	Special
G4212A/B DAD	2	No	Yes	Yes	1	Yes	
G1315C DAD VL+ G1365C MWD G1315D DAD VL G1365D MWD VL	2	No	Yes	Yes	2	Yes	
G1321B FLD G1362A RID	2	Yes	No	Yes	1	Yes	
G4280A ELSD	No	No	No	Yes	Yes	Yes	EXT Contact AUTOZERO
Others							
G1316A/C TCC	2	No	No	Yes	No	Yes	
G1322A DEG	No	No	No	No	No	Yes	AUX
G1379B DEG	No	No	No	Yes	No	No	AUX
G4227A Flex Cube	2	No	No	No	No	No	
G4240A CHIP CUBE	2	Yes	No	Yes	No	Yes	CAN-DC- OUT for CAN slaves THERMOSTAT for G1330A/B (NOT USED)

NOTE The detector (DAD/MWD/FLD/VWD/RID) is the preferred access point for control via LAN. The inter-module communication is done via CAN.

- CAN connectors as interface to other modules
- LAN connector as interface to the control software
- RS-232C as interface to a computer
- REMOTE connector as interface to other Agilent products
- Analog output connector(s) for signal output

Overview Interfaces

CAN

The CAN is inter-module communication interface. It is a 2-wire serial bus system supporting high speed data communication and real-time requirement.

LAN

The modules have either an interface slot for an LAN card (e.g. Agilent G1369A/B LAN Interface) or they have an on-board LAN interface (e.g. detectors G1315C/D DAD and G1365C/D MWD). This interface allows the control of the module/system via a connected PC with the appropriate control software.

NOTE If an Agilent detector (DAD/MWD/FLD/VWD/RID) is in the system, the LAN should be connected to the DAD/MWD/FLD/VWD/RID (due to higher data load). If no Agilent detector is part of the system, the LAN interface should be installed in the pump or autosampler.

RS-232C (Serial)

The RS-232C connector is used to control the module from a computer through RS-232C connection, using the appropriate software. This connector can be configured with the configuration switch module at the rear of the module. Refer to *Communication Settings for RS-232C*.

NOTE There is no configuration possible on main boards with on-board LAN. These are pre-configured for

- 19200 baud,
- 8 data bit with no parity and
- one start bit and one stop bit are always used (not selectable).

The RS-232C is designed as DCE (data communication equipment) with a 9-pin male SUB-D type connector. The pins are defined as:

Table 3 RS-232C Connection Table

Pin	Direction	Function
1	In	DCD
2	In	RxD
3	Out	TxD
4	Out	DTR
5		Ground
6	In	DSR
7	Out	RTS
8	In	CTS
9	In	RI

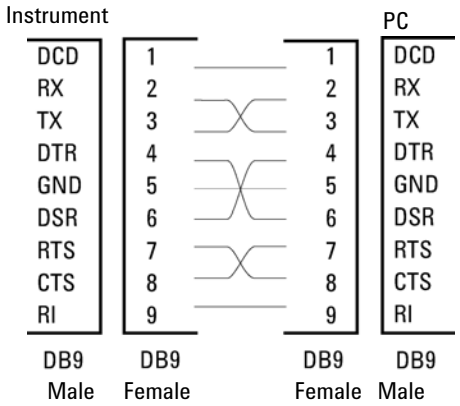

Figure 5 RS-232 Cable

Analog Signal Output

The analog signal output can be distributed to a recording device. For details refer to the description of the module's main board.

APG Remote

The APG Remote connector may be used in combination with other analytical instruments from Agilent Technologies if you want to use features as common shut down, prepare, and so on.

Remote control allows easy connection between single instruments or systems to ensure coordinated analysis with simple coupling requirements.

The subminiature D connector is used. The module provides one remote connector which is inputs/outputs (wired- or technique).

To provide maximum safety within a distributed analysis system, one line is dedicated to **SHUT DOWN** the system's critical parts in case any module detects a serious problem. To detect whether all participating modules are switched on or properly powered, one line is defined to summarize the **POWER ON** state of all connected modules. Control of analysis is maintained by signal readiness **READY** for next analysis, followed by **START** of run and optional **STOP** of run triggered on the respective lines. In addition **PREPARE** and **START REQUEST** may be issued. The signal levels are defined as:

- standard TTL levels (0 V is logic true, + 5.0 V is false),
- fan-out is 10,
- input load is 2.2 kOhm against + 5.0 V, and
- output are open collector type, inputs/outputs (wired- or technique).

NOTE All common TTL circuits operate with a 5 V power supply. A TTL signal is defined as "low" or L when between 0 V and 0.8 V and "high" or H when between 2.0 V and 5.0 V (with respect to the ground terminal).

Table 4 Remote Signal Distribution

Pin	Signal	Description
1	DGND	Digital ground
2	PREPARE	(L) Request to prepare for analysis (for example, calibration, detector lamp on). Receiver is any module performing pre-analysis activities.
3	START	(L) Request to start run / timetable. Receiver is any module performing run-time controlled activities.
4	SHUT DOWN	(L) System has serious problem (for example, leak: stops pump). Receiver is any module capable to reduce safety risk.
5		Not used
6	POWER ON	(H) All modules connected to system are switched on. Receiver is any module relying on operation of others.
7	READY	(H) System is ready for next analysis. Receiver is any sequence controller.
8	STOP	(L) Request to reach system ready state as soon as possible (for example, stop run, abort or finish and stop injection). Receiver is any module performing run-time controlled activities.
9	START REQUEST	(L) Request to start injection cycle (for example, by start key on any module). Receiver is the autosampler.

Special Interfaces

Some modules have module specific interfaces/connectors. They are described in the module documentation.

Setting the 8-bit Configuration Switch (On-Board LAN)

The 8-bit configuration switch is located at the rear of the module. Switch settings provide configuration parameters for LAN, serial communication protocol and instrument specific initialization procedures.

All modules with on-board LAN, e.g. G1315/65C/D, G1314D/E/F, G4212A/B, G4220A:

- Default is ALL switches DOWN (best settings) - Bootp mode for LAN.
- For specific LAN modes switches 3-8 must be set as required.
- For boot/test modes switches 1+2 must be UP plus required mode.

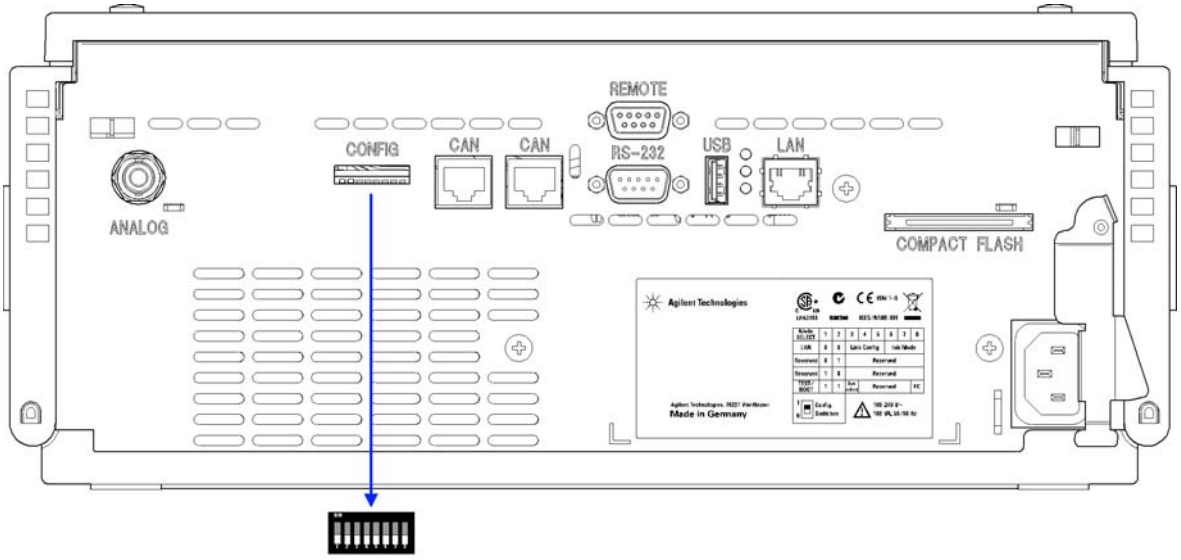

Figure 6 Location of Configuration Switch (example shows a G4212A DAD)

NOTE To perform any LAN configuration, SW1 and SW2 must be set to OFF. For details on the LAN settings/configuration refer to chapter LAN Configuration.

Table 5 8-bit Configuration Switch (with on-board LAN)

	Mode		Function					
	SW 1	SW 2	SW 3	SW 4	SW 5	SW 6	SW 7	SW 8
LAN	*0*	*0*	Link Configuration			Init Mode Selection		
Auto-negotiation			*0*	x	x	x	x	x
10 MBit, half-duplex			1	*0*	*0*	x	x	x
10 MBit, full-duplex			1	*0*	1	x	x	x
100 MBit, half-duplex			1	1	*0*	x	x	x
100 MBit, full-duplex			1	1	1	x	x	x
Bootp			x	x	x	*0*	*0*	*0*
Bootp & Store			x	x	x	*0*	*0*	1
Using Stored			x	x	x	*0*	1	*0*
Using Default			x	x	x	*0*	1	1
TEST	1	1	System					NVRAM
Boot Resident System			1					x
Revert to Default Data (Coldstart)			x	x	x			1

Legend:

0 (switch down), 1 (switch up), x (any position)

NOTE When selecting the mode TEST, the LAN settings are: Auto-Negotiation & Using Stored.

NOTE For explanation of "Boot Resident System" and "Revert to Default Data (Coldstart)" refer to "Special Settings" on page 29.

Setting the 8-bit Configuration Switch (without On-Board LAN)

The 8-bit configuration switch is located at the rear of the module.

Modules that do not have their own LAN interface (e.g. the TCC) can be controlled through the LAN interface of another module and a CAN connection to that module.

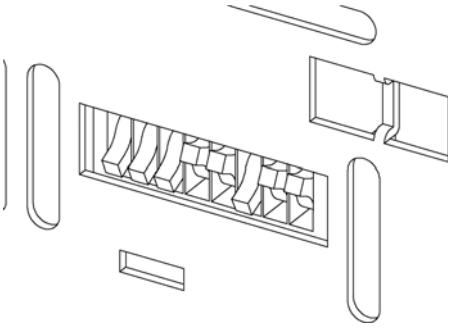

Figure 7 Configuration switch (settings depend on configured mode)

All modules without on-board LAN:

- default is ALL DIPS DOWN (best settings) - Bootp mode for LAN
- for boot/test modes DIPS 1+2 must be UP plus required mode

Switch settings provide configuration parameters for GPIB address, serial communication protocol and instrument specific initialization procedures.

NOTE With the introduction of the Agilent 1260 Infinity, all GPIB interfaces have been removed. The preferred communication is LAN.

NOTE The following tables represent the configuration switch settings for the modules without on-board LAN only.

Table 6 8-bit Configuration Switch (without on-board LAN)

Mode Select	1	2	3	4	5	6	7	8
RS-232C	0	1	Baudrate			Data Bits	Parity	
Reserved	1	0	Reserved					
TEST/BOOT	1	1	RSVD	SYS		RSVD	RSVD	FC

NOTE The LAN settings are done on the LAN Interface Card G1369A/B. Refer to the documentation provided with the card.

Communication Settings for RS-232C

The communication protocol used in the column compartment supports only hardware handshake (CTS/RTR).

Switches 1 in down and 2 in up position define that the RS-232C parameters will be changed. Once the change has been completed, the column instrument must be powered up again in order to store the values in the non-volatile memory.

Table 7 Communication Settings for RS-232C Communication (without on-board LAN)

Mode Select	1	2	3	4	5	6	7	8
RS-232C	0	1	Baudrate			Data Bits	Parity	

Use the following tables for selecting the setting which you want to use for RS-232C communication. The number 0 means that the switch is down and 1 means that the switch is up.

Table 8 Baudrate Settings (without on-board LAN)

Switches			Baud Rate	Switches			Baud Rate
3	**4**	**5**		**3**	**4**	**5**	
0	0	0	9600	1	0	0	9600
0	0	1	1200	1	0	1	14400
0	1	0	2400	1	1	0	19200
0	1	1	4800	1	1	1	38400

Table 9 Data Bit Settings (without on-board LAN)

Switch 6	Data Word Size
0	7 Bit Communication
1	8 Bit Communication

Table 10 Parity Settings (without on-board LAN)

Switches		Parity
7	8	
0	0	No Parity
1	0	Odd Parity
1	1	Even Parity

One start bit and one stop bit are always used (not selectable).

Per default, the module will turn into 19200 baud, 8 data bit with no parity.

Special Settings

The special settings are required for specific actions (normally in a service case).

NOTE The tables include both settings for modules – with on-board LAN and without on-board LAN. They are identified as LAN and no LAN.

Boot-Resident

Firmware update procedures may require this mode in case of firmware loading errors (main firmware part).

If you use the following switch settings and power the instrument up again, the instrument firmware stays in the resident mode. It is not operable as a module. It only uses basic functions of the operating system for example, for communication. In this mode the main firmware can be loaded (using update utilities).

Table 11 Boot Resident Settings (without on-board LAN)

	Mode Select	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
LAN	TEST/BOOT	1	1	1	0	0	0	0	0
No LAN	TEST/BOOT	1	1	0	0	1	0	0	0

Forced Cold Start

A forced cold start can be used to bring the module into a defined mode with default parameter settings.

CAUTION Loss of data

Forced cold start erases all methods and data stored in the non-volatile memory. Exceptions are diagnosis and repair log books which will not be erased.

➔ Save your methods and data before executing a forced cold start.

If you use the following switch settings and power the instrument up again, a forced cold start has been completed.

Table 12 Forced Cold Start Settings (without on-board LAN)

	Mode Select	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
LAN	TEST/BOOT	1	1	0	0	0	0	0	1
No LAN	TEST/BOOT	1	1	0	0	1	0	0	1

2
Site Requirements and Specifications

Site Requirements 32
Physical Specifications 35
Performance Specifications 36

This chapter provides information on environmental requirements, physical and performance specifications.

Site Requirements

A suitable environment is important to ensure optimal performance of the instrument.

Power Considerations

The module power supply has wide ranging capability. It accepts any line voltage in the range described in Table 13 on page 35. Consequently there is no voltage selector in the rear of the module. There are also no externally accessible fuses, because automatic electronic fuses are implemented in the power supply.

WARNING

Hazard of electrical shock or damage of your instrumentation

can result, if the devices are connected to a line voltage higher than specified.

➔ Connect your instrument to the specified line voltage only.

WARNING

Module is partially energized when switched off, as long as the power cord is plugged in.

Repair work at the module can lead to personal injuries, e.g. electrical shock, when the cover is opened and the module is connected to power.

➔ Always unplug the power cable before opening the cover.

➔ Do not connect the power cable to the instrument while the covers are removed.

CAUTION

Unaccessable power plug.

In case of emergency it must be possible to disconnect the instrument from the power line at any time.

➔ Make sure the power connector of the instrument can be easily reached and unplugged.

➔ Provide sufficient space behind the power socket of the instrument to unplug the cable.

Power Cords

Different power cords are offered as options with the module. The female end of all power cords is identical. It plugs into the power-input socket at the rear. The male end of each power cord is different and designed to match the wall socket of a particular country or region.

WARNING

Absence of ground connection or use of unspecified power cord

The absence of ground connection or the use of unspecified power cord can lead to electric shock or short circuit.

➔ Never operate your instrumentation from a power outlet that has no ground connection.

➔ Never use a power cord other than the Agilent Technologies power cord designed for your region.

WARNING

Use of unsupplied cables

Using cables not supplied by Agilent Technologies can lead to damage of the electronic components or personal injury.

➔ Never use cables other than the ones supplied by Agilent Technologies to ensure proper functionality and compliance with safety or EMC regulations.

WARNING

Unintended use of supplied power cords

Using power cords for unintended purposes can lead to personal injury or damage of electronic equipment.

➔ Never use the power cords that Agilent Technologies supplies with this instrument for any other equipment.

Bench Space

The module dimensions and weight (see Table 13 on page 35) allow you to place the module on almost any desk or laboratory bench. It needs an additional 2.5 cm (1.0 inches) of space on either side and approximately 8 cm (3.1 inches) in the rear for air circulation and electric connections.

If the bench should carry an Agilent system, make sure that the bench is designed to bear the weight of all modules.

The module should be operated in a horizontal position.

Condensation

CAUTION

Condensation within the module

Condensation will damage the system electronics.

➔ Do not store, ship or use your module under conditions where temperature fluctuations could cause condensation within the module.

➔ If your module was shipped in cold weather, leave it in its box and allow it to warm slowly to room temperature to avoid condensation.

Physical Specifications

Table 13 Physical Specifications

Type	Specification	Comments
Weight	15.5 kg (34 lbs)	
Dimensions (height × width × depth)	180 x 345 x 435 mm (7 x 13.5 x 17 inches)	
Line voltage	100 – 240 VAC, ± 10%	Wide-ranging capability
Line frequency	50 or 60 Hz, ± 5%	
Power consumption	220 VA, 74 W / 253 BTU	Maximum
Ambient operating temperature	4–55 °C (41–131 °F)	
Ambient non-operating temperature	-40–70 °C (-4–158 °F)	
Humidity	< 95%, at 25–40 °C (77–104 °F)	Non-condensing
Operating Altitude	Up to 2000 m (6562 ft)	
Non-operating altitude	Up to 4600 m (15091 ft)	For storing the module
Safety standards: IEC, CSA, UL	Installation Category II, Pollution Degree 2	For indoor use only.

Performance Specifications

Table 14 Performance Specification Agilent 1260 Infinity Binary Pump VL (G1312C)

Type	Specification	Comments
Hydraulic system	Dual piston in series pump with proprietary servo-controlled variable stroke drive, floating pistons	
Setable flow range	Setpoints 0.001 – 5 mL/min, in 0.001 mL/min increments	
Flow range	0.1 – 5.0 mL/min	
Flow precision	< 0.07 % RSD, or < 0.02 min SD whatever is greater, based on retention time at constant room temperature	
Flow accuracy	±1 % or 10 µL/min whatever is greater, pumping degassed H_2O at 10 MPa	
Pressure	Operating range 0 – 40 MPa (0 – 400 bar, 0 – 5880 psi) up to 5 mL/min	
Pressure pulsation	< 2 % amplitude (typically < 1.3 %), or < 3 bar at 1 mL/min isopropanol, at all pressures > 10 bar (147 psi)	
Compressibility compensation	User-selectable, based on mobile phase compressibility	
Recommended pH range	1.0 – 12.5 , solvents with pH < 2.3 should not contain acids which attack stainless steel	
Gradient formation	High-pressure binary mixing	

Table 14 Performance Specification Agilent 1260 Infinity Binary Pump VL (G1312C)

Delay volume	180 – 480 µL without mixer, 600 – 900 µL with mixer,both dependent on back pressure	
Composition range	settable range: 0 – 100 % recommended range: 1 – 99 % or 5 µL/min per channel, whatever is greater	
Composition precision	< 0.5 % absolute	
Composition accuracy	± 0.5 % abs, at 1 mL/min	(water/caffeine tracer)
Control and data evaluation	Agilent ChemStation for LC	
Analog output	For pressure monitoring, 2 mV/bar, one output	
Communications	Controller-area network (CAN), RS-232C, APG Remote: ready, start, stop and shut-down signals, LAN optional	

NOTE For use with flow rates below 500 µL/min a vacuum degasser is required.

3 Installing the Pump

Unpacking the Binary Pump 40
Damaged Packaging 40
Delivery Checklist 40
Optimizing the Stack Configuration 43
One Stack Configuration 43
Two Stack Configuration 46
Installing the Binary Pump 48
Connecting Modules and Control Software 51
Connecting Agilent 1260 Infinity Modules 51
Connecting an Agilent 1260 Infinity Vacuum Degasser 52
Connecting Control Software and/or G4208 A Instant Pilot 53
Flow Connections of the Binary Pump with Solvent Selection Valve 54
Flow Connections of the Binary Pump Without Solvent Selection Valve 57
Priming and Purging the System 60
Priming with a Syringe 60
Priming with the Pump 62

This chapter gives information about the preferred stack setup for your system and the installation of your module.

Unpacking the Binary Pump

Damaged Packaging

If the delivery packaging shows signs of external damage, please call your Agilent Technologies sales and service office immediately. Inform your service representative that the instrument may have been damaged during shipment.

CAUTION

"Defective on arrival" problems

If there are signs of damage, please do not attempt to install the module. Inspection by Agilent is required to evaluate if the instrument is in good condition or damaged.

➔ Notify your Agilent sales and service office about the damage.

➔ An Agilent service representative will inspect the instrument at your site and initiate appropriate actions.

Delivery Checklist

Delivery Checklist

Ensure all parts and materials have been delivered with the binary pump. The delivery checklist is shown in Table 15 on page 40. In order to identify parts, you may refer to "Parts and Materials" on page 172. Please report missing or damaged parts to your local Agilent Technologies sales and service office.

Table 15 Binary Pump Checklist

Description	Quantity
Binary Pump	1
Solvent cabinet (p/n 5062-8591)	1

Table 15 Binary Pump Checklist

Description	Quantity
Solvent bottle, amber (p/n 9301-1450), Solvent bottle, transparent (p/n 9301-1420)	2 or 4[1]
Bottle-head assembly (p/n G1311-60003)	2 or 4[1]
Waste tube, purge valve, 5 m (p/n 5042-2461)	1
Power cord	1
CAN cable, Agilent module to module, 1 m (p/n 5181-1519)	1
Remote cable	As ordered
Signal cable	As ordered
Service Manual	1
Accessory Kit (p/n G1312-68765)	1

[1] if the binary pump is equipped with a solvent selection valve

Accessory Kit

Accessory Kit (p/n G1312-68755)

p/n	Description
0890-1195	Drain tube
5063-6527	Tubing assembly, i.d. 6 mm, o.d. 9 mm, 1.2 m (to waste)
5181-1519	CAN cable, Agilent module to module, 1 m
5988-8453EN	Capillary/fitting starter kit brochure
9222-0519	Bag, plastic
G1312-87303	SS Capillary 400 x 0.17 mm, m/m, ps/ps
G1312-87304	SST capillary 700 mm, 0.17 mm i.d., 1/32 - 1/32
01200-60001	RRLC system configurator A.01.01 CD-ROM
G1311-90107	Algae note
5042-9954 (4x)	Tubing clip (2x), re-order 4/pk
G1311-60003 (2x)	Bottle-head assembly

Optimizing the Stack Configuration

If your module is part of a complete Agilent 1260 Infinity Liquid Chromatograph, you can ensure optimum performance by installing the following configurations. These configurations optimize the system flow path, ensuring minimum delay volume.

One Stack Configuration

Ensure optimum performance by installing the modules of the Agilent 1260 Infinity LC System in the following configuration (See Figure 8 on page 44 and Figure 9 on page 45). This configuration optimizes the flow path for minimum delay volume and minimizes the bench space required.

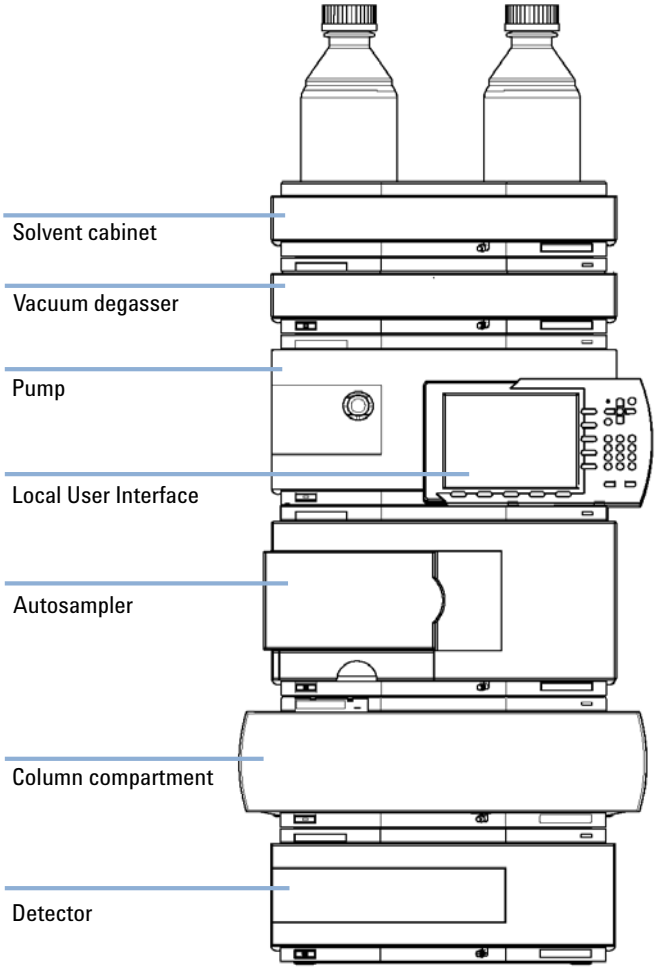

Figure 8 Recommended Stack Configuration for 1260 (Front View)

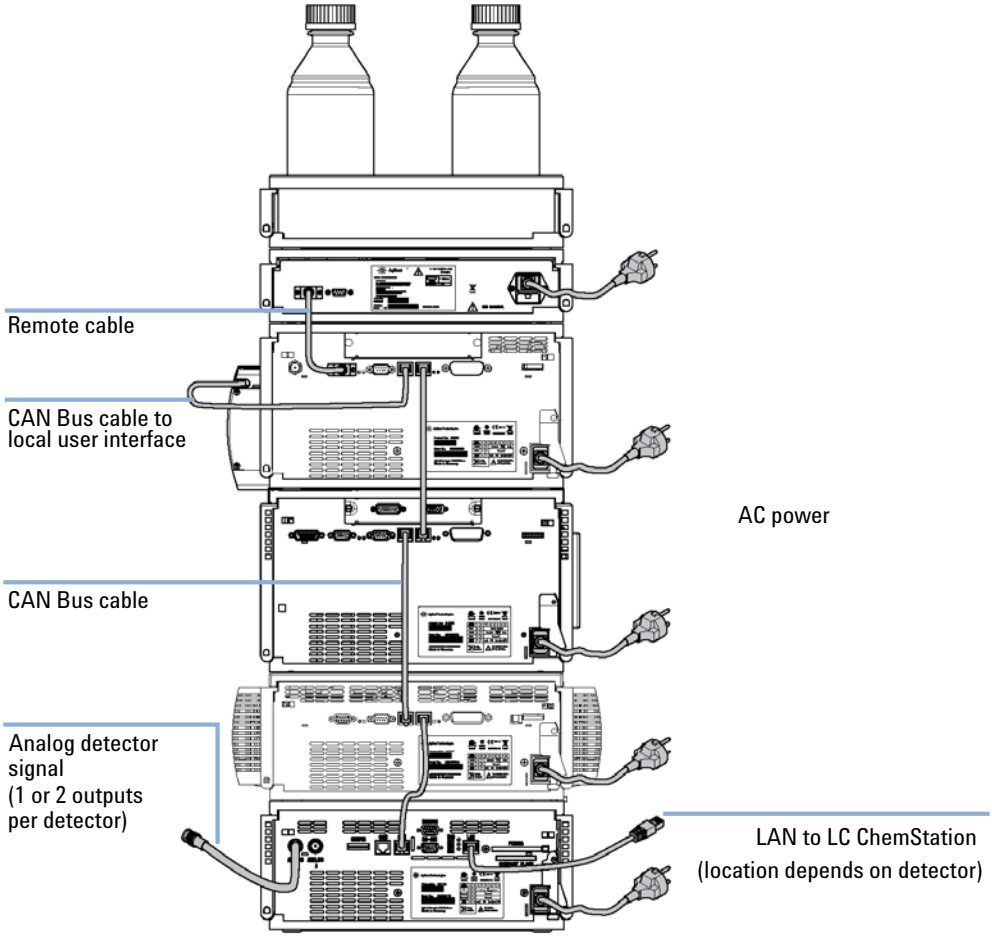
Remote cable
CAN Bus cable to local user interface
CAN Bus cable
Analog detector signal (1 or 2 outputs per detector)
AC power
LAN to LC ChemStation (location depends on detector)

Figure 9 Recommended Stack Configuration for 1260 (Rear View)

Two Stack Configuration

To avoid excessive height of the stack when the autosampler thermostat is added to the system it is recommended to form two stacks. Some users prefer the lower height of this arrangement even without the autosampler thermostat. A slightly longer capillary is required between the pump and autosampler. (See Figure 10 on page 46 and Figure 11 on page 47).

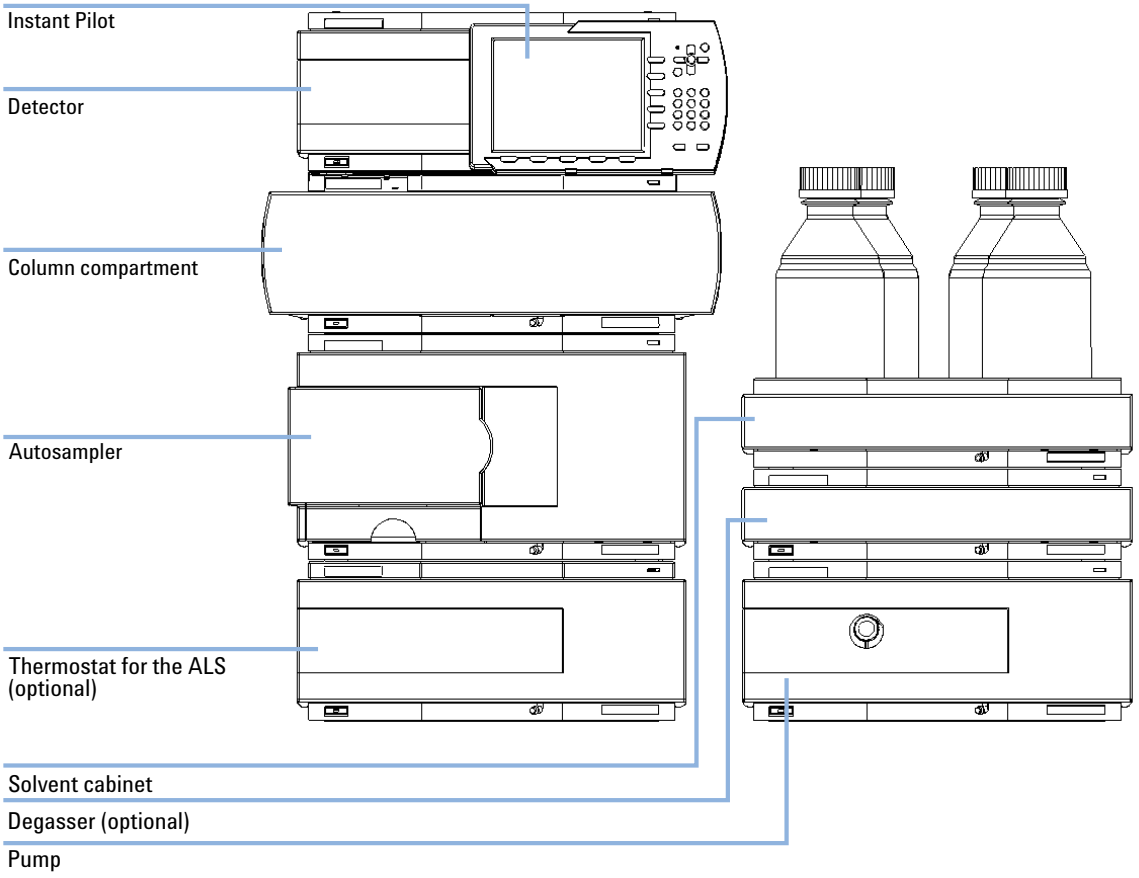

Figure 10 Recommended Two Stack Configuration for 1260 (Front View)

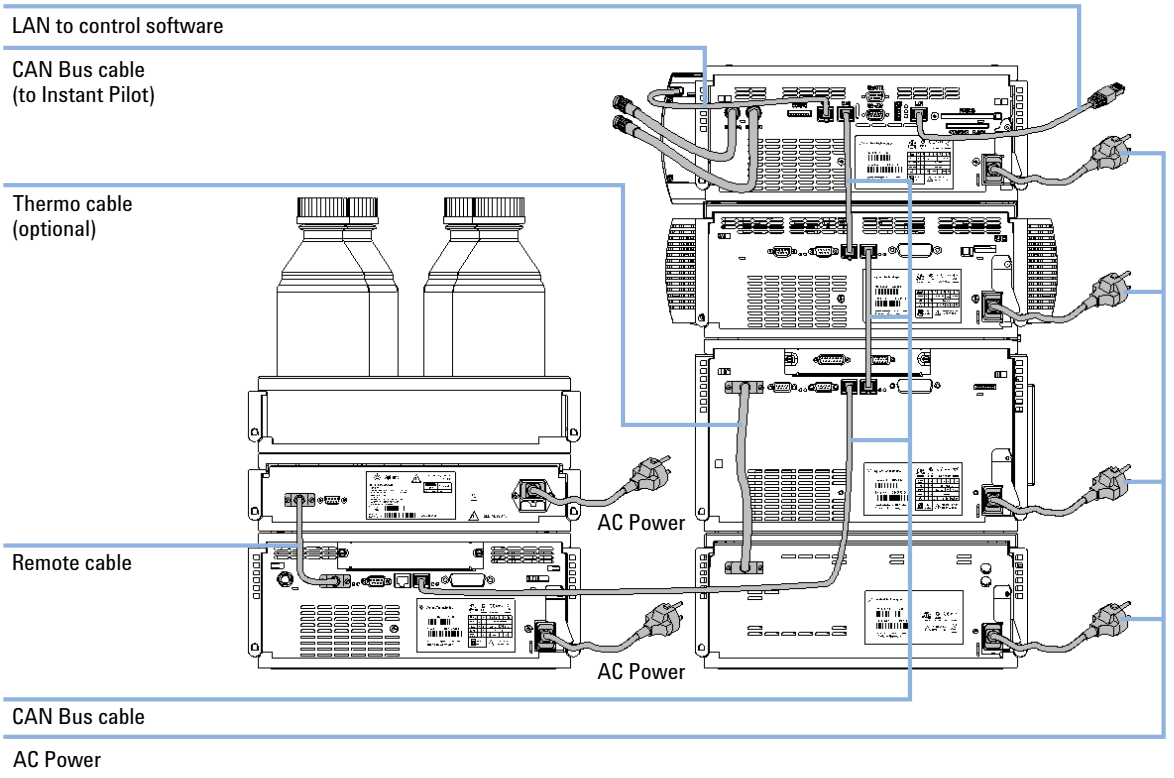

Figure 11 Recommended Two Stack Configuration for 1260 (Rear View)

Installing the Binary Pump

Parts required

#	p/n	Description
1		Pump
1		Data System
1	G4208A	Instant Pilot
1		Power cord

For other cables see text below and "Cable Overview" on page 192.

Preparations

- Locate bench space.
- Provide power connections.
- Unpack the module.

WARNING

Module is partially energized when switched off, as long as the power cord is plugged in.

Repair work at the module can lead to personal injuries, e.g. shock hazard, when the cover is opened and the module is connected to power.

➔ Make sure that it is always possible to access the power plug.

➔ Remove the power cable from the instrument before opening the cover.

➔ Do not connect the power cable to the Instrument while the covers are removed.

CAUTION

"Defective on arrival" problems

If there are signs of damage, please do not attempt to install the module. Inspection by Agilent is required to evaluate if the instrument is in good condition or damaged.

➔ Notify your Agilent sales and service office about the damage.

➔ An Agilent service representative will inspect the instrument at your site and initiate appropriate actions.

1 Place the module on the bench in a horizontal position.

2 Ensure the power switches on the front of the modules are OFF (switches stand out).

3 At the rear of the binary pump move the security lever to its maximum right position.

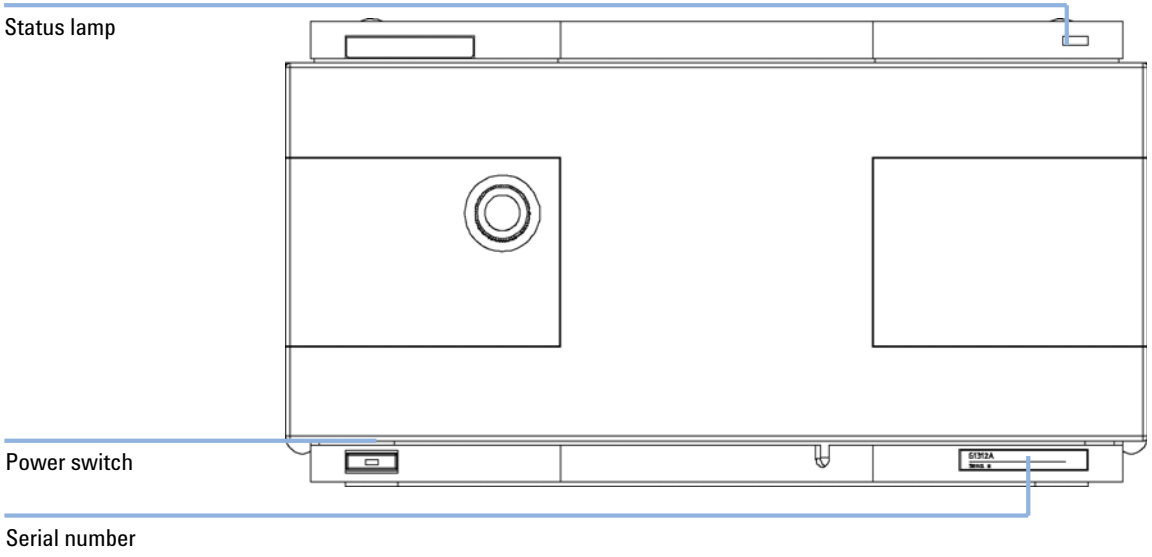

Figure 12 Front of Binary Pump

4 Connect the power cable to the power connector at the rear of the module.

The security lever will prevent that the cover is opened while the power cord is connected to the module.

5 Connect the required interface cables to the rear of the binary pump, see "Connecting Modules and Control Software" on page 51.

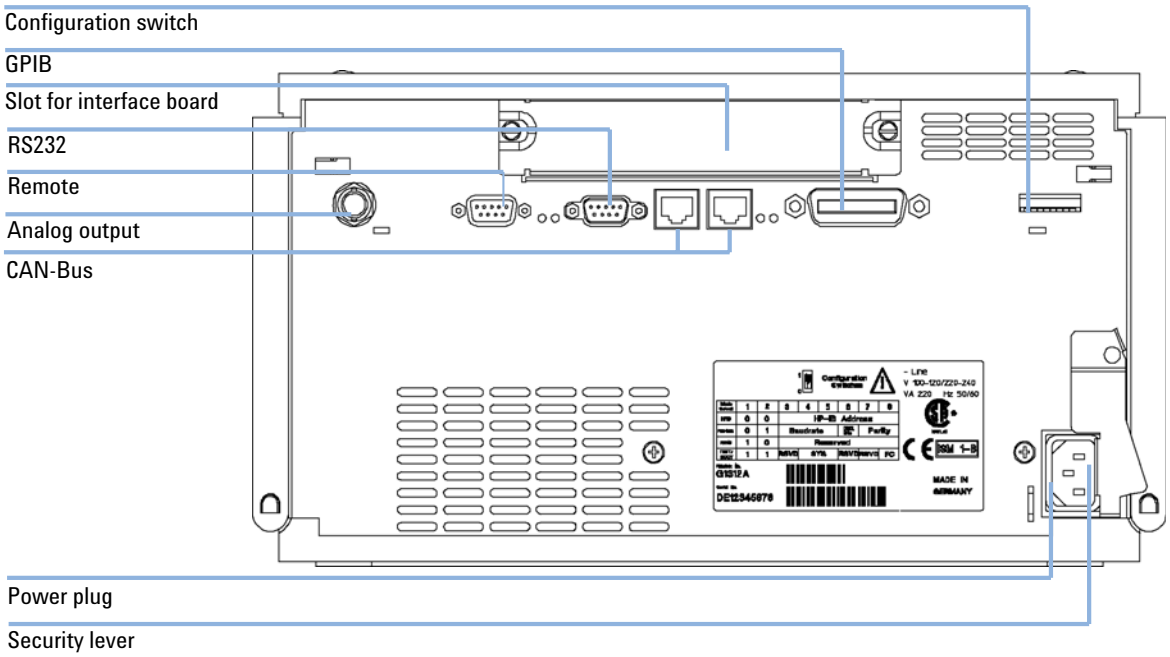

Figure 13 Rear of Binary Pump

6 Connect the capillary, solvent tubes and waste tubings (see "Flow Connections of the Binary Pump with Solvent Selection Valve" on page 54 or "Flow Connections of the Binary Pump Without Solvent Selection Valve" on page 57).

7 Press the power switch to turn on the module.

NOTE The power switch stays pressed in and a green indicator lamp in the power switch is on when the module is turned on. When the line power switch stands out and the green light is off, the module is turned off.

8 Purge the binary pump (see "Priming and Purging the System" on page 60).

NOTE The pump was shipped with default configuration settings. To change these settings, see "Setting the 8-bit Configuration Switch (without On-Board LAN)" on page 26.

Connecting Modules and Control Software

WARNING

Use of unsupplied cables

Using cables not supplied by Agilent Technologies can lead to damage of the electronic components or personal injury.

➔ Never use cables other than the ones supplied by Agilent Technologies to ensure proper functionality and compliance with safety or EMC regulations.

Connecting Agilent 1260 Infinity Modules

1. Place the individual modules in a stack configuration as shown in Figure 8 on page 44.
2. Ensure the power switches on the front of the modules are OFF (switches stand out).
3. Plug a CAN cable into the CAN connector at the rear of the respective module (except vacuum degasser).
4. Connect the CAN cable to the CAN connector of the next module, see Figure 9 on page 45.
5. Press in the power switches to turn on the modules.

Connecting an Agilent 1260 Infinity Vacuum Degasser

1. Place the vacuum degasser in the stack of modules as shown in Figure 8 on page 44.
2. Ensure the power switch at the front of the vacuum degasser is OFF (switch stands out).
3. Plug an APG cable into the APG remote connector at the rear of the degasser.
4. Connect the APG cable to the APG remote connector of the pump, see Figure 9 on page 45.
5. Press in the power switch to turn on the vacuum degasser.

NOTE The AUX output is intended for troubleshooting. It provides a DC voltage in the range of 0 – 1 V which is proportional to the vacuum level in the degasser chambers.

Connecting Control Software and/or G4208 A Instant Pilot

NOTE With the introduction of the Agilent 1260 Infinity, all GPIB interfaces have been removed. The preferred communication is LAN.

NOTE Usually the detector is producing the most data in the stack, followed by the pump, and it is therefore highly recommended to use either of these modules for the LAN connection.

1. Ensure the power switches on the front of the modules in the stack are OFF (switches stand out).
2. If there are no other 1260 with LAN port in the HPLC stack, install a G1369B LAN board into the extension slot of the pump.
3. Connect the LAN enabled module with a LAN cable to the data system.
4. Plug the CAN connector of the Instant Pilot into any available CAN port of the 1260 system.
5. Plug a CAN cable into the CAN connector of the Instant Pilot.

NOTE The Standard Degasser must not be connected to LAN or CAN as its connector is for diagnostic use only.

6. Connect the CAN cable to the CAN connector of one of the modules.
7. Press in the power switches to turn on the modules.

NOTE The Agilent control software can also be connected to the system through a LAN cable, which requires the installation of a LAN-board. For more information about connecting the Instant Pilot or Agilent control software refer to the respective user manual. For connecting the Agilent 1260 Infinity equipment to non-Agilent 1260 Infinity equipment, see "Introduction to the Binary Pump" on page 8.

Flow Connections of the Binary Pump with Solvent Selection Valve

Parts required	#	p/n	Description
	1		Other modules
	1	G1311-68705	Accessory Kit
	2		wrenches 1/4 - 5/16 inch for capillary connections

Preparations Pump is installed in the LC system

WARNING

When opening capillary or tube fittings solvents may leak out.

The handling of toxic and hazardous solvents and reagents can bear health risks.

➔ Please observe appropriate safety procedures (for example, goggles, safety gloves and protective clothing) as described in the material handling and safety data sheet supplied by the solvent vendor, especially when toxic or hazardous solvents are used.

---

1 Remove the front cover by pressing the snap fasteners on both sides.

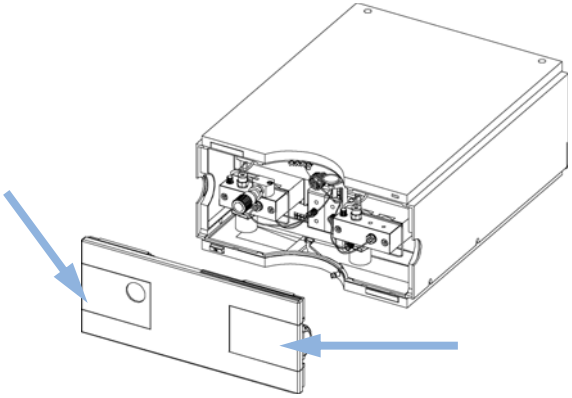

Figure 14 Removing the Front Cover

2 Place the solvent cabinet on top of the binary pump.

3 Place the bottles into the solvent cabinet and place a bottle head assembly into each bottle.

4 Connect the solvent tubes from the bottle head assemblies to the inlet connectors A1, A2, B1 and B2 of the solvent selection valve and label the tubes accordingly. Fix the tubes in the clips of solvent cabinet and binary pump.

5 Using a piece of sanding paper, connect the waste tubing to the purge valve and place it into your waste system.

6 If the binary pump is not part of an Agilent 1260 Infinity system stack or placed on the bottom of a stack, connect the corrugated waste tube to the waste outlet of the pump leak handling system.

7 Connect the outlet capillary (binary pump to injection device) to the outlet of the purge valve.

8 Purge your system before first use (see "Priming and Purging the System" on page 60).

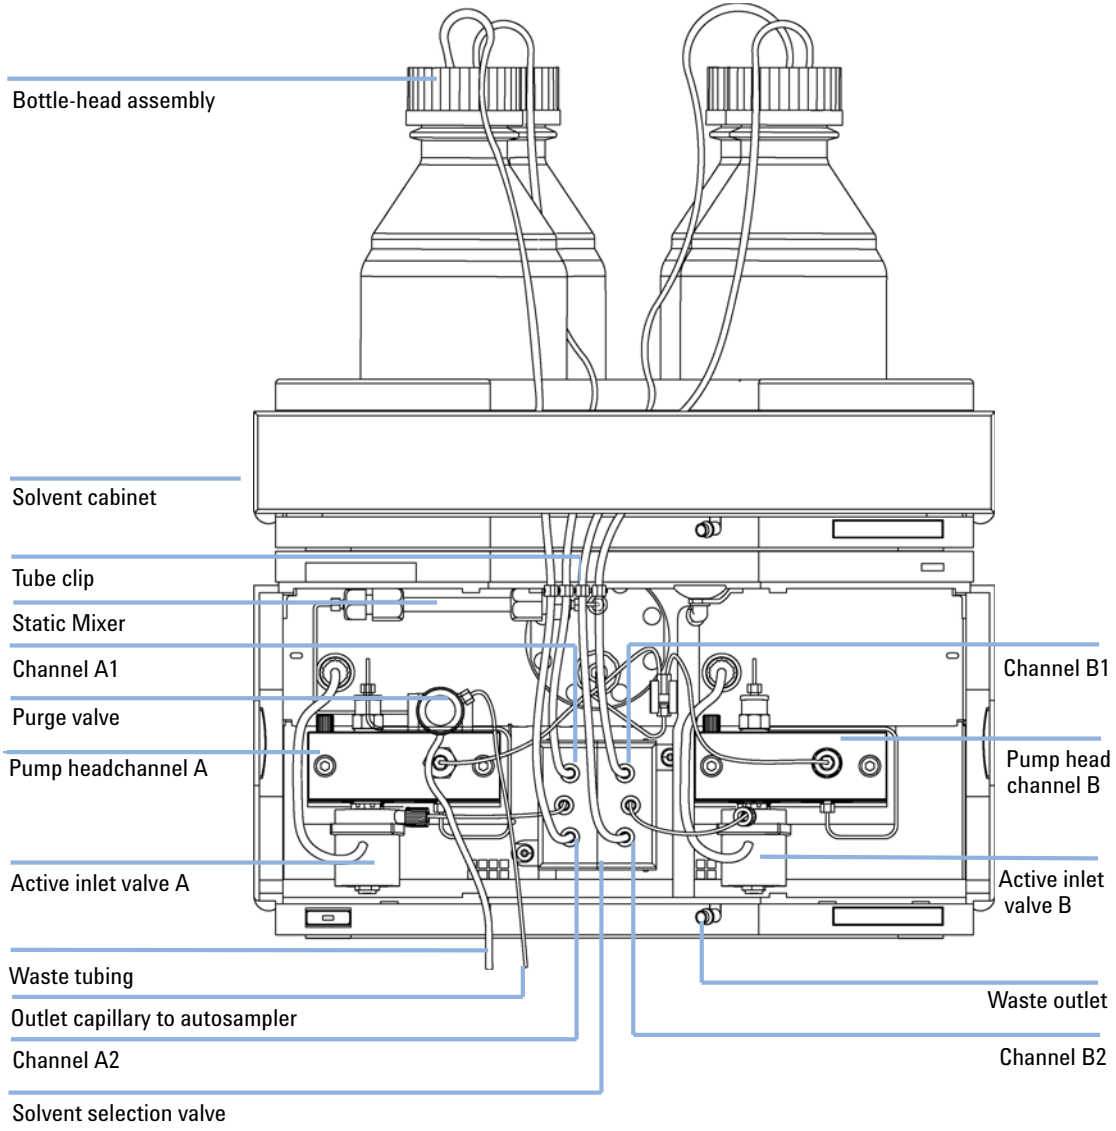

Figure 15 Binary Pump with Solvent Selection Valve

Flow Connections of the Binary Pump Without Solvent Selection Valve

Parts required	#	p/n	Description
	1		Other modules
	1	G1311-68705	Accessory Kit
	2		wrenches 1/4 - 5/16 inch for capillary connections

Preparations Pump is installed in the LC system

WARNING

When opening capillary or tube fittings solvents may leak out.

The handling of toxic and hazardous solvents and reagents can bear health risks.

➔ Please observe appropriate safety procedures (for example, goggles, safety gloves and protective clothing) as described in the material handling and safety data sheet supplied by the solvent vendor, especially when toxic or hazardous solvents are used.

1 Remove the front cover by pressing the snap fasteners on both sides.

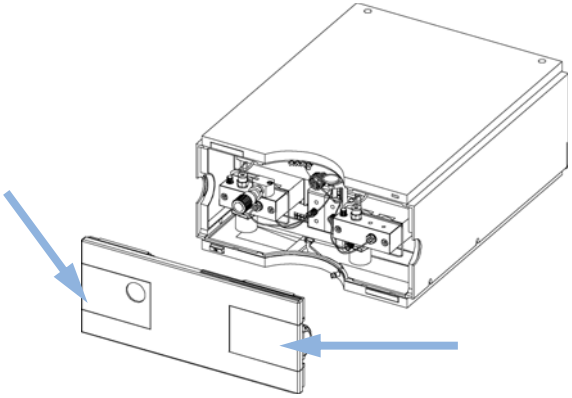

Figure 16 Removing the Front Cover

2 Place the solvent cabinet on top of the binary pump.

3 Place the bottles into the solvent cabinet and place a bottle head assembly into each bottle.

4 Connect the solvent tubes from the bottle head assemblies to the inlet adapters of the active inlet valves. Fix the tubes in the clips of solvent cabinet and binary pump.

5 Using a piece of sanding paper, connect the waste tubing to the purge valve and place it into your waste system.

6 If the binary pump is not part of an Agilent 1260 Infinity system stack or placed on the bottom of a stack, connect the corrugated waste tube to the waste outlet of the pump leak handling system.

7 Connect the outlet capillary (binary pump to injection device) to the outlet of the purge valve.

8 Purge your system before first use (see "Priming and Purging the System" on page 60).

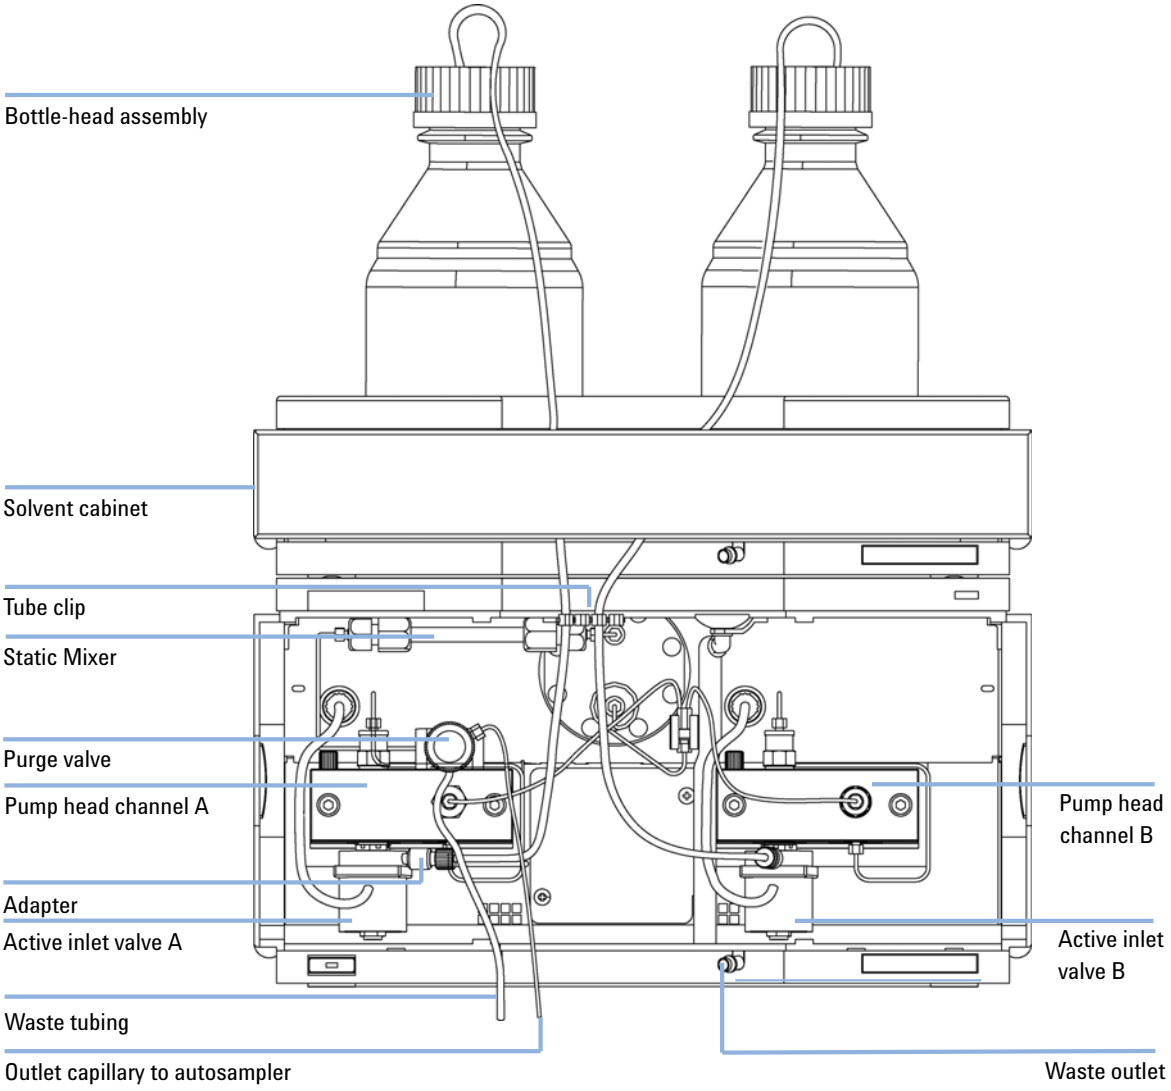

Figure 17 Flow Connection of Binary Pump Without Solvent Selection Valve

Priming and Purging the System

If a degasser is installed, it can be primed either by drawing solvent through the degasser with a syringe or by pumping with the pump.

Priming the vacuum degasser or system with a syringe is recommended, when:

- vacuum degasser or system is used for the first time, or vacuum tubes are empty, or
- changing to solvents that are immiscible with the solvent currently in the tubes.

Priming the system by using the pump at high flow rate (3–5 ml/min) is recommended, when:

- pumping system was turned off for a length of time (for example, overnight) and if volatile solvent mixtures are used, or
- solvents have been changed.

Priming with a Syringe

WARNING

When opening capillary or tube fittings solvents may leak out.

The handling of toxic and hazardous solvents and reagents can bear health risks.

➔ Please observe appropriate safety procedures (for example, goggles, safety gloves and protective clothing) as described in the material handling and safety data sheet supplied by the solvent vendor, especially when toxic or hazardous solvents are used.

Before using a new degasser or new tubings for the first time:

1 Prime all tubings with at least 30 ml of iso-propanol no matter whether the channels will be used with organic mobile phase or with water.

NOTE

If you are changing to a solvent that is immiscible with the solvent currently in the tubing continue as follows:

2 Replace the current solvent with adequate organic solvent (see Table 16 on page 62), if current solvent is organic or with water, if current solvent is an inorganic buffer or contains salt.

3 Disconnect solvent tube from your pump.

4 Connect syringe adapter to solvent tube.

5 Push syringe adapter onto syringe.

6 Slowly pull the syringe piston to draw at least 30 mL of solvent through degasser and tubing.

7 Replace the priming solvent with the new solvent of your choice.

8 Pull syringe piston to draw at least 30 mL of solvent through degasser and tubing.

9 Disconnect syringe adapter from solvent tube.

10 Connect solvent tube to your pump.

11 Repeat step 3 on page 61 through step 10 on page 61 for the other channel(s) of the binary pump.

NOTE When priming the vacuum degasser with a syringe the solvent is drawn through the degasser tubes very quickly. The solvent at the degasser outlet will therefore not be fully degassed. Pump for approximately 10 minutes with your selected flow rate before starting any application. This will allow the vacuum degasser to properly degas the solvent in the degasser tubes.

NOTE The pump should never be used for priming empty tubings (never let the pump run dry). Use the syringe to draw enough solvent for completely filling the tubings to the pump inlet before continueing to prime with the pump.

Priming with the Pump

When the pumping system has been turned off for a certain time (for example, overnight) oxygen will rediffuse into the solvent channel between the vacuum degasser and the pump. Solvents containing volatile ingredients will slightly lose these, if left in the degasser without flow for a prolonged period of time. Therefore priming of the vacuum degasser and the pumping system is required before starting an application.

1. Open the purge valve of your pump (by turning it counterclockwise) and set flow rate to 3-5 ml/min.
2. Flush the vacuum degasser and all tubes with at least 30 ml of solvent.
3. Set flow to required value of your application and close the purge valve.
4. Pump for approximately 10 minutes before starting your application.
5. Repeat step 1 on page 62 through step 4 on page 62 for the other channel(s) of the binary pump.
6. Close the purge valve and set the required composition and flow rate for your application.

Table 16 Choice of Priming Solvents for Different Purposes

Activity	Solvent	Comments
After an installation	Isopropanol	Best solvent to flush air out of the system
When switching between reverse phase and normal phase (both times)	Isopropanol	Best solvent to flush air out of the system
After an installation	Ethanol or Methanol	Alternative to Isopropanol (second choice) if no Isopropanol is available
To clean the system when using buffers	Bidistilled water	Best solvent to re-dissolve buffer cristals
After a solvent change	Bidistilled water	Best solvent to re-dissolve buffer cristals
After the installation of normal phase seals (P/N 0905-1420)	Hexane + 5% Isopropanol	Good wetting properties

4
Using the Binary Pump

Hints for Successful Use of the Binary Pump 64
Solvent Information 66
Prevent Blocking of Solvent Filters 67
Algae Growth in HPLC Systems 68
How to Prevent and/or Reduce the Algae Problem 69

This chapter provides information for optimized usage of the binary pump.

Hints for Successful Use of the Binary Pump

- Place solvent cabinet with the solvent bottles always on top (or at a higher level) of the binary pump.
- When using the binary pump without vacuum degasser, shortly degass your solvents (for example, apply vacuum for 15 – 30 s in an appropriate vessel) before using them in the binary pump. If possible apply solvent conditions that will decrease the gas solubility over time (for example, warming up the solvents).
- For highest precision and reproducibility use a vacuum degasser.
- When using the binary pump with vacuum degasser – before operating the binary pump flush the degasser with at least two degasser tubing volumes (30 mL), especially when the pumping system was turned off for a certain length of time (for example, overnight) and volatile solvent mixtures are used in the channels (see "Priming and Purging the System" on page 60).
- Prevent blocking of solvent inlet filters (never use the pump without solvent inlet filter). Growth of algae should be avoided (see "Prevent Blocking of Solvent Filters" on page 67).
- Check purge valve frit and column frit in regular time intervals. A blocked purge valve frit can be identified by black or yellow layers on its surface or by a pressure greater than 10 bar, when pumping distilled water at a rate of 5 mL/min with an open purge valve.
- When using the binary pump at low flow rates (below 0.2 mL/min) check all 1/16-inch fittings for any signs of leaks.
- Whenever possible use a minimum flow rate of 5 µL/min per solvent channel to avoid crossflow of solvent into the unused pump channel.
- Whenever exchanging the pump seals the purge valve frit and the outlet ball valve sieve should be exchanged, too.
- When using buffer solutions, flush the system with water before switching it off. The seal wash option should be used when buffer solutions of 0.1 M or higher will be used for long time periods.

- Check the pump pistons for scratches when changing the piston seals. Scratched pistons will lead to micro leaks and will decrease the lifetime of the seal.
- After changing the piston seals apply the seal wear-in procedure (see "Exchanging the Pump Seals" on page 143).
- Place the aqueous solvent on channel A and the organic solvent on channel B. The default compressibility settings are set accordingly.

Solvent Information

Always filter solvents through 0.4 µm filters, small particles can permanently block the capillaries and valves. Avoid the use of the following steel-corrosive solvents:

- Solutions of alkali halides and their respective acids (for example, lithium iodide, potassium chloride, and so on).
- High concentrations of inorganic acids like sulfuric and nitric acid, especially at higher temperatures (replace, if your chromatography method allows, by phosphoric acid or phosphate buffer which are less corrosive against stainless steel).
- Halogenated solvents or mixtures which form radicals and/or acids, for example:

  $2CHCl_3 + O_2 \rightarrow 2COCl_2 + 2HCl$

  This reaction, in which stainless steel probably acts as a catalyst, occurs quickly with dried chloroform if the drying process removes the stabilizing alcohol.
- Chromatographic grade ethers, which can contain peroxides (for example, THF, dioxane, di-isopropylether). Such ethers should be filtered through dry aluminium oxide which adsorbs the peroxides.
- Mixtures of carbon tetrachloride with 2-propanol or THF dissolve stainless steel.

Prevent Blocking of Solvent Filters

Contaminated solvents or algae growth in the solvent bottle will reduce the lifetime of the solvent filter and will influence the performance of the module. This is especially true for aqueous solvents or phosphate buffers (pH 4 to 7). The following suggestions will prolong lifetime of the solvent filter and will maintain the performance of the module.

- Use a sterile, if possible amber, solvent bottle to slow down algae growth.
- Filter solvents through filters or membranes that remove algae.
- Exchange solvents every two days or refilter.
- If the application permits add 0.0001-0.001M sodium azide to the solvent.
- Place a layer of argon on top of your solvent.
- Avoid exposure of the solvent bottle to direct sunlight.

NOTE Never use the system without solvent filter installed.

Algae Growth in HPLC Systems

The presence of algae in HPLC systems can cause a variety of problems that may be incorrectly diagnosed as instrument or application problems. Algae grow in aqueous media, preferably in a pH range of 4-8. Their growth is accelerated by buffers, for example phosphate or acetate. Since algae grow through photosynthesis, light will also stimulate their growth. Even in distilled water small-sized algae grow after some time.

Instrumental Problems Associated With Algae

Algae deposit and grow everywhere within the HPLC system causing:

- Deposits on ball valves, inlet or outlet, resulting in unstable flow or total failure of the pump.
- Small pore solvent inlet filters to plug, resulting in unstable flow or total failure of the pump.
- Small pore high pressure solvent filters, usually placed before the injector to plug resulting in high system pressure.
- Column filters to plug giving high system pressure.
- Flow cell windows of detectors to become dirty resulting in higher noise levels (since the detector is the last module in the flow path, this problem is less common).

Symptoms Observed with the Agilent 1260 Infinity HPLC

In contrast to the HP 1090 and HP 1050 Series HPLC systems which use helium degassing, algae have a better chance to grow in systems such as the Agilent 1260 Infinity where helium is not used for degassing (most algae need oxygen and light for growth).

The presence of algae in the Agilent 1260 Infinity can cause the following to occur:

- PTFE frits, PTFE frit (pack of 5) (p/n 01018-22707), (purge valve assembly) and column filter blockage causing increased system pressure. Algae appear as white or yellowish-white deposits on filters. Typically black particles from the normal wear of the piston seals do not cause the PTFE

frits to block over short-term usage. Please refer to the section "Exchanging the Purge Valve Frit or the Purge Valve" on page 137 in this manual.

- Short lifetime of solvent filters (bottle head assembly). A blocked solvent filter in the bottle, especially when only partly blocked, is more difficult to identify and may show up as gradient performance problems, intermittent pressure fluctuations etc.
- Algae growth may also be the possible source for failures of the ball valves and other components in the flow path.

How to Prevent and/or Reduce the Algae Problem

- Always use freshly prepared solvents, especially use demineralized water which was filtered through about 0.2 µm filters.
- Never leave mobile phase in the instrument for several days without flow.
- Always discard old mobile phase.
- Use the amber solvent bottle (Solvent bottle, amber (p/n 9301-1450)) supplied with the instrument for your aqueous mobile phase.
- If possible add a few mg/l sodium azide or a few percent organic solvent to the aqueous mobile phase.

5 Optimizing Performance

When to Use a Vacuum Degasser 72
When to Use the Seal Wash Option active seal wash 73
Choosing the Right Pump Seals 74
When to Remove the Static Mixer 75
How to Optimize the Compressibility Compensation Setting 76

This chapter gives hints on how to optimize the performance or use additional devices.

When to Use a Vacuum Degasser

The pump does not necessarily require degassing. But for the following conditions the vacuum degasser is recommended:

- if your detector is used with maximum sensitivity in the low UV wavelength range,
- if your application requires highest injection precision, or
- if your application requires highest retention-time reproducibility (mandatory at flow rates below 0.5 mL/min).

Operational Hints for the Vacuum Degasser

If you are using the vacuum degasser for the first time, if the vacuum degasser was switched off for any length of time (for example, overnight), or if the vacuum degasser lines are empty, you should prime the vacuum degasser before running an analysis.

The vacuum degasser can be primed either by drawing solvent through the degasser with a syringe or by pumping with the pump.

Priming the degasser with a syringe is recommended, when:

- vacuum degasser is used for the first time, or vacuum tubes are empty, or
- changing to solvents that are immiscible with the solvent currently in the vacuum tubes.

Priming the vacuum degasser by using the pump at high flow rate (3 – 5 mL/min) is recommended, when:

- pump was turned off for a length of time (for example, during night) and volatile solvent mixtures are used, or
- solvents have been changed.

For more information see the Agilent 1260 Infinity Standard Degasser User Manual (p/n G1322-90012).

When to Use the Seal Wash Option active seal wash

Highly concentrated buffer solutions will reduce the lifetime of the seals and pistons in your pump. The seal wash option allows to maintain the seal lifetime by flushing the back side of the seal with a wash solvent.

The seal wash option is strongly recommended when buffer concentrations of 0.1 M or higher will be used for long time periods in the pump.

The active seal wash upgrade can be ordered as G1398A.

The seal wash option comprises a support ring, secondary seal, gasket and seal holder for both piston sides. A wash bottle filled with water /isopropanol (90/10) is placed above the pump in the solvent cabinet and the peristaltic pump moves a flow through the pump head removing all possible buffer crystals from the back of the pump seal.

NOTE

Running dry is the worst case for a wash seal and drastically reduces its lifetime.

The seal will build up sticky layers on the surface of the piston. These sticky layers will also reduce the lifetime of the pump seal. Therefore the tubes of the wash option should always be filled with solvent to prolong the lifetime of the wash seal. Always use a mixture of LC grade water (90 %) and isopropanol (10 %) as wash solvent. This mixture prevents growth of algae or bacteria in the wash bottle and reduces the surface tension of the water.

For information on the installation of the active seal wash option refer to "Installing the Active Seal Wash Option" on page 160

Choosing the Right Pump Seals

The standard seal for the pump can be used for most applications. However applications that use normal phase solvents (for example, hexane) are not suited for the standard seal and require a different seal when used for a longer time in the pump.

For applications that use normal phase solvents (for example, hexane) we recommend using polyethylene pump seals (PE seals (pack of 2) (p/n 0905-1420)) and Wash Seal PE (p/n 0905-1718). These seals have less abrasion compared to the standard seals.

NOTE Polyethylene seals have a limited pressure range of 0 – 200 bar. When used above 200 bar their lifetime is reduced significantly. *DO NOT* apply the seal wear-in procedure performed with new standard seals at 400 bar.

When to Remove the Static Mixer

The binary pump is equipped with a static mixer. The total delay volume of the pump is 600 – 900 µl. The mixer has a volume of 420 µl.

The static mixer and both connecting capillaries can be replaced by a small capillary (G1312-67301) under the following conditions:

- the delay volume of the pump should be reduced to a minimum for fastest gradient response, and
- the detector is used at medium or low sensitivity.

NOTE Removing the mixer will result in an increase of the composition ripple and higher detector noise.

How to Optimize the Compressibility Compensation Setting

The compressibility compensation default settings are 50 × 10^{-6} /bar (best for most aqueous solutions) for pump head A and 115 × 10^{-6} /bar (to suit organic solvents) for pump head B. The settings represent average values for aqueous solvents (A side) and organic solvents (B side). Therefore it is always recommended to use the aqueous solvent on the A side of the pump and the organic solvent on the B side. Under normal conditions the default settings reduce the pressure pulsation to values (below 1 % of system pressure) that will be sufficient for most applications. If the compressibility values for the solvents used differ from the default settings, it is recommended to change the compressibility values accordingly. Compressibility settings can be optimized by using the values for various solvents described in Table 17 on page 77. If the solvent in use is not listed in the compressibility table, when using premixed solvents and if the default settings are not sufficient for your application the following procedure can be used to optimize the compressibility settings:

1. Start channel A of the binary pump with the required flow rate.
2. Before starting the optimization procedure, the flow must be stable. Use degassed solvent only. Check the tightness of the system with the pressure test (see "Description" on page 116).
3. Your pump must be connected to a data system or Instant Pilot with which the pressure and %-ripple can be monitored, otherwise connect a signal cable between the pressure output of the pump and a recording device (for example, 339X integrator) and set parameters.

   Zero 50 %

   Att 2^3 Chart

   Speed 10 cm/min
4. Start the recording device with the plot mode.
5. Starting with a compressibility setting of 10 × 10^{-6} /bar increase the value in steps of 10. Re-zero the integrator as required. The compressibility compensation setting that generates the smallest pressure ripple is the optimum value for your solvent composition.

Table 17 Solvent Compressibility

Solvent (pure)	Compressibility (10^{-6}/bar)
Acetone	126
Acetonitrile	115
Benzene	95
Carbon tetrachloride	110
Chloroform	100
Cyclohexane	118
Ethanol	114
Ethyl acetate	104
Heptane	120
Hexane	150
Isobutanol	100
Isopropanol	100
Methanol	120
1-Propanol	100
Toluene	87
Water	46

6 Repeat step 1 on page 76 through step 5 on page 76 for the B channel of your binary pump.

6
Troubleshooting and Diagnostics

Status Indicators 80
Status Indicators 81
Power Supply Indicator 81
Module Status Indicator 82
User Interfaces 83
Agilent Lab Advisor Software 84

Overview about the troubleshooting and diagnostic features.

Status Indicators

The module is provided with two status indicators which indicate the operational state (prerun, run, and error states) of the module. The status indicators provide a quick visual check of the operation of the module.

Error Messages

In the event of an electronic, mechanical or hydraulic failure, the module generates an error message in the user interface. For each message, a short description of the failure, a list of probable causes of the problem, and a list of suggested actions to fix the problem are provided (see chapter Error Information).

Test Functions

A series of test functions are available for troubleshooting and operational verification after exchanging internal components (see Tests and Calibrations).

System Pressure Test

The **System Pressure Test** is a quick test designed to determine the pressure tightness of the system. After exchanging flow path components (e.g. pump seals or injection seal), use this test to verify the system is pressure tight.

Leak Rate Test

The **Leak Rate Test** is a diagnostic test designed to determine the pressure tightness of the pump. When a problem with the pump is suspected, use this test to help troubleshoot the pump and its pumping performance.

Status Indicators

Two status indicators are located on the front of the module. The lower left indicates the power supply status, the upper right indicates the module status.

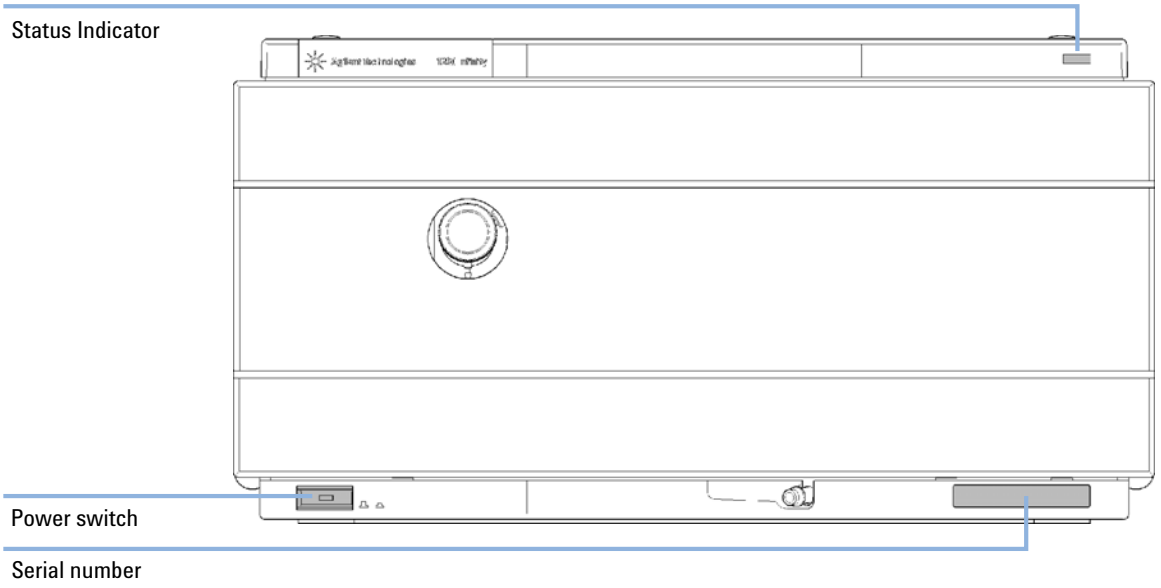

Figure 18 Location of Status Indicators

Power Supply Indicator

The power supply indicator is integrated into the main power switch. When the indicator is illuminated (*green*) the power is *ON*.

Module Status Indicator

The module status indicator indicates one of six possible module conditions:

- When the status indicator is *OFF* (and power switch light is on), the module is in a *prerun* condition, and is ready to begin an analysis.
- A *green* status indicator, indicates the module is performing an analysis (*run* mode).
- A *yellow* indicator indicates a *not-ready* condition. The module is in a not-ready state when it is waiting for a specific condition to be reached or completed (for example, immediately after changing a set point), or while a self-test procedure is running.
- An *error* condition is indicated when the status indicator is *red*. An error condition indicates the module has detected an internal problem which affects correct operation of the module. Usually, an error condition requires attention (e.g. leak, defective internal components). An error condition always interrupts the analysis.
- A *red-blinking* (modules with on-board LAN) or *yellow-blinking* (modules without on-board LAN) indicator indicates that the module is in resident mode (e.g. during update of main firmware).
- A *fast red-blinking* (modules with on-board LAN) or *fast yellow-blinking* (modules without on-board LAN) indicator indicates that the module is in boot loader mode (e.g. during update of main firmware). In such a case try to re-boot the module or try a cold-start.

User Interfaces

Depending on the user interface, the available tests vary. Some descriptions are only available in the Service Manual.

Table 18 Test Functions available vs. User Interface

Test	ChemStation	Instant Pilot G4208A	Agilent Lab Advisor
Pressure Test	Yes	No	
Leak Test	Yes	No	

Agilent Lab Advisor Software

The Agilent Lab Advisor software is a standalone product that can be used with or without data system. Agilent Lab Advisor software helps to manage the lab for high quality chromatographic results and can monitor in real time a single Agilent LC or all the Agilent GCs and LCs configured on the lab intranet.

Agilent Lab Advisor software provides diagnostic capabilities for all Agilent 1200 Infinity Series modules. This includes diagnostic capabilities, calibration procedures and maintenance routines for all the maintenance routines.

The Agilent Lab Advisor software also allows users to monitor the status of their LC instruments. The Early Maintenance Feedback (EMF) feature helps to carry out preventive maintenance. In addition, users can generate a status report for each individual LC instrument. The tests and diagnostic features as provided by the Agilent Lab Advisor software may differ from the descriptions in this manual. For details refer to the Agilent Lab Advisor software help files.

This manual provides lists with the names of Error Messages, Not Ready messages, and other common issues.

7 Error Information

What Are Error Messages 87
General Error Messages 88
- Timeout 88
- Shut-Down 88
- Remote Timeout 89
- Synchronization Lost 89
- Leak Sensor Short 90
- Leak Sensor Open 90
- Compensation Sensor Open 91
- Compensation Sensor Short 91
- Fan Failed 92
- Leak 92
- Open Cover 93

Module Error Messages 94
- Restart Without Cover 94
- Zero Solvent Counter 94
- Pressure Above Upper Limit 95
- Pressure Below Lower Limit 96
- Pressure Signal Missing 97
- Valve Failed 98
- Missing Pressure Reading 99
- Pump Configuration 99
- Valve Fuse 100
- Inlet-Valve Fuse 101
- Temperature Out of Range 101
- Temperature Limit Exceeded 102
- Motor-Drive Power 103
- Encoder Missing 104

Inlet-Valve Missing 105
Servo Restart Failed 106
Pump Head Missing 107
Index Limit 108
Index Adjustment 109
Index Missing 110
Stroke Length 111
Initialization Failed 112
Wait Timeout 113
Electronic fuse of SSV 114

This chapter describes the meaning of error messages, and provides information on probable causes and suggested actions how to recover from error conditions.

What Are Error Messages

Error messages are displayed in the user interface when an electronic, mechanical, or hydraulic (flow path) failure occurs which requires attention before the analysis can be continued (for example, repair, or exchange of consumables is necessary). In the event of such a failure, the red status indicator at the front of the module is switched on, and an entry is written into the module logbook.

General Error Messages

General error messages are generic to all Agilent series HPLC modules and may show up on other modules as well.

Timeout

The timeout threshold was exceeded.

Probable cause	Suggested actions
1 The analysis was completed successfully, and the timeout function switched off the module as requested.	Check the logbook for the occurrence and source of a not-ready condition. Restart the analysis where required.
2 A not-ready condition was present during a sequence or multiple-injection run for a period longer than the timeout threshold.	Check the logbook for the occurrence and source of a not-ready condition. Restart the analysis where required.

Shut-Down

An external instrument has generated a shut-down signal on the remote line.

The module continually monitors the remote input connectors for status signals. A LOW signal input on pin 4 of the remote connector generates the error message.

Probable cause	Suggested actions
1 Leak detected in another module with a CAN connection to the system.	Fix the leak in the external instrument before restarting the module.
2 Leak detected in an external instrument with a remote connection to the system.	Fix the leak in the external instrument before restarting the module.
3 Shut-down in an external instrument with a remote connection to the system.	Check external instruments for a shut-down condition.
4 The degasser failed to generate sufficient vacuum for solvent degassing.	Check the vacuum degasser for an error condition. Refer to the *Service Manual* for the degasser or the 1260 pump that has the degasser built-in.

Remote Timeout

A not-ready condition is still present on the remote input. When an analysis is started, the system expects all not-ready conditions (for example, a not-ready condition during detector balance) to switch to run conditions within one minute of starting the analysis. If a not-ready condition is still present on the remote line after one minute the error message is generated.

Probable cause	Suggested actions
1 Not-ready condition in one of the instruments connected to the remote line.	Ensure the instrument showing the not-ready condition is installed correctly, and is set up correctly for analysis.
2 Defective remote cable.	Exchange the remote cable.
3 Defective components in the instrument showing the not-ready condition.	Check the instrument for defects (refer to the instrument's documentation).

Synchronization Lost

During an analysis, the internal synchronization or communication between one or more of the modules in the system has failed.

The system processors continually monitor the system configuration. If one or more of the modules is no longer recognized as being connected to the system, the error message is generated.

Probable cause	Suggested actions
1 CAN cable disconnected.	• Ensure all the CAN cables are connected correctly. • Ensure all CAN cables are installed correctly.
2 Defective CAN cable.	Exchange the CAN cable.
3 Defective main board in another module.	Switch off the system. Restart the system, and determine which module or modules are not recognized by the system.

Leak Sensor Short

The leak sensor in the module has failed (short circuit).

The current through the leak sensor is dependent on temperature. A leak is detected when solvent cools the leak sensor, causing the leak-sensor current to change within defined limits. If the current increases above the upper limit, the error message is generated.

Probable cause	Suggested actions
1 Defective flow sensor.	Please contact your Agilent service representative.
2 Leak sensor incorrectly routed, being pinched by a metal component.	Please contact your Agilent service representative.

Leak Sensor Open

The leak sensor in the module has failed (open circuit).

The current through the leak sensor is dependent on temperature. A leak is detected when solvent cools the leak sensor, causing the leak-sensor current to change within defined limits. If the current falls outside the lower limit, the error message is generated.

Probable cause	Suggested actions
1 Leak sensor not connected to the main board.	Please contact your Agilent service representative.
2 Defective leak sensor.	Please contact your Agilent service representative.
3 Leak sensor incorrectly routed, being pinched by a metal component.	Please contact your Agilent service representative.

Compensation Sensor Open

The ambient-compensation sensor (NTC) on the main board in the module has failed (open circuit).

The resistance across the temperature compensation sensor (NTC) on the main board is dependent on ambient temperature. The change in resistance is used by the leak circuit to compensate for ambient temperature changes. If the resistance across the sensor increases above the upper limit, the error message is generated.

Probable cause	Suggested actions
1 Defective main board.	Please contact your Agilent service representative.

Compensation Sensor Short

The ambient-compensation sensor (NTC) on the main board in the module has failed (short circuit).

The resistance across the temperature compensation sensor (NTC) on the main board is dependent on ambient temperature. The change in resistance is used by the leak circuit to compensate for ambient temperature changes. If the resistance across the sensor falls below the lower limit, the error message is generated.

Probable cause	Suggested actions
1 Defective main board.	Please contact your Agilent service representative.

Fan Failed

The cooling fan in the module has failed.

The hall sensor on the fan shaft is used by the main board to monitor the fan speed. If the fan speed falls below a certain limit for a certain length of time, the error message is generated.

This limit is given by 2 revolutions/second for longer than 5 seconds.

Probable cause	Suggested actions
1 Fan cable disconnected.	Please contact your Agilent service representative.
2 Defective fan.	Please contact your Agilent service representative.
3 Defective main board.	Please contact your Agilent service representative.
4 Improperly positioned cables or wires obstructing fan blades.	Ensure the fan is not mechanically blocked.

Leak

A leak was detected in the module.

The signals from the two temperature sensors (leak sensor and board-mounted temperature-compensation sensor) are used by the leak algorithm to determine whether a leak is present. When a leak occurs, the leak sensor is cooled by the solvent. This changes the resistance of the leak sensor which is sensed by the leak-sensor circuit on the main board.

Probable cause	Suggested actions
1 Loose fittings.	Ensure all fittings are tight.
2 Broken capillary.	Exchange defective capillaries.
3 Loose or leaking purge valve, inlet valve, or outlet valve.	Ensure pump components are seated correctly. If there are still signs of a leak, exchange the appropriate seal (purge valve, inlet valve, outlet valve).
4 Defective pump seals.	Exchange the pump seals.

Open Cover

The top foam has been removed.

The sensor on the main board detects when the top foam is in place. If the foam is removed, the fan is switched off, and the error message is generated.

	Probable cause	Suggested actions
1	The top foam was removed during operation.	Reinstall the top foam.
2	Foam not activating the sensor.	Please contact your Agilent service representative.
3	Dirty or defective sensor.	Please contact your Agilent service representative.
4	Rear of the module is exposed to strong direct sunlight.	Ensure that the rear of module is not directly exposed to strong sunlight.

Module Error Messages

Restart Without Cover

Restart Without Cover

The module was restarted with the top cover and foam open.

The sensor on the main board detects when the top foam is in place. If the module is restarted with the foam removed, the module switches off within 30 s, and the error message is generated.

Probable cause	Suggested actions
1 The module started with the top cover and foam removed.	Please contact your Agilent service representative.
2 Rear of the module is exposed to strong direct sunlight.	Ensure that the rear of module is not directly exposed to strong sunlight.

Zero Solvent Counter

Solvent Zero Counter

Pump firmware version A.02.32 and higher allow to set solvent bottle fillings in the data system. If the volume level in the bottle falls below the specified value the error message appears when the feature is configured accordingly.

Probable cause	Suggested actions
1 Volume in bottle below specified volume.	Refill bottles and reset solvent counters.
2 Incorrect setting.	Make sure the limits are set correctly.

Pressure Above Upper Limit

The system pressure has exceeded the upper pressure limit.

Probable cause	Suggested actions
1 Upper pressure limit set too low.	Ensure the upper pressure limit is set to a value suitable for the analysis.
2 Blockage in the flowpath (after the damper).	Check for blockage in the flowpath. The following components are particularly subject to blockage: inline filter frit, needle (autosampler), seat capillary (autosampler), sample loop (autosampler), column frits and capillaries with small internal diameters (e.g. 50 µm ID).
3 Defective damper.	Please contact your Agilent service representative.
4 Defective main board.	Please contact your Agilent service representative.

Pressure Below Lower Limit

The system pressure has fallen below the lower pressure limit.

Probable cause	Suggested actions
1 Lower pressure limit set too high.	Ensure the lower pressure limit is set to a value suitable for the analysis.
2 Air bubbles in the mobile phase.	• Ensure solvents are degassed. Purge the module. • Ensure solvent inlet filters are not blocked.
3 Leak.	• Inspect the pump head, capillaries and fittings for signs of a leak. • Purge the module. Run a pressure test to determine whether the seals or other module components are defective.
4 Defective damper.	Please contact your Agilent service representative.
5 Defective main board.	Please contact your Agilent service representative.

Pressure Signal Missing

The pressure signal of the damper is missing.

The pressure signal of the damper must be within a specific voltage range. If the pressure signal is missing, the processor detects a voltage of approximately -120mV across the damper connector.

Probable cause	Suggested actions
1 Damper disconnected.	Please contact your Agilent service representative.
2 Defective damper.	Please contact your Agilent service representative.

Valve Failed

Following errors can only occur, if a solvent selection valve is used. The internal number in the error message is linked to one of the valves as shown in the following table:

Valve 0 Failed: valve A1

Valve 1 Failed: valve A2

Valve 2 Failed: valve B2

Valve 3 Failed: valve B1

One of the solvent selection valves in the binary pump failed to switch correctly.

The processor monitors the valve voltage before and after each switching cycle. If the voltages are outside expected limits, the error message is generated.

	Probable cause	Suggested actions
1	Solvent selection valve disconnected.	Ensure the solvent selection valve is connected correctly.
2	Connection cable (inside instrument) not connected.	Please contact your Agilent service representative.
3	Connection cable (inside instrument) defective.	Please contact your Agilent service representative.
4	Solvent selection valve defective.	Exchange the solvent selection valve.

Missing Pressure Reading

The pressure readings read by the pump ADC (analog-digital converter) are missing.

The ADC reads the pressure signal of from the damper every 1ms. If the readings are missing for longer than 10 seconds, the error message is generated.

Probable cause	Suggested actions
1 Damper disconnected.	Please contact your Agilent service representative.
2 Defective damper.	Please contact your Agilent service representative.
3 Defective main board.	Please contact your Agilent service representative.

Pump Configuration

At switch-on, the pump has recognized a new pump configuration.

The pump is assigned its configuration at the factory. If the active-inlet valve and pump encoder of channel B are disconnected, and the pump is rebooted, the error message is generated. *However, the* pump *will function as an isocratic pump in this configuration*. The error message reappears after each switch-on.

Probable cause	Suggested actions
1 Active-inlet valve and pump encoder of channel B disconnected.	Reconnect the active-inlet valve and pump encoder of channel B.

Valve Fuse

Following errors can only occur, if a solvent selection valve is used. The internal number in the error message is linked either to channels A or B as shown in the following table:

Valve Fuse 0: Channels A1 and A2

Valve Fuse 1: Channels B1 and B2

One of the solvent-selection valves in the pump has drawn excessive current causing the selection-valve electronic fuse to open.

	Probable cause	Suggested actions
1	Defective solvent selection valve.	Restart the capillary pump. If the error message appears again, exchange the solvent selection valve.
2	Defective connection cable (front panel to main board).	Please contact your Agilent service representative.
3	Defective main board.	Please contact your Agilent service representative.
4	1200 Series solvent selection valve installed.	Replace by 1260 solvent selection valve.

Inlet-Valve Fuse

Inlet-Valve Fuse 0: Pump channel A

Inlet-Valve Fuse 1: Pump channel B

One of the active-inlet valves in the module has drawn excessive current causing the inlet-valve electronic fuse to open.

Probable cause	Suggested actions
1 Defective active inlet valve.	Restart the module. If the error message appears again, exchange the active inlet valve.
2 Defective connection cable (front panel to main board).	Please contact your Agilent service representative.
3 Defective main board.	Please contact your Agilent service representative.

Temperature Out of Range

Temperature Out of Range 0: Pump channel A

Temperature Out of Range 1: Pump channel B

One of the temperature sensor readings in the motor-drive circuit are out of range.

The values supplied to the ADC by the hybrid sensors must be between 0.5 V and 4.3 V. If the values are outside this range, the error message is generated.

Probable cause	Suggested actions
1 Defective main board.	Please contact your Agilent service representative.

Temperature Limit Exceeded

Temperature Limit Exceeded 0: Pump channel A

Temperature Limit Exceeded 1: Pump channel B

The temperature of one of the motor-drive circuits is too high.

The processor continually monitors the temperature of the drive circuits on the main board. If excessive current is being drawn for long periods, the temperature of the circuits increases. If the temperature exceeds the upper limit, the error message is generated.

Probable cause	Suggested actions
1 High friction (partial mechanical blockage) in the pump drive assembly.	Ensure the capillaries and frits between the pump head and damper inlet are free from blockage.
2 Partial blockage of the flowpath in front of the damper.	Ensure the outlet valve is not blocked.
3 Defective pump drive assembly.	Please contact your Agilent service representative.
4 Defective main board.	Please contact your Agilent service representative.

Motor-Drive Power

Motor-Drive Power: Pump channel A

B: Motor-Drive Power: Pump channel B

The current drawn by the pump motor exceeded the maximum limit.

Blockages in the flow path are usually detected by the pressure sensor in the damper, which result in the pump switching off when the upper pressure limit is exceeded. If a blockage occurs before the damper, the pressure increase cannot be detected by the pressure sensor and the module will continue to pump. As pressure increases, the pump drive draws more current. When the current reaches the maximum limit, the module is switched off, and the error message is generated.

	Probable cause	Suggested actions
1	Flow path blockage in front of the damper.	Ensure the capillaries and frits between the pump head and damper inlet are free from blockage.
2	Blocked outlet valve.	Exchange the outlet valve.
3	High friction (partial mechanical blockage) in the pump drive assembly.	Remove the pump-head assembly. Ensure there is no mechanical blockage of the pump-head assembly or pump drive assembly.
4	Defective pump drive assembly.	Please contact your Agilent service representative.
5	Defective main board.	Please contact your Agilent service representative.
6	Restriction capillary blocked at pre-mixing union.	Exchange restriction capillary.

Encoder Missing

Encoder Missing: Pump channel A

B: Encoder Missing: Pump channel B

The optical encoder on the pump motor in the module is missing or defective.

The processor checks the presence of the pump encoder connector every 2 seconds. If the connector is not detected by the processor, the error message is generated.

Probable cause	Suggested actions
1 Defective or disconnected pump encoder connector.	Please contact your Agilent service representative.
2 Defective pump drive assembly.	Please contact your Agilent service representative.

Inlet-Valve Missing

Inlet-Valve Missing: Pump channel A

B: Inlet-Valve Missing: Pump channel B

The active-inlet valve in the module is missing or defective.

The processor checks the presence of the active-inlet valve connector every 2 seconds. If the connector is not detected by the processor, the error message is generated.

Probable cause	Suggested actions
1 Disconnected or defective cable.	Please contact your Agilent service representative.
2 Disconnected or defective connection cable (front panel to main board).	Please contact your Agilent service representative.
3 Defective active inlet valve.	Exchange the active inlet valve.

Servo Restart Failed

Servo Restart Failed: Pump channel A

B: Servo Restart Failed: Pump channel B

The pump motor in the module was unable to move into the correct position for restarting.

When the module is switched on, the first step is to switch on the C phase of the variable reluctance motor. The rotor should move to one of the C positions. The C position is required for the servo to be able to take control of the phase sequencing with the commutator. If the rotor is unable to move, or if the C position cannot be reached, the error message is generated.

Probable cause	Suggested actions
1 Disconnected or defective cable.	Please contact your Agilent service representative.
2 Mechanical blockage of the module.	Remove the pump-head assembly. Ensure there is no mechanical blockage of the pump-head assembly or pump drive assembly.
3 Defective pump drive assembly.	Please contact your Agilent service representative.
4 Defective main board.	Please contact your Agilent service representative.

Pump Head Missing

Pump Head Missing: Pump channel A

B: Pump Head Missing: Pump channel B

The pump-head end stop in the pump was not found.

When the pump restarts, the metering drive moves forward to the mechanical end stop. Normally, the end stop is reached within 20 seconds, indicated by an increase in motor current. If the end point is not found within 20 seconds, the error message is generated.

Probable cause	Suggested actions
1 Pump head not installed correctly (screws not secured, or pump head not seated correctly).	Install the pump head correctly. Ensure nothing (e.g. capillary) is trapped between the pump head and body.
2 Broken piston.	Exchange the piston.

Index Limit

Index Limit: Pump channel A

B: Index Limit: Pump channel B

The time required by the piston to reach the encoder index position was too short (pump).

During initialization, the first piston is moved to the mechanical stop. After reaching the mechanical stop, the piston reverses direction until the encoder index position is reached. If the index position is reached too fast, the error message is generated.

Probable cause	Suggested actions
1 Irregular or sticking drive movement.	Remove the pump head, and examine the seals, pistons, and internal components for signs of wear, contamination or damage. Exchange components as required.
2 Defective pump drive assembly.	Please contact your Agilent service representative.

Index Adjustment

Index Adjustment: Pump channel A

B: Index Adjustment: Pump channel B

The encoder index position in the module is out of adjustment.

During initialization, the first piston is moved to the mechanical stop. After reaching the mechanical stop, the piston reverses direction until the encoder index position is reached. If the time to reach the index position is too long, the error message is generated.

Probable cause	Suggested actions
1 Irregular or sticking drive movement.	Remove the pump head, and examine the seals, pistons, and internal components for signs of wear, contamination or damage. Exchange components as required.
2 Defective pump drive assembly.	Please contact your Agilent service representative.

Index Missing

Index Missing: Pump channel A

B: Index Missing: Pump channel B

The encoder index position in the module was not found during initialization.

During initialization, the first piston is moved to the mechanical stop. After reaching the mechanical stop, the piston reverses direction until the encoder index position is reached. If the index position is not recognized within a defined time, the error message is generated.

Probable cause	Suggested actions
1 Disconnected or defective encoder cable.	Please contact your Agilent service representative.
2 Defective pump drive assembly.	Please contact your Agilent service representative.

Stroke Length

Stroke Length: Pump channel A

B: Stroke Length: Pump channel B

The distance between the lower piston position and the upper mechanical stop is out of limits (pump).

During initialization, the module monitors the drive current. If the piston reaches the upper mechanical stop position before expected, the motor current increases as the module attempts to drive the piston beyond the mechanical stop. This current increase causes the error message to be generated.

Probable cause	Suggested actions
1 Defective pump drive assembly.	Please contact your Agilent service representative.

Initialization Failed

Initialization Failed: Pump channel A

B: Initialization Failed: Pump channel B

The module failed to initialize successfully within the maximum time window.

A maximum time is assigned for the complete pump-initialization cycle. If the time is exceeded before initialization is complete, the error message is generated.

Probable cause	Suggested actions
1 Blocked passive inlet valve.	Exchange the inlet valve.
2 Defective pump drive assembly.	Please contact your Agilent service representative.
3 Defective main board.	Please contact your Agilent service representative.

Wait Timeout

When running certain tests in the diagnostics mode or other special applications, the pump must wait for the pistons to reach a specific position, or must wait for a certain pressure or flow to be reached. Each action or state must be completed within the timeout period, otherwise the error message is generated.

Possible Reasons for a Wait Timeout:

· Pressure not reached.

· Pump channel A did not reach the delivery phase.

· Pump channel B did not reach the delivery phase.

· Pump channel A did not reach the take-in phase.

· Pump channel B did not reach the take-in phase.

· Solvent volume not delivered within the specified time.

Probable cause	Suggested actions
1 Purge valve open.	Ensure that purge valve is closed.
2 Leak at fittings, purge valve, active inlet valve, outlet valve or piston seals.	• Ensure pump components are seated correctly. If there are still signs of a leak, exchange the appropriate seal (purge valve, active inlet valve, outlet valve, piston seal). • Exchange defective capillaries.
3 Flow changed after starting test.	Ensure correct operating condition for the special application in use.
4 Defective pump drive assembly.	Please contact your Agilent service representative.

Electronic fuse of SSV

The electronic fuse protecting the solvent selection valve electronics has blown.

Probable cause	Suggested actions
1 Recoverable error of the SSV electronic.	Restart module, the electronic fuse can recover. If not, contact Agilent service.
2 Short cut of SSV/cable	Replace cable between board and SSV

8
Test Functions and Calibration

Pressure Test 116
- Description 116
- Positioning the Blank Nut 117
- Running the Pressure Test 118
- Evaluating the Results 119
- System Pressure Test failed 120

Leak Test 121
- Description 121
- Running the Leak Test 123
- Evaluating the Results 124

This chapter describes the tests for the module.

Pressure Test

Description

The pressure test is a quick, built-in test designed to demonstrate the pressure-tightness of the system. The test involves monitoring the pressure profile while the binary pump runs through a predefined pumping sequence. The resulting pressure profile provides information about the pressure tightness of the system.

Step 1

The test begins with the initialization of both pumpheads. After initialization, pistons A1 and B1 are both at the top of their stroke. Next, pump A begins pumping solvent with a flow rate of 510 µL/min and stroke of 100 µL. The binary pump continues to pump until a system pressure of 390 bar bar is reached.

NOTE For this test channel A is active, which is directly connected to chamber 2 in channel B, see Figure 2 on page 10. To test the pressure tightness of the pump use the leak test, see "Description" on page 121.

Step 2

When the system pressure reaches 390 bar bar, the binary pump switches off. The pressure drop from this point onwards should be no more than 2 bar/min.

Positioning the Blank Nut

To test the complete system's pressure tightness, the blank nut should be positioned at the column compartment outlet (or the outlet of the last module before the detector).

If a specific component is suspected of causing a system leak, place the blank nut immediately before the suspected component, then run the **Pressure Test** again. If the test passes, the defective component is located after the blank nut. Confirm the diagnosis by placing the blank nut immediately after the suspected component. The diagnosis is confirmed if the test fails.

Running the Pressure Test

When If problems with small leaks are suspected After maintenance of flow-path components (e.g., pump seals, injection seal) to prove pressure tightness up to 400 bar

Tools required Wrench 1/4 inch

Parts required

#	p/n	Description
1	01080-83202	Blank nut
1		500 ml Isopropanol

Preparations Place a bottle of LC-grade isopropanol in the solvent cabinet and connect it to channel A (or channel A2 if solvent selection valve is installed).

NOTE Make absolutely sure that all parts of the flow path that are part of the test are flushed very thoroughly with isopropanol before starting to pressurize the system! Any trace of other solvents or the smallest air bubble inside the flow path definitely will cause the test to fail!

Running the test from the Agilent Lab Monitor & Diagnostic Software

1. Select the pressure test from the test selection menu.
2. Start the test and follow the instructions.

NOTE Make sure to release the pressure by slowly opening the purge valve when the test has finished.

"System Pressure Test failed" on page 120 describes the evaluation and interpretation of the pressure test results.

For detailed instructions refer to the Agilent Lab Monitor & Diagnostic Software.

Evaluating the Results

The sum of all leaks between the pump and the blank nut will be indicated by a pressure drop of >2 bar/minute at the plateau. Note that small leaks may cause the test to fail, but solvent may not be seen leaking from a module.

NOTE Please notice the difference between an **error** in the test and a **failure** of the test! An **error** means that during the operation of the test there was an abnormal termination. If a test **failed**, this means that the results of the test were not within the specified limits.

If the pressure test fails:

- Ensure all fittings between the pump and the blank nut are tight. Repeat the pressure test.

NOTE Often, it is only a damaged blank nut itself (poorly shaped from overtightening) that causes a failure of the test. Before investigating any other possible sources of failure make sure that the blank nut you are using is in good condition and properly tightened!

- If the test fails again, insert the blank nut at the outlet of the previous module in the stack (eg. autosampler, port 6 of the injection valve), and repeat the pressure test. Exclude each module one by one to determine which module is leaking.
- If the pump is determined to be the source of the leak, run the leak test.

System Pressure Test failed

The test will fail, if the sum of all leaks in the system (pump, autosampler or column compartment and connections) exceeds the test limit. After isolating and fixing the cause of the leak, repeat the **System Pressure Test** to confirm the system is pressure tight.

	Probable cause	Suggested actions
1	Purge valve open.	Close the purge valve.
2	Loose or leaky fittings.	Tighten the fitting or exchange the capillary.
3	Pump: Damaged pump seals or pistons.	Run the **Leak Rate Test** to confirm the leak.
4	Loose purge valve.	Tighten the purge valve nut (14 mm wrench).
5	Autosampler: Loose or leaky fitting.	Tighten or exchange the fitting or capillary.
6	Autosampler: Rotor seal (injection valve).	Exchange the rotor seal.
7	Autosampler: Damaged metering seal or piston.	Exchange the metering seal. Check the piston for scratches. Exchange the piston if required.
8	Autosampler: Needle seat.	Exchange the needle seat.
9	Column compartment: Loose or leaky fitting.	Tighten or exchange the fitting or capillary.
10	Column compartment: Rotor seal (column switching valve).	Exchange the rotor seal.

Leak Test

Description

The leak test is a built-in troubleshooting test designed to demonstrate the leak-tightness of the binary pump. The test involves monitoring the pressure profile as the binary pump runs through a predefined pumping sequence. The resulting pressure profile provides information about the pressure tightness and operation of the binary pump components (see Figure 2 on page 10).

Ramp 1

The test begins with the initialization of both pumps. After initialization, pistons A1 and B1 are both at the top of their stroke. Next, the pump begins pumping solvent with a flow rate of 150 µL/min, stroke of 100 µL, and a composition of 51 % A, 49 % B. Both pumps deliver for one complete pump cycle. At the end of this step, pistons A1 and B1 are at the top of their stroke.

Ramp 2

The pump continues pumping solvent with a flow rate of 150 µL/min. Channel A delivers for one pump cycle (first, piston A2 delivers, then piston A1), followed by channel B (piston B2, then piston B1), both channels with a stroke of 20 µL.

Ramp 3

Just before the start of the first plateau, piston A2 delivers with a flow rate of 50 µL/min for approximately 8 s.

Plateau 1

At plateau 1, piston A2 delivers with a flow rate of 3 µL/min for 30 s.

Ramp 4

Piston B2 delivers 50 µL/min for approximately 8 s.

Plateau 2

Piston B2 delivers with a flow rate of 3 µL/min for 30 s.

Ramp 5

Piston A1 delivers 50 µL/min for approximately 8 s.

Plateau 3

Piston A1 delivers with a flow rate of 3 µL/min for 30 s.

Ramp 6

Piston B1 delivers 50 µL/min for approximately 7 s.

Plateau 4

Piston B1 delivers with a flow rate of 3 µL/min for approximately 30 s. At the end of the fourth plateau, the test is finished and the pump switches off.

Running the Leak Test

When If problems with the pump are suspected

Tools required Wrench 1/4 inch

Parts required

#	p/n	Description
1	G1313-87305	Restriction Capillary
1	01080-83202	Blank nut
1		500 ml Isopropanol

Preparations Place two bottles of LC-grade isopropyl alcohol in channels A and B. If a solvent selection valve is installed, place the LC grade isopropanol in channels A2 and B2.

NOTE Make absolutely sure that all parts of the flow path that are part of the test are very thoroughly flushed with isopropanol before starting to pressurize the system! Any trace of other solvents or the smallest air bubble inside the flow path definitely will cause the test to fail!

Running the test from the Agilent Lab Advisor

1 Select the **Leak Test** from the **Test Selection** menu.

2 Start the test and follow the instructions.

NOTE Make sure to release the pressure by slowly opening the purge valve when the test has finished.

"Evaluating the Results" on page 124 describes the evaluation and interpretation of the leak test results.

Detailed instructions are provided in the Lab Advisor Software.

Evaluating the Results

Defective or leaky components in the pump head lead to changes in the **Leak Test** pressure plot. Typical failure modes are described below.

NOTE Please notice the difference between an *error* in the test and a *failure* of the test! An *error* means that during the operation of the test there was an abnormal termination. If a test *failed*, this means that the results of the test were not within the specified limits.

NOTE Often it is only the damaged blank nut itself (poorly shaped from overtightening) that causes a failure of the test. Before investigating on any other possible sources of failure make sure that the blank nut you are using is in good condition and properly tightened!

No pressure increase or minimum pressure of plateau 1 not reached

	Probable cause	Suggested actions
1	Pump not running.	Check the logbook for error messages.
2	Purge valve open.	Close the purge valve, and restart the test.
3	Wrong solvent-line connections to solvent selection valve.	Ensure the solvent lines from the degasser to the solvent selection valve are connected correctly.
4	Loose or leaky fittings.	Ensure all fittings are tight, or exchange capillary.
5	Large leaks (visible) at the pump seals.	Exchange the pump seals.
6	Large leaks (visible) at active inlet valve, outlet valve, or purge valve.	Ensure the leaky components are installed tightly. Exchange the component if required.

Pressure limit not reached but plateaus horizontal or positive

Probable cause	Suggested actions
1 Degasser and pump channels A and/or B not flushed sufficiently (air in the channels).	Purge the degasser and pump channels thoroughly with isopropanol under pressure (use the restriction capillary).
2 Wrong solvent.	Install isopropanol. Purge the degasser and pump channels thoroughly.

All plateaus negative

Probable cause	Suggested actions
1 Loose or leaky fittings.	Ensure all fittings are tight, or exchange capillary.
2 Loose purge valve.	Tighten the purge valve (14 mm wrench).
3 Leaky mixer (if installed).	Tighten the mixer fittings and nuts.
4 Contaminated purge valve.	Open and close purge valve to flush out contamination. Exchange the valve if still leaky.
5 Loose pump head screws in channel A or B.	Ensure the pump head screws in channels A and B are tight.
6 Leaking seal or scratched piston in channel A2 or B2.	Exchange the pump seals in both channels. Check the pistons for scratches. Exchange if scratched.
7 Leaking outlet valve in channel A or B.	Exchange the outlet valve.
8 Leaky damper.	Exchange damper.

First plateau negative or unstable, and at least one other plateau positive

Probable cause	Suggested actions
1 Leaking outlet valve in channel A.	Clean the outlet valve in channel A. Ensure the sieve in the outlet valves are installed correctly. Tighten the outlet valve.
2 Loose pump head screws in channel A.	Ensure the pump head screws in channel A are tight.
3 Leaking seal or scratched piston in channel A2.	Exchange the pump seals in channel A. Check the piston for scratches. Exchange if scratched.

Second plateau negative or unstable, and at least one other plateau positive

Probable cause	Suggested actions
1 Leaking outlet valve in channel B.	Clean the outlet valve in channel B. Ensure the sieve in the outlet valves are installed correctly. Tighten the outlet valve.
2 Loose pump head screws in channel B.	Ensure the pump head screws in channel B are tight.
3 Leaking seal or scratched piston in channel B2.	Exchange the pump seals in channel B. Check the piston for scratches. Exchange if scratched.

Third plateau negative or unstable and at least one other plateau positive

Probable cause	Suggested actions
1 Air in channel A or new seals not yet seated.	Flush channel A thoroughly with isopropanol under pressure (use restriction capillary).
2 Loose active inlet valve in channel A.	Tighten the active inlet valve in channel A (14 mm wrench). Do not overtighten!
3 Loose pump head screws in channel A.	Ensure the pump head screws in channel A are tight.
4 Loose outlet valve in channel A.	Ensure the sieve in the outlet valve is installed correctly. Tighten the outlet valve.
5 Leaking seal or scratched piston in channel A1.	Exchange the pump seals in channel A. Check the pistons for scratches. Exchange if scratched.
6 Defective active inlet valve in channel A.	Exchange the active inlet valve in channel A.

Fourth plateau negative or unstable and at least one other plateau positive

	Probable cause	Suggested actions
1	Air in pump chamber of channel B or seals not yet seated.	Flush channel B thoroughly with isopropanol under pressure (restriction capillary).
2	Loose active inlet valve in channel B.	Tighten the active inlet valve in channel B (14mm wrench). Do not overtighten!
3	Loose pump head screws in channel B.	Ensure the pump head screws in channel B are tight.
4	Loose outlet valve in channel B.	Ensure the sieve in the outlet valve is installed correctly. Tighten the outlet valve.
5	Leaking seal or scratched piston in channel B1.	Exchange the pump seals in channel B. Check the pistons for scratches. Exchange if scratched.
6	Defective active inlet valve in channel B.	Exchange the active inlet valve in channel B.

9 Maintenance

Introduction to Maintenance and Repair 130
Warnings and Cautions 131
Overview of Maintenance and Repair 132
Cleaning the Module 134
Checking and Cleaning the Solvent Filter 135
Exchanging the Purge Valve Frit or the Purge Valve 137
Removing the Pump Head Assembly 140
Disassembling the pump head 142
Exchanging the Pump Seals 143
Seal Wear-in Procedure 145
Exchanging the Plungers 146
Exchanging the Wash Seals 147
Reinstalling the Pump Head Assembly 149
Exchanging the Inlet Valve 151
Exchanging the Outlet Valve 153
Installation of the Solvent Selection Valve Upgrade Kit 155
Exchanging the Solvent Selection Valve 157
Installing the Active Seal Wash Option 160
Exchanging the Active Inlet Valve 164
Exchanging the Active Inlet Valve Cartridge 166
Exchanging the Optional Interface Board 168
Replacing the Module's Firmware 170

This chapter describes the maintenance of the module.

Introduction to Maintenance and Repair

The module is designed for easy repair. The most frequent repairs such as piston seal change and purge valve frit change can be done from the front of the module with the module in place in the system stack.

These repairs are described in "Simple Repairs" on page 133

Warnings and Cautions

WARNING

Toxic, flammable and hazardous solvents, samples and reagents

The handling of solvents, samples and reagents can hold health and safety risks.

- ➔ When working with these substances observe appropriate safety procedures (for example by wearing goggles, safety gloves and protective clothing) as described in the material handling and safety data sheet supplied by the vendor and follow good laboratory practice.
- ➔ The amount of substances should be reduced to the minimal volume required for the analysis.
- ➔ Do not operate the instrument in an explosive atmosphere.

WARNING

Electrical shock

Repair work at the module can lead to personal injuries, e.g. shock hazard, when the cover is opened.

- ➔ Do not remove the metal top cover of the module. No serviceable parts inside.
- ➔ Only certified persons are authorized to carry out repairs inside the module.

WARNING

Personal injury or damage to the product

Agilent is not responsible for any damages caused, in whole or in part, by improper use of the products, unauthorized alterations, adjustments or modifications to the products, failure to comply with procedures in Agilent product user guides, or use of the products in violation of applicable laws, rules or regulations.

- ➔ Use your Agilent products only in the manner described in the Agilent product user guides.

CAUTION

Safety standards for external equipment

- ➔ If you connect external equipment to the instrument, make sure that you only use accessory units tested and approved according to the safety standards appropriate for the type of external equipment.

Overview of Maintenance and Repair

Figure 19 on page 132 shows the main assemblies of the binary pump. The pump heads and its parts do require normal maintenance (for example, seal exchange) and can be accessed from the front (simple repairs). Replacing internal parts will require to remove the module from its stack and to open the top cover.

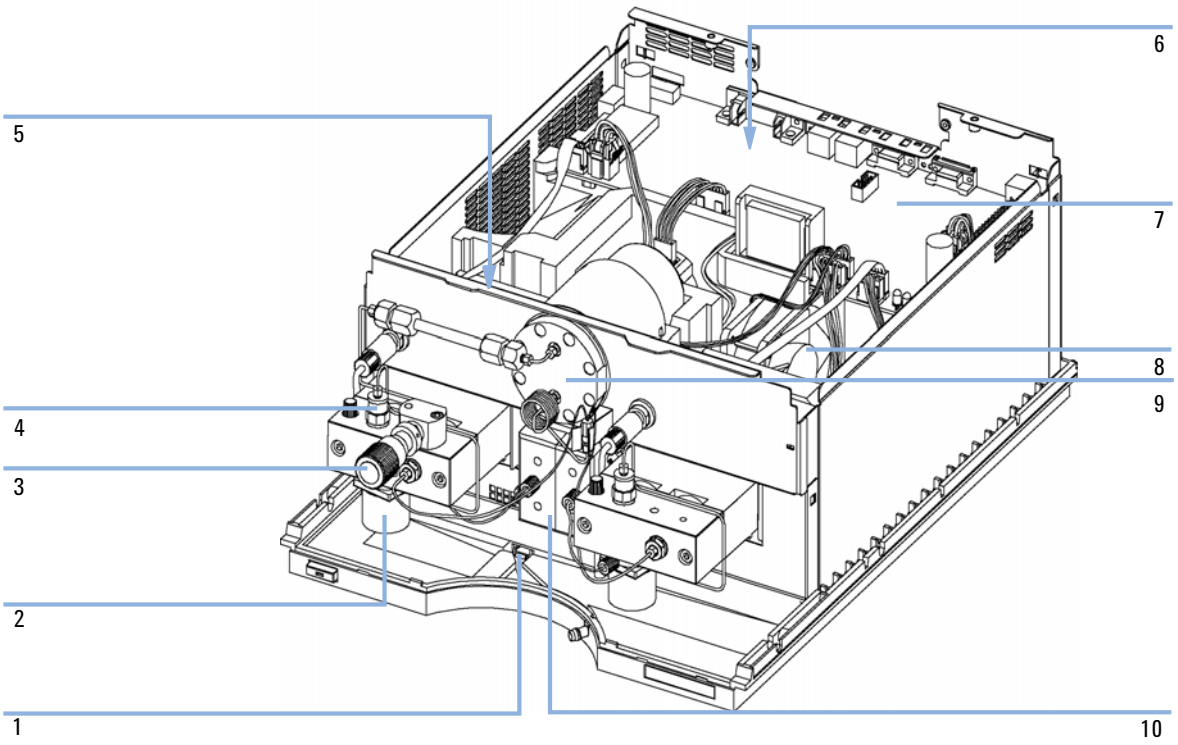

Figure 19 Overview of Repair Procedures

2	Inlet valve, see "Exchanging the Inlet Valve" on page 151
4	Outlet valve, see "Exchanging the Outlet Valve" on page 153
10	Solvent selection valve, see "Exchanging the Solvent Selection Valve" on page 157

Simple Repairs

The procedures described in this section can be done with the binary pump in place in the system stack.

Table 19 Simple Repair Procedures

Procedure	Typical Condition	Notes
"Checking and Cleaning the Solvent Filter" on page 135	If solvent filter is blocked	Gradient performance problems, intermittent pressure fluctuations
"Exchanging the Active Inlet Valve" on page 164	If internally leaking	Pressure ripple unstable, run leak test for verification
"Exchanging the Outlet Valve" on page 153	If internally leaking	Pressure ripple unstable, run leak test for verification
"Exchanging the Purge Valve Frit or the Purge Valve" on page 137	If internally leaking	Solvent dripping out of waste outlet when valve closed
"Exchanging the Purge Valve Frit or the Purge Valve" on page 137	If the frit shows indication of contamination or blockage	A pressure drop of > 10 bar across the frit (5 ml/min H_2O with purge valve open) indicates blockage
"Exchanging the Solvent Selection Valve" on page 157	If internally leaking	Error messages "Valve failed" or "Valve Fuse" are generated
"Exchanging the Pump Seals" on page 143	If pump performance indicates seal wear	Leaks at lower pump head side, unstable retention times, pressure ripple unstable — run leak test for verification
"Exchanging the Plungers" on page 146	If scratched	Seal life time shorter than normally expected — check plungers while changing the seals
"Exchanging the Wash Seals" on page 147	When seals show indication of leaks	Leaks at lower pump head side, loss of wash solvent
"Exchanging the Optional Interface Board" on page 168	If defective	Error condition, indicated by red status indicator

Cleaning the Module

The module case should be kept clean. Cleaning should be done with a soft cloth slightly dampened with water or a solution of water and mild detergent. Do not use an excessively damp cloth as liquid may drip into the module.

WARNING

Liquid dripping into the electronic compartment of your module.

Liquid in the module electronics can cause shock hazard and damage the module.

➔ Do not use an excessively damp cloth during cleaning.

➔ Drain all solvent lines before opening any fittings.

Checking and Cleaning the Solvent Filter

When If solvent filter is blocked

Parts required

Description
Concentrated nitric acid (35 %)
LC grade water
Beaker

Preparations Remove solvent inlet tube from the adapter at the AIV

CAUTION

Small particles can permanently block the capillaries and valves of the module.

Damage of the module.

➔ Always filter solvents.

➔ Never use the module without solvent inlet filter.

NOTE

If the filter is in good condition the solvent will freely drip out of the solvent tube (hydrostatic pressure). If the solvent filter is partly blocked only very little solvent will drip out of the solvent tube.

WARNING

When opening capillary or tube fittings solvents may leak out.

The handling of toxic and hazardous solvents and reagents can bear health risks.

➔ Please observe appropriate safety procedures (for example, goggles, safety gloves and protective clothing) as described in the material handling and safety data sheet supplied by the solvent vendor, especially when toxic or hazardous solvents are used.

Cleaning the Solvent Filter

1. Remove the blocked solvent filter from the bottle-head assembly and place it in a beaker with concentrated nitric acid (35%) for one hour.
2. Thoroughly flush the filter with LC grade water (remove all nitric acid, some columns can be damaged by concentrated nitric acid).
3. Reinstall the filter.

Exchanging the Purge Valve Frit or the Purge Valve

When

Frit - when plunger seals are exchanged or when contaminated or blocked (pressure drop of > 10 bar across the frit at a flow rate of 5 mL/min of H_20 with purge valve opened)

Purge valve - if purge valve cannot be closed leak tight

Tools required

- Wrench 1/4 inch
- Wrench 14 mm
- Pair of tweezers or toothpick

Parts required

#	p/n	Description
1	01018-22707	PTFE frit (pack of 5)
1	G1312-60061	Purge valve assembly

1 Using a 1/4 inch wrench disconnect the pump outlet capillary at the purge valve.

2 Disconnect the waste tube. Beware of leaking solvents due to hydrostatic pressure.

3 Using the 14 mm wrench, unscrew the purge valve and remove it from the purge valve holder.

4 Remove the plastic cap with the gold seal from the purge valve.

5 Use a pair of tweezers or a toothpick to remove the frit.

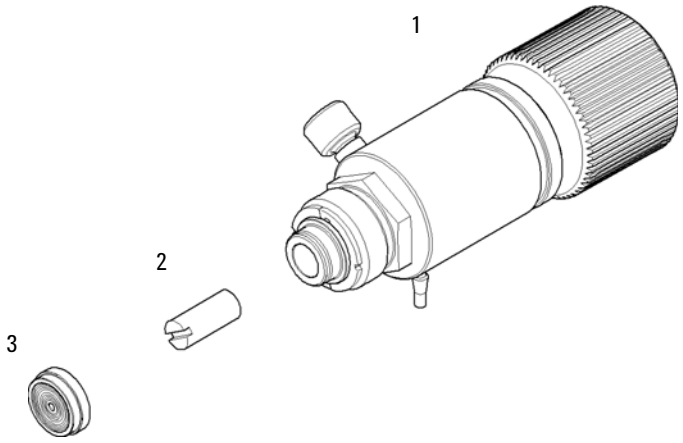

1	Valve body (Purge valve assembly (p/n G1312-60061))
2	PTFE frit (pack of 5) (p/n 01018-22707)
3	Seal cap (p/n 5067-4728)

6 Place a new frit into the purge valve with the slit facing the seal cap.

7 Replace the seal cap.

8 Insert the purge valve into the purge valve holder and orient he waste outlet nozzle downward as shown below.

9 Tighten the purge valve and reconnect outlet capillary and waste tubing.

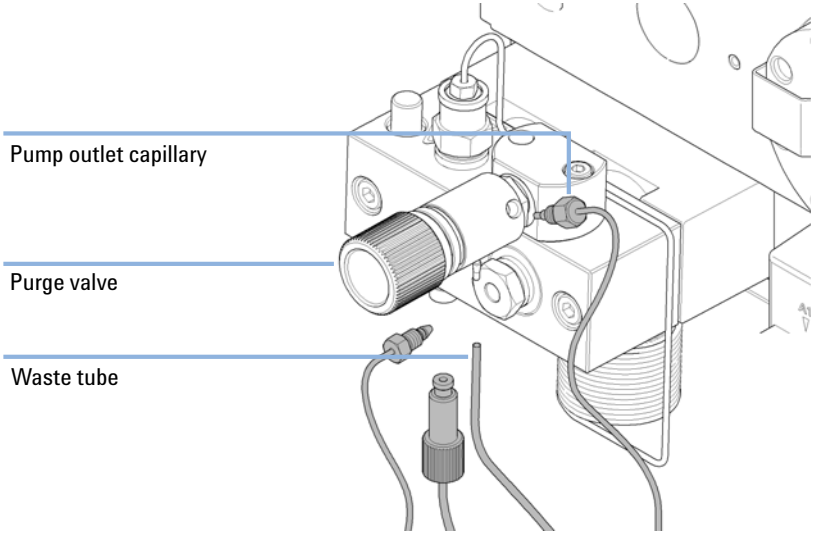

Figure 20 Exchanging the Purge Valve

Removing the Pump Head Assembly

When

- Exchanging pump seals
- Exchanging pistons
- Exchanging seals of the seal wash option

Tools required

Wrench 1/4 inch

3-mm hexagonal key

4-mm hexagonal key

1/4 inch slitted socket wrench

Preparations

Switch off the pump at the main power switch

CAUTION

Make sure that the pump head is not removed.

This may damage the pump drive.

➔ Never start the pump when the pump head is removed.

NOTE

Both pump head assemblies use the same internal components. In addition, pump head A is fitted with the purge valve. The following procedure describes the removal and disassembly of pump head A (left). For pump head B (right) proceed in the same way and skip steps that deal with the purge valve.

1 Remove the front cover.

2 2. Disconnect the capillaries at the back of the purge valve holder, the pump head adapter and the tube at the inlet valve. Beware of leaking solvents.

3 Using a 4-mm hexagonal key stepwise loosen and remove the two pump head screws.

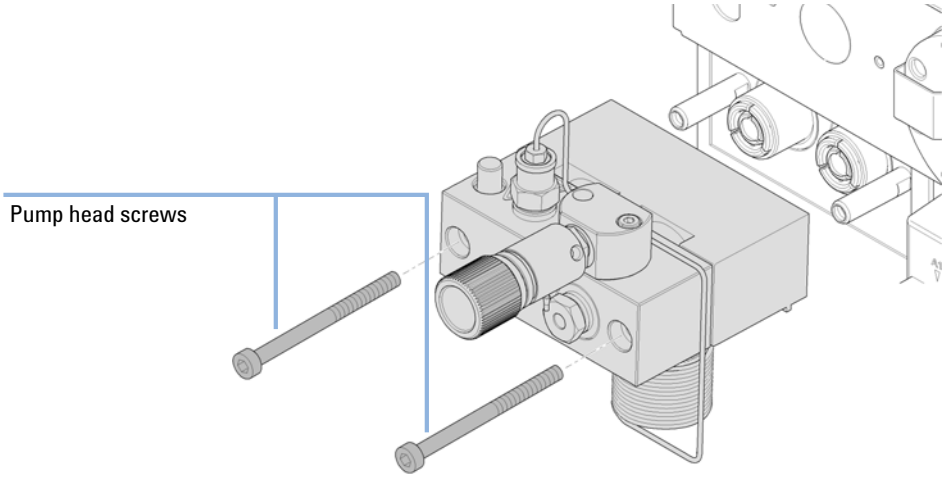

4 Using a 3-mm hexagonal key loosen the purge valve holder and remove it from pump head body.

Disassembling the pump head

1 Place the pump head with the front face onto a bench.
2 Open the two hex screws on the rear side with a 3 mm hex driver.
3 Open the PEEK lock screw two to three turns.
4 Pull the spring housing up and remove it from the pump head.

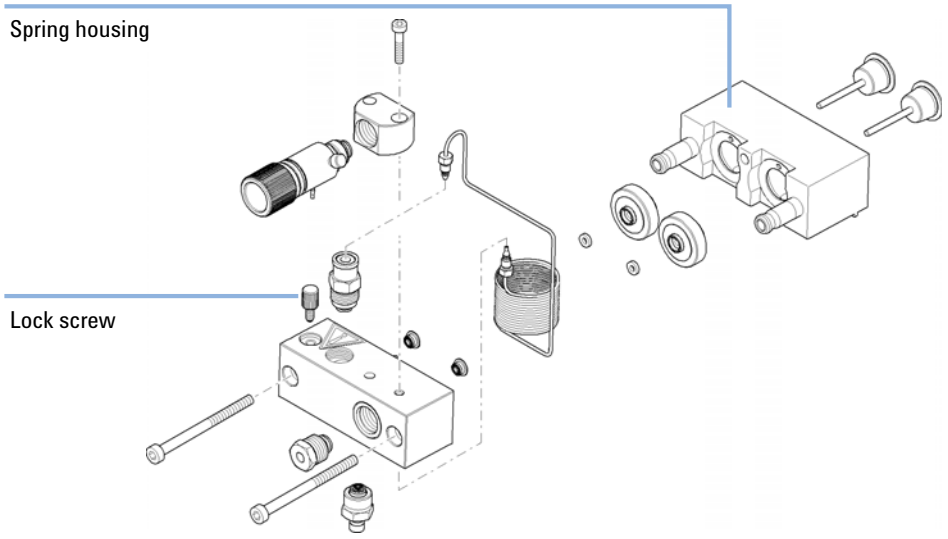

Exchanging the Pump Seals

When

Seals leaking, if indicated by the results of the pump test (check both pump heads individually!)

Tools required

- Wrench 1/4 inch
- 3-mm hexagonal key
- 4-mm hexagonal key
- Insert tool

Parts required

#	p/n	Description
1	0905-1503	Piston seal PTFE, carbon filled, black (pack of 2), default
1	0905-1420	PE seals (pack of 2)
1	5022-2159	Restriction capillary

Preparations

Switch off the pump at the main power switch

Remove the front cover to have access to the pump mechanics

1 Disassemble the pump head assembly, see "Disassembling the pump head" on page 142.

2 Use the insert tool to carefully remove the seal from the pump head.

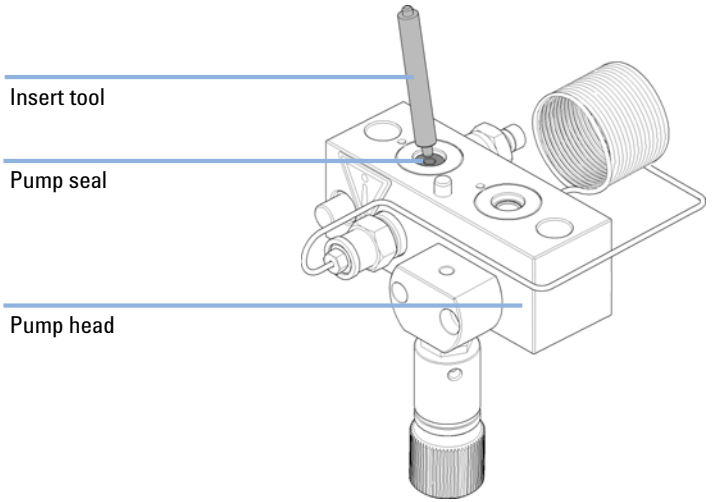

3 Using the insert tool insert the new seals into the pump head and press them firmly in position.

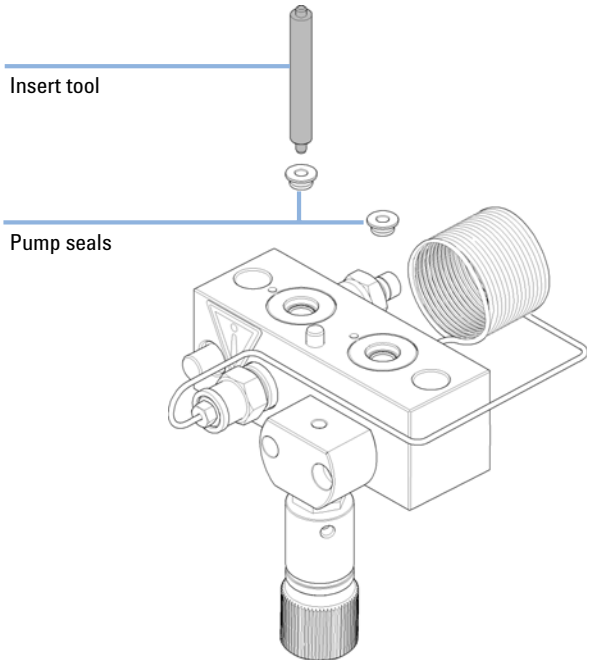

4 Reassemble the pump head assembly (see "Reinstalling the Pump Head Assembly" on page 149).

NOTE Reset the seal wear counter and liquimeter in the Agilent Lab Advisor.

Seal Wear-in Procedure

NOTE This procedure is required for standard seals only (5063-6589), but it will definitely damage the normal phase application seals (0905-1420).

1. Place a bottle with 100 ml of isopropanol in the solvent cabinet and place the tubing (including bottle head assembly) of the pump head that is supposed to be worn-in into the bottle.
2. Screw the adapter (0100-1847) to the AIV and connect the inlet tube from the bottle head directly to it.
3. Connect the restriction capillary (5022-2159) to the purge valve. Insert its other end into a waste container.
4. Open the purge valve and purge the system for 5 minutes with isopropanol at a flow rate of 2 mL/min.
5. Close the purge valve, set the flow to a rate adequate to achieve a pressure of 350 bar. Pump 15 min at this pressure to wear in the seals. The pressure can be monitored using your instrument control software or tool.
6. Turn OFF the pump, slowly open the purge valve to release the pressure from the system, disconnect the restriction capillary and reconnect the outlet capillary at the purge valve and the connecting tube from solvent selection valve (if installed) to the AIV.
7. Rinse your system with the solvent used for your next application.

Exchanging the Plungers

When When scratched

Tools required
- 3-mm hexagonal key
- 4-mm hexagonal key

Parts required

#	p/n	Description
1	5063-6586	Piston

Preparations
- Switch off binary pump at power switch
- Remove the front cover to have access to the pump mechanics
- "Removing the Pump Head Assembly" on page 140

1 Check the piston surface and remove any deposits or layers. Cleaning can be done with alcohol or tooth paste. Replace piston if scratched.

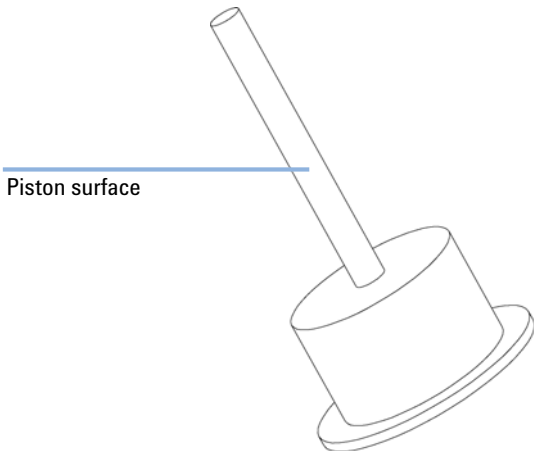

2 Reassemble the pump head assembly (see "Reinstalling the Pump Head Assembly" on page 149).

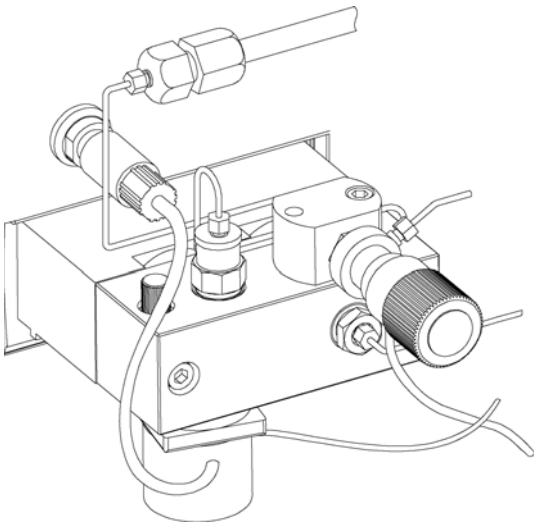

Exchanging the Wash Seals

When If leaking

Tools required
- hexagonal key3-mm
- 4-mm hexagonal key
- Insert tool
- Small flat-head screwdriver

Parts required

#	p/n	Description
1	0905-1175	Wash seal
6	5062-2484	Gasket, seal wash (pack of 6)

Preparations
- Switch off binary pump at power switch
- Remove the front cover to have access to the pump mechanics "Removing the Pump Head Assembly" on page 140

1 Remove the seal keeper and the seal wash support rings from the plunger housing. Remove the seal keeper from the support ring assembly.

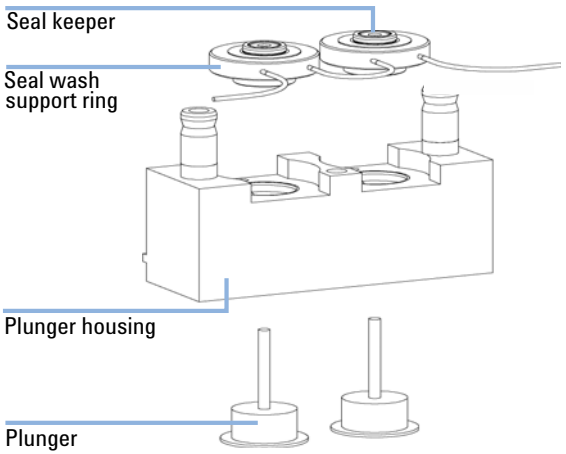

2 Using the blade of a flat head screwdriver remove seal wash gasket and the secondary seal from the support ring.

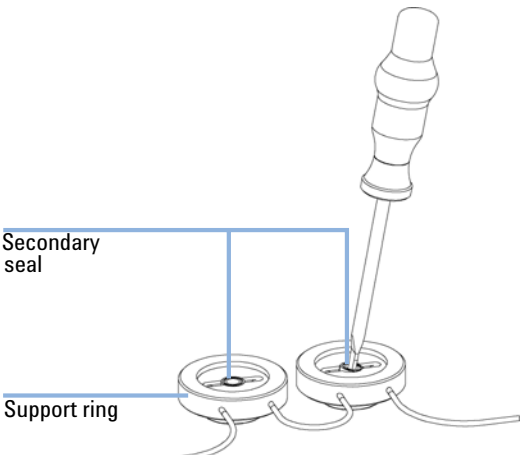

3 Using the insert tool press the seal (spring pointing upwards) into the recess of the support ring. Place a seal wash gasket in the recess of the support ring and replace the seal keeper.

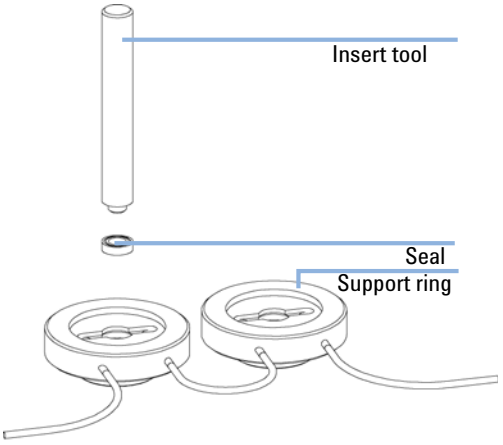

4 Reassemble the pump head assembly (see "Reinstalling the Pump Head Assembly" on page 149).

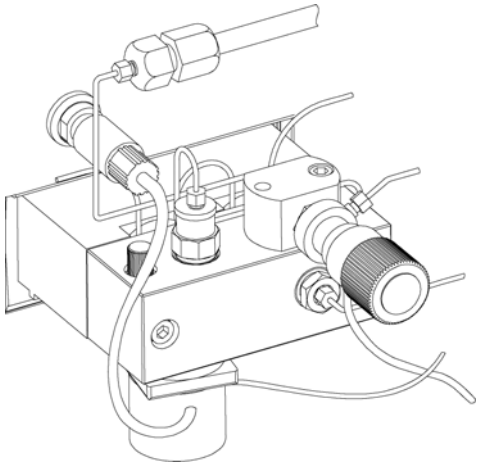

Reinstalling the Pump Head Assembly

When When reassembling the pump

Tools required
- 3-mm hexagonal key
- 4-mm hexagonal key

Parts required

#	p/n	Description
1	79846-65501	Pump head grease

1 Slide the pump head assembly onto the pump drive.

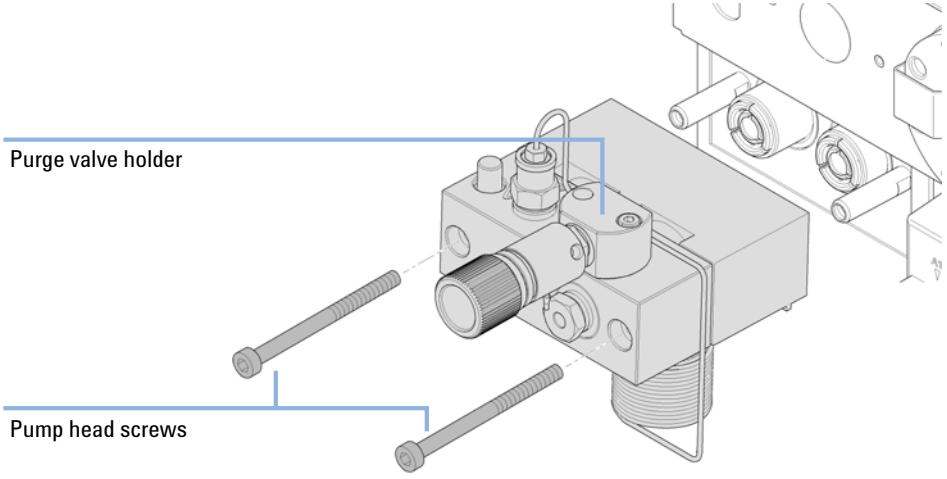

2 Using a 4 mm hexagonal key tighten the pump head screws stepwise with increasing torque.

3 Using a 3 mm hexagonal key fix the purge valve holder to the pump head.

4 Reconnect the tubing and capillaries to the connector.

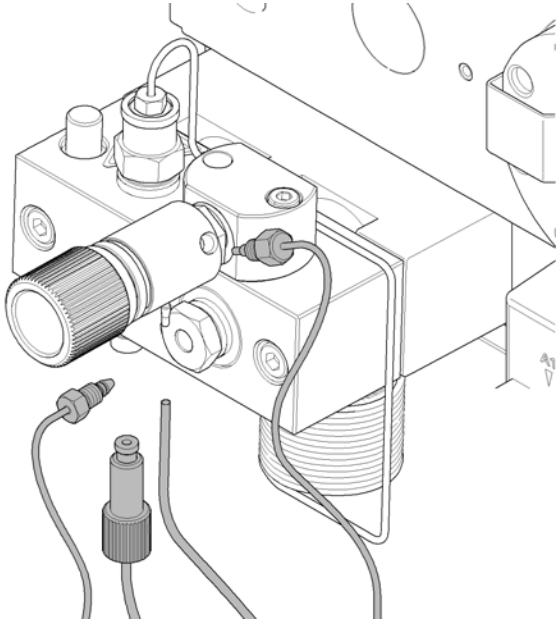

Exchanging the Inlet Valve

When If internally or externally leaking.

Tools required Wrench 14 mm

Parts required

#	Description
G1312-60066	Passive inlet valve

Preparations Switch off the pump at the main power switch

1 Remove the front cover.

2 Disconnect the solvent inlet tube at the inlet valve (beware of leaking solvents).

3 Using a 14-mm wrench, loosen the inlet valve and remove the valve from the pump head.

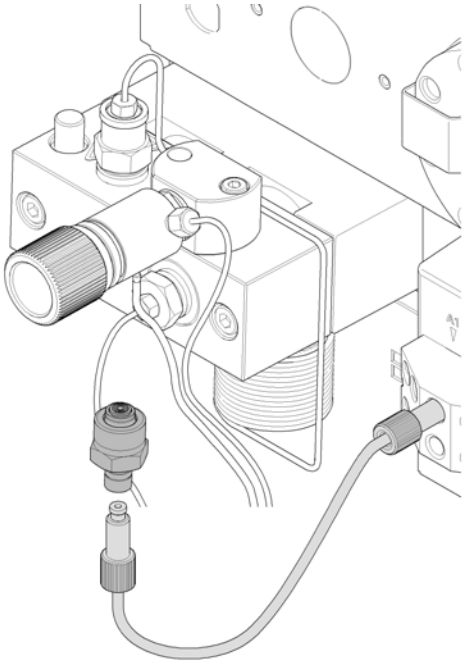

4 Screw the valve into the pump head. Using the 14 mm wrench turn the nut until it is hand tight.

5 Using the 14 mm wrench tighten the valve (do not over tighten).

6 Reinstall the front cover.

NOTE After an exchange of the valve it may be required to pump several mL of the solvent used in the current application before the flow stabilizes at a pressure ripple as low as it used to be when the system was still working properly.

Exchanging the Outlet Valve

When	if leaking internally
Tools required	tools:wrench 1/4 - 5/16 inchWrench 1/4 inch Wrench 14 mm
Parts required	**#** **Description** G1312-60067 Outlet valve, complete
Preparations	Switch off the pump at the main power switch

NOTE Before exchanging the outlet valve you can try to clean it in an ultrasonic bath. Remove the gold seal and put the plastic cap back on to protect the sealing surface from scratches. Place the valve in upright position (sitting on the plastic cap) in a small beaker with premixed water/isopropanol (50/50). Sonicate for 5 to 10 minutes. Replace the gold seal.

1 Using a 1/4 inch wrench disconnect the valve capillary from the outlet valve.

2 Unscrew the valve with the 14 mm wrench and remove it from the pump body.

3 In case you are only sonicating the valve, check the plastic cap and the gold seal for damage.

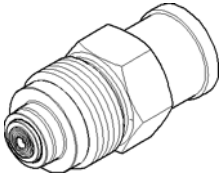

NOTE Check the gold seal. It should be exchanged when heavily deformed. Inspect the cap and replace it with a new one if cracks are visible.

4 Reinstall the outlet valve and tighten it.

5 Reconnect the valve capillary.

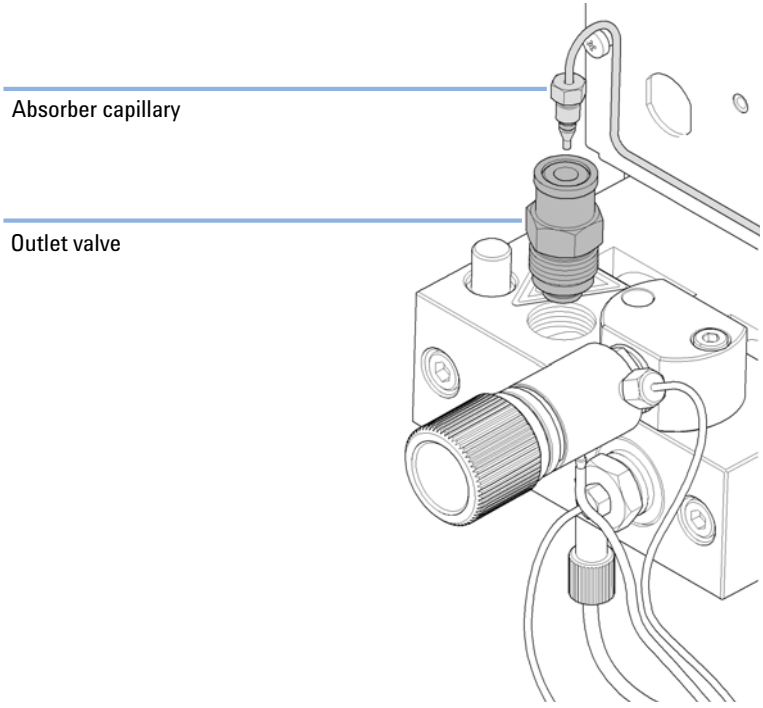

Installation of the Solvent Selection Valve Upgrade Kit

A solvent selection valve allows you choosing between 4 different solvents that can be used with a binary pump. The valve switches between two solvents A1 and A2 for channel A of the left pump head and two solvents B1 and B2 for channel B of the right pump head.

When Applicable modules: This kit is compatible to the 1260 Binary Pumps G1312B and G1312C.

Tools required Screwdriver Pozidriv #1

Parts required

#	Description
G1381-60000	Solvent Selection Valve Upgrade Kit

Preparations If required, remove solvent tubes from the inlet valves.

NOTE The figures below show a Binary Pump G1312B. The kit can be used similarly for the Binary Pump G1312C. Figures show passive inlet valves. If the pump uses active inlet valves, they can be used similarly.

1 Remove the front cover sheet by removing both screws.

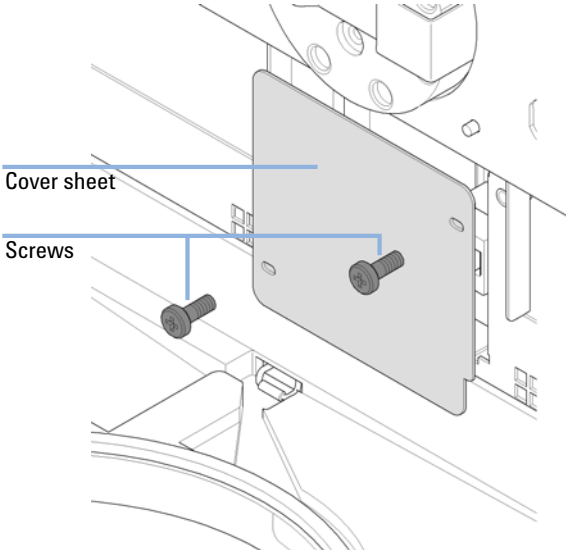

2 Plug in the connector of the solvent selection valve

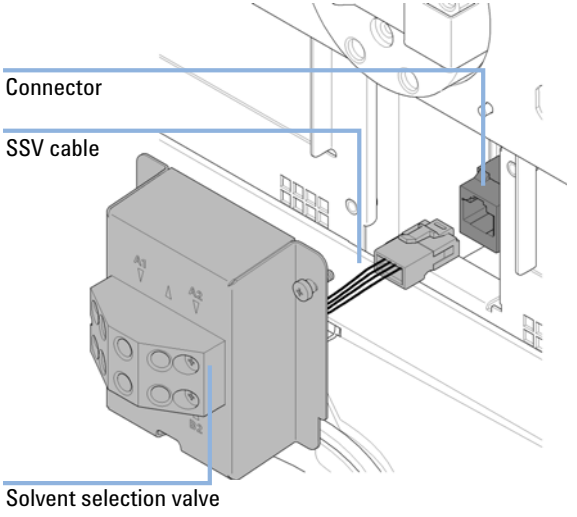

3 Install the Solvent selection assembly by fixing both indicated screws.

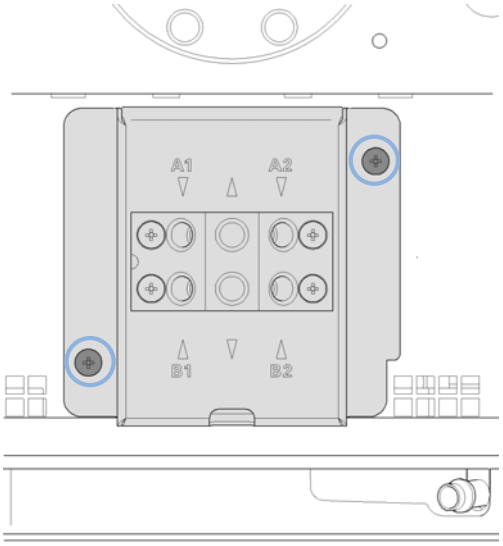

4 Connect the outlet for solvent A (upper row) to the inlet valve of the left pump head. Connect the outlet for solvent B (lower row) to the inlet valve of the right pump head. Put the solvent bottles into the solvent cabinet. Connect the bottle heads of solvents A1 and A2 to the inlets in the upper row, see labels on valve assembly. Connect the bottle heads of solvents B1 and B2 to the inlets in the lower row, see labels on valve assembly.

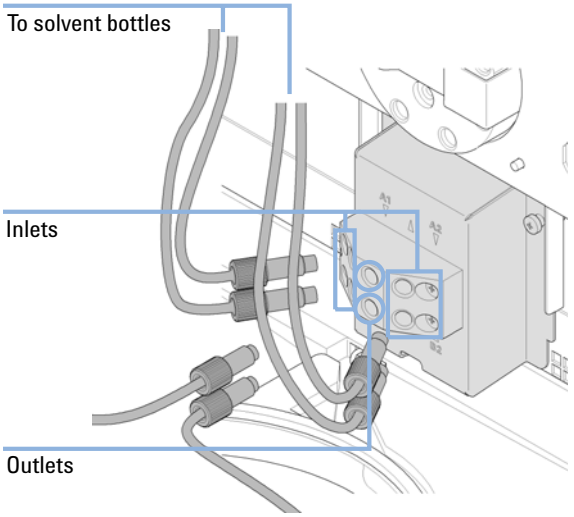

For controlling the solvent selection valve, please refer to the online help or user manual of your control software.

Exchanging the Solvent Selection Valve

When If leaking internally (croossflow between the ports), or if one of the channels is blocked

Tools required Screwdriver Pozidriv #1

Parts required

#	Description
G1381-60000	Solvent Selection Valve Upgrade Kit

Preparations Switch off the pump at the main power switch

1 Lift solvent bottles out of the solvent cabinet and place them on the table. Disconnect the solvent tubes from the solvent selection valve and empty the tubes into the bottles. Place the bottles back into the solvent cabinet.	**2** Disconnect all tubings from the solvent selection valve. 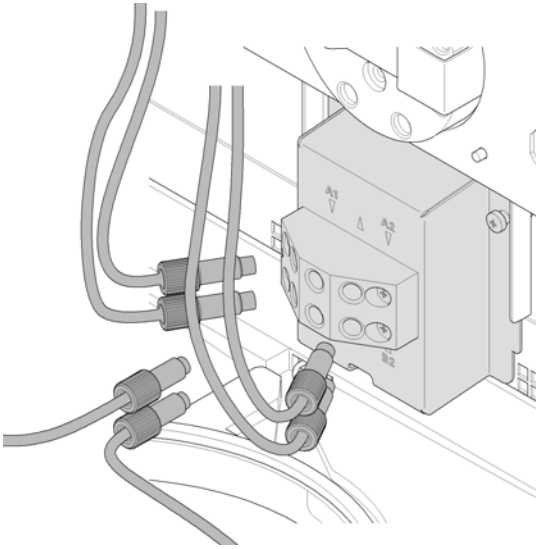

3 Using a Pozidriv screwdriver #1 loosen the holding screws of the valve holder.

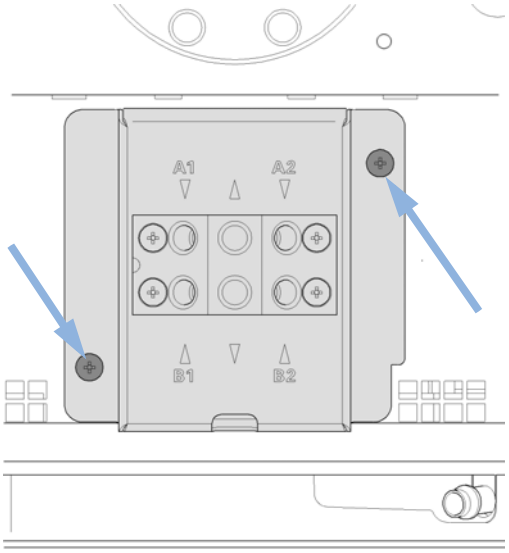

4 Carefully pull the valve holder out and disconnect the valve cable at the connector.

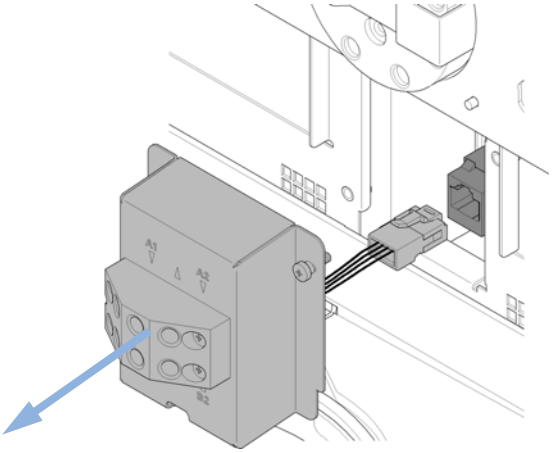

5 Exchange the defective solvent selection valve.

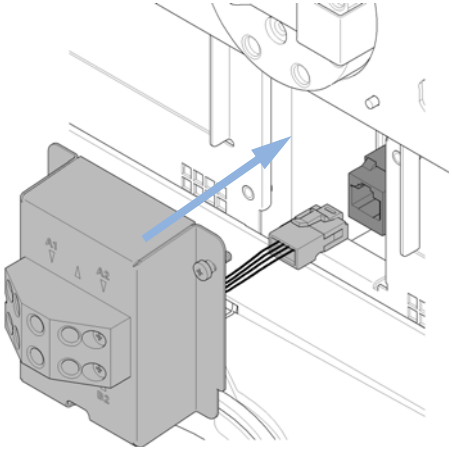

6 Tighten the screws of the valve holder.

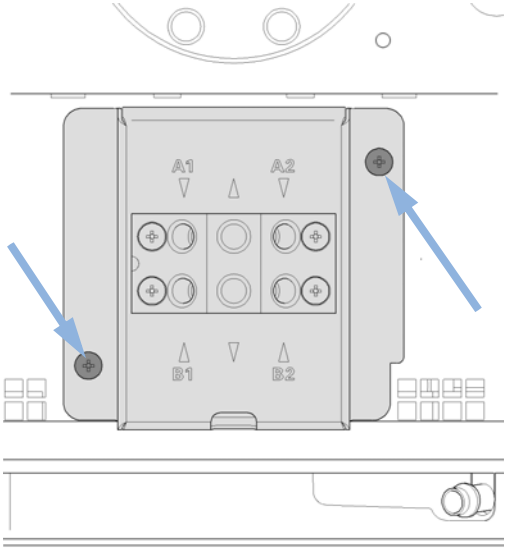

7 Reconnect all tubings to the solvent selection valve. 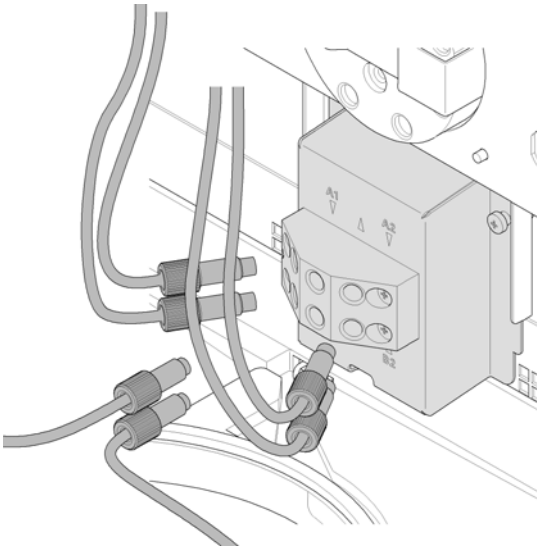	

NOTE After an exchange of the valve it may be required to pump several mL of solvent before the flow stabilizes at a pressure ripple as low as it used to be when the system was still working properly.

Installing the Active Seal Wash Option

When When installing seal wash option

Tools required
- 4-mm hexagonal key
- Screwdriver Pozidrive #1

Parts required

#	p/n	Description
1	G1311-68711	Active Seal Wash Option kit (Isocratic or Quaternary pump)
1	G1312-68711	Active Seal Wash Option kit (Binary pump)

Preparations
- Switch off the pump at the main power switch
- Remove the front cover
- Remove the top cover and foam

1 By using a screwdriver remove the metal plug in the z-panel.

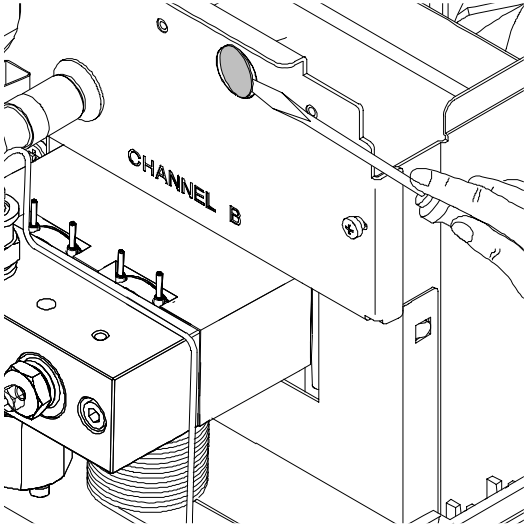

Figure 21 Removing the metal plug from the z-panel

2 Insert the socket, delivered with the Seal Wash pump assembly, into the hole on the z-panel.

3 Guide the wire of the active seal wash assembly through the hole and screw it onto the z-panel.

4 Guide the wire over the fan and plug the connector onto the mainboard connector P7.

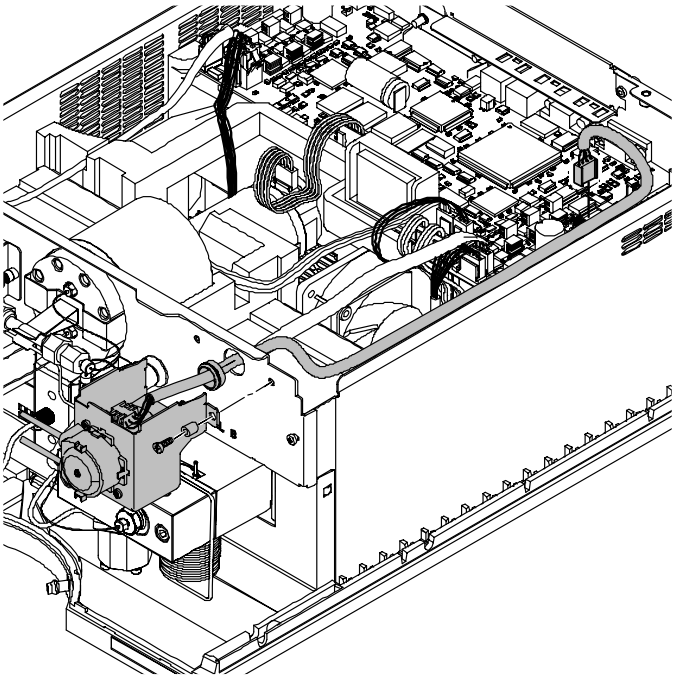

Figure 22 Wire connected to the mainboard.

5 Replace the foam and top cover.

6 Disconnect all capillaries and tubes from the pump head and disconnect the active inlet valve cable.

7 Using a 4-mm hexagonal key stepwise loosen and remove the two pump head screws and remove the pump head from the pump drive

8 Place the pump head, on the backside of the plungerhousing, on a flat surface. Loosen the lock screw (two revolutions) and while holding the lower half of the assembly carefully pull the pump head away from the plunger housing.

9 Remove the support rings from the plunger housing and lift the housing away from the plungers.

10 Install the support ring assembly from the active seal wash option kit into the plunger housing.

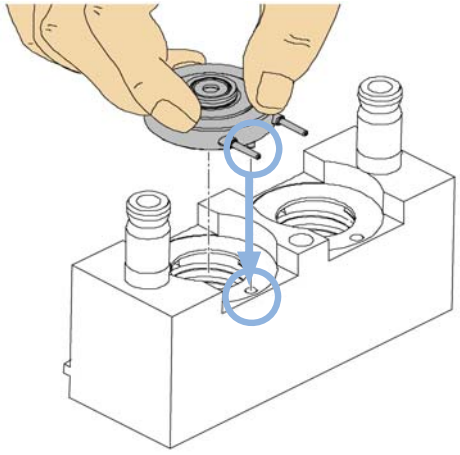

Figure 23 Inserting the active seal wash support rings.

11 Place the support rings on the plunger housing (plungers not installed) and snap the pump head and plunger housing together.

12 Insert the plungers and carefully press them into the seal.

13 Tighten the lock screw.

14 Slide the pump head assembly onto the metering drive. Apply a small amount of pump head grease (Pump head grease (p/n 79846-65501)) to the pumphead screws and the balls of the spindle drive. Tighten the pumphead screws stepwise with increasing torque

15 Reconnect all capillaries, tubes and the active inlet valve cable to its connector.

16 Route the wash inlet tube into a bottle filled with a mixture of distilled water and isopropanol (90/10) and place the bottle above the pump in the solvent cabinet.

17 Route the outlet of the wash tube into a waste container.

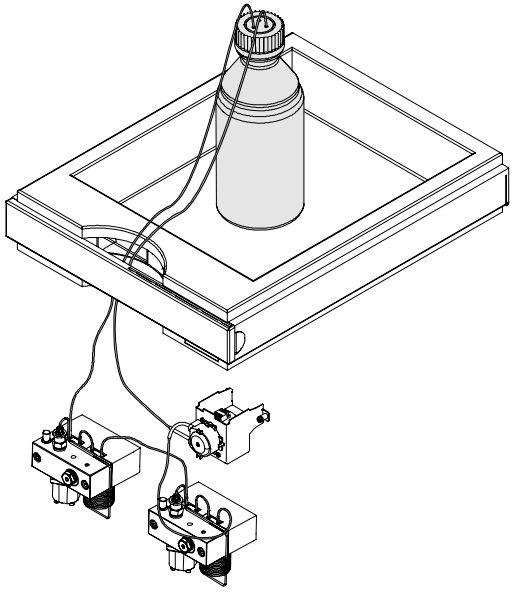

Figure 24 Pumphead after completed installation.

Exchanging the Active Inlet Valve

When If internally leaking (backflow)

Tools required Wrench 14 mm

Parts required

#	p/n	Description
1	G1312-60025	Active inlet valve body
1	5062-8562	Valve cartridge (400 bar)

Preparations Switch off binary pump at power switch

1. Remove the front cover.
2. Unplug the active inlet valve cable from the connector.
3. Disconnect the solvent inlet tube at the inlet valve (beware of leaking solvents).

NOTE BPs without the solvent selection valve (SSV) have an adapter installed between the solvent line and the active inlet valve (AIV). Disconnect the solvent tubes at the adapter and remove the adapter from the AIV.

4. Using a 14 mm wrench loosen the active inlet valve and remove the valve from pump head.
5. Insert the valve into the pump head. Using the 14 mm wrench turn the nut until it is hand tight.
6. Position the valve so that the solvent inlet tube connection points towards the front.

7 Using the 14 mm wrench tighten the nut by turning the valve in its final position (not more than a quarter turn). Do not overtighten the valve.

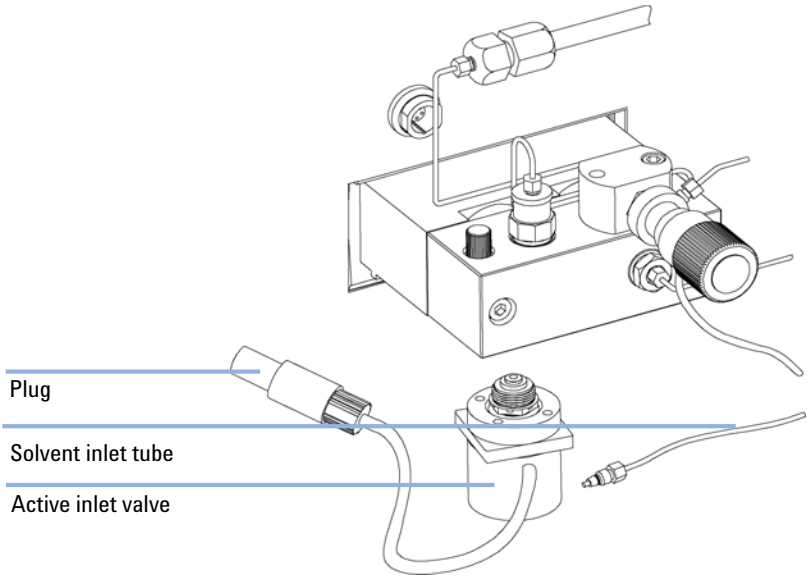

Figure 25 Exchanging the Active Inlet Valve

8 Reconnect the Active Inlet Valve cable to the connector at the Z-panel and the inlet tube to the valve.

9 Reinstall the front cover.

Exchanging the Active Inlet Valve Cartridge

When If internally leaking (backflow)

Tools required Wrench 14 mm

Parts required

#	p/n	Description
1	G1312-60025	Active inlet valve body
1	5062-8562	Valve cartridge (400 bar)

Preparations

- Switch off pump at the main power switch and unplug the power cable
- Use a solvent shutoff valve or lift up solvent filters for avoiding leakages

1 Remove the front cover.

2 Unplug the active inlet valve cable from the connector.

3 Disconnect the solvent inlet tube at the inlet valve (beware of leaking solvents).

NOTE BPs without the solvent selection valve (SSV) have an adapter installed between the solvent line and the active inlet valve (AIV). Disconnect the solvent tubes at the adapter and remove the adapter from the AIV.

4 Using a 14 mm wrench loosen the active inlet valve and remove the valve from pump head.

5 Using a pair of tweezers remove the valve cartridge from the actuator assembly.

6 Clean the area in the actuator assembly. Flush the cartridge area thouroughly.

7 Insert a new cartridge into the actuator assembly (make sure the valve cartridge is completely inserted into the actuator assembly).

8 Insert the valve into the pump head. Using the 14 mm wrench turn the nut until it is hand tight.

9 Position the valve so that the solvent inlet tube connection points towards the front.

10 Using the 14 mm wrench tighten the nut by turning the valve in its final position (do not overtighten the valve).

11 Reconnect the Active Inlet Valve cable to the connector at the Z-panel and the inlet tube to the valve.

12 Reinstall the front cover.

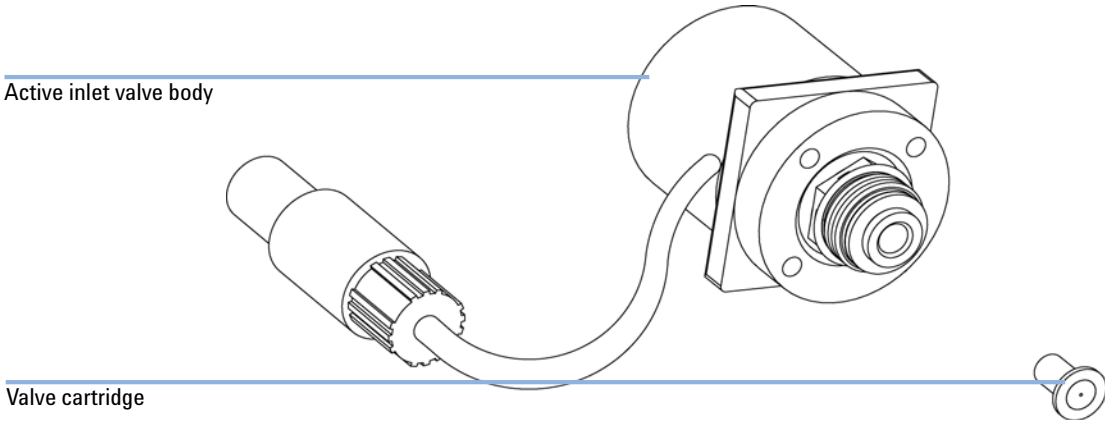

Figure 26 Active Inlet Valve Parts

NOTE After an exchange of the valve cartridge it may take several ml of pumping with the solvent used in the current application, before the flow stabilizes at a %-ripple as low as it used to be, when the system was still working properly.

Exchanging the Optional Interface Board

When Board defective

Parts required

#	Description
1	BCD (Interface) board

CAUTION

Electronic boards are static sensitive and should be handled with care so as not to damage them. Touching electronic boards and components can cause electrostatic discharge (ESD).

ESD can damage electronic boards and components.

➔ Be sure to hold the board by the edges and do not touch the electrical components. Always use an ESD protection (for example, an ESD wrist strap) when handling electronic boards and components.

1 Switch OFF the module at the main power switch. Unplug the module from main power.

2 Disconnect cables from the interface board connectors.

3 Loosen the screws. Slide out the interface board from the module.

4 Install the new interface board. Secure the screws.

5 Reconnect the cables to the board connector.

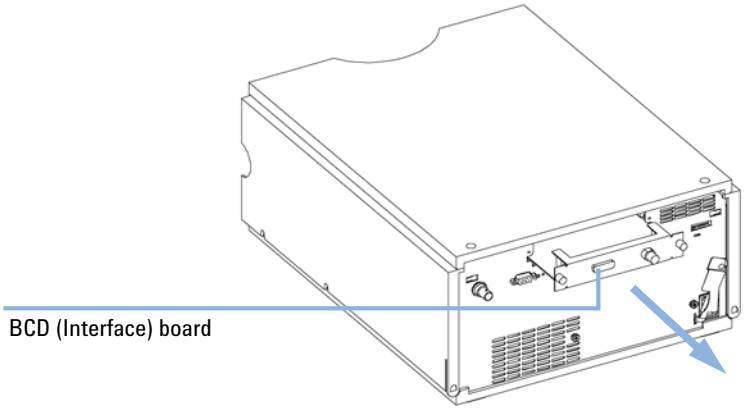

Figure 27 Exchanging the Interface Board

Replacing the Module's Firmware

When

The installation of newer firmware might be necessary
- if a newer version solves problems of older versions or
- to keep all systems on the same (validated) revision.

The installation of older firmware might be necessary
- to keep all systems on the same (validated) revision or
- if a new module with newer firmware is added to a system or
- if third part control software requires a special version.

Tools required

- LAN/RS-232 Firmware Update Tool or
- Agilent Diagnostic Software
- Instant Pilot G4208A (only if supported by module)

Parts required

#	Description
1	Firmware, tools and documentation from Agilent web site

Preparations

Read update documentation provided with the Firmware Update Tool.

To upgrade/downgrade the module's firmware carry out the following steps:

1 Download the required module firmware, the latest LAN/RS-232 FW Update Tool and the documentation from the Agilent web.
   - http://www.chem.agilent.com/scripts/cag_firmware.asp.

2 To load the firmware into the module follow the instructions in the documentation.

Module Specific Information

There is no specific information for this module.

10
Parts for Maintenance

Parts and Materials 172
Pump Head Assembly Without Seal Wash 175
Pump Head Assembly with Seal Wash Option 177
Outlet Valve 179
Purge Valve Assembly 180
Active Inlet Valve Assembly 181
Accessory Kit 182
Seal Wash Option G1312-68711 183
Solvent Cabinet 184
Bottle Head Assembly 185
Hydraulic Path with Solvent Selection Valve 186
Hydraulic Path without Solvent Selection Valve 188

This chapter provides information on parts for maintenance.

Parts and Materials

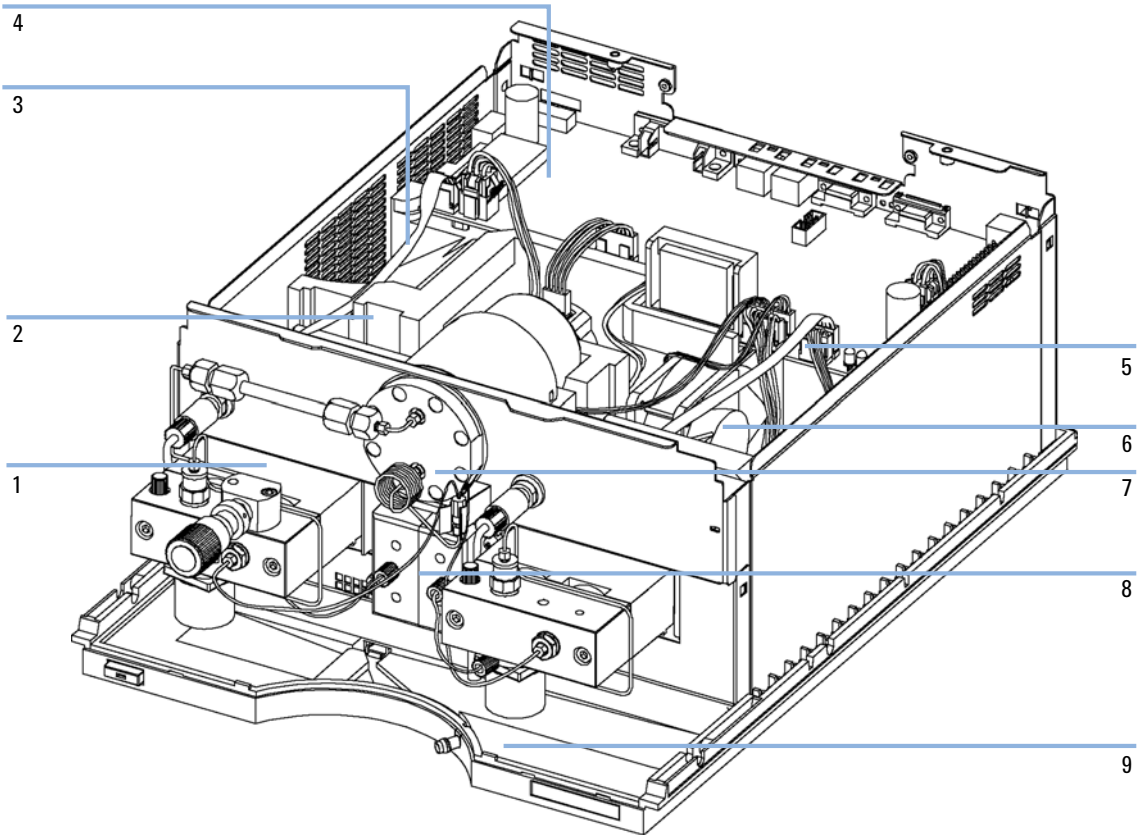

Figure 28 Overview of Main Assemblies (Front View)

Table 20 Repair Parts — Pump Housing and Main Assemblies (Front View)

Item	Description	Part Number
1	Pump head	p/n G1311-60004
2	Pump drive assembly Exchange assembly — pump drive	p/n G1311-60001 p/n G1311-69001

Table 20 Repair Parts — Pump Housing and Main Assemblies (Front View)

Item	Description	Part Number
3	Cable assembly — AIV to main board	p/n G1311-61601
4	High-pressure pump main board (HPM) Exchange assembly — HPM board	p/n G1312-66540 p/n G1312-69540
5	Cable assembly — solvent selection valve	p/n G1312-61602
6	Fan assembly	p/n 3160-1017
7	Damping unit	p/n 79835-60005
8	Solvent selection valve (half of a complete valve Screw, solvent selection valve	p/n G1312-60000 p/n 5022-2112
9	Leak pan - pump	p/n 5042-8590

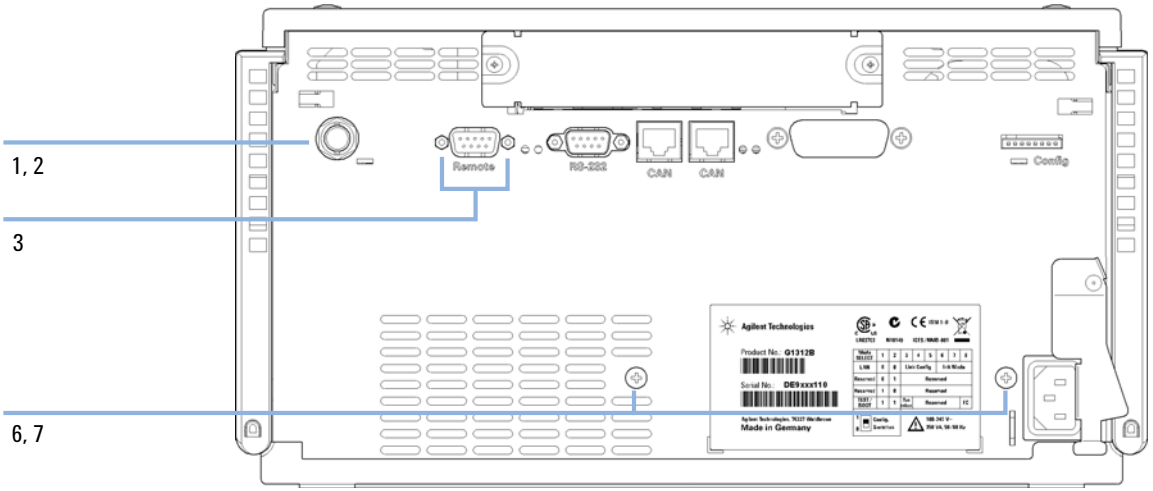

Figure 29 Overview of Main Assemblies (Rear View)

Table 21 Repair rear panel and connectors

Item	Description	Part Number
1	Nut M14 — analog output	p/n 2940-0256
2	Washer — analog output	p/n 2190-0699
3	Standoff — remote connector	p/n 1251-7788
4	Standoff — GPIB connector	p/n 0380-0643
5	Power supply (behind rear panel)	p/n 0950-2528
6	Screw, M4, 7 mm lg — power supply	p/n 0515-0910
7	Washer — power supply	p/n 2190-0409

Pump Head Assembly Without Seal Wash

Item	p/n	Description
1	5067-4695	Sapphire piston (default)
2	G1312-60062	Piston housing (incl. spring)
3	G4220-63015	Support Ring without Seal Wash
4	G4220-24013	Backup Ring for Support Ring
5	G1312-67300	Capillary, outlet valve to piston 2
6	0905-1503	Piston seal PTFE, carbon filled, black (pack of 2), default
7	G1312-25260	Pump housing
8	0515-0175	Mounting screw for manual purge valve holder, M4, 20 mm long
9	G1312-23200	Holder for manual purge valve
10	G1312-60061	Purge valve assembly
11	G1312-60067	Outlet valve, complete
12	5042-1303	Screw lock
13	G1312-60066	Passive inlet valve
14	G1312-23201	Adapter
15	0515-2118	Screw M5, 60 mm long

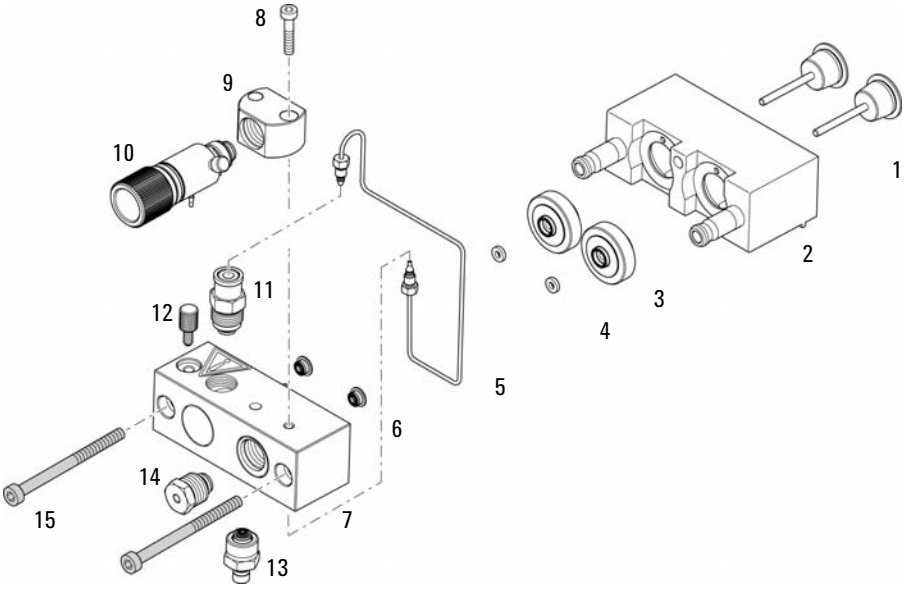

Figure 30 Pump Head Assembly Without Seal Wash

Pump Head Assembly with Seal Wash Option

Item	p/n	Description
1	5065-9953	Seal wash pump assembly
	5042-8507	Seal wash pump cartridge
2	5067-4695	Sapphire piston (default)
3	G1312-60062	Piston housing (incl. spring)
4	G4220-63010	Support Ring (Seal Wash)
5	0905-1175	Wash seal
6	01018-07102	Gasket (Seal wash)
7	G4220-26210	Seal Holder
8	G4220-24013	Backup Ring for Seal Holder
9	G1312-67300	Capillary, outlet valve to piston 2
10	0905-1503	Piston seal PTFE, carbon filled, black (pack of 2), default
11	0515-0175	Mounting screw for manual purge valve holder, M4, 20 mm long
12	G1312-23200	Holder for manual purge valve
13	G1312-60061	Purge valve assembly
14	G1312-60067	Outlet valve, complete
15	5042-1303	Screw lock
16	G1312-25260	Pump housing
17	G1312-60066	Passive inlet valve
18	G1312-23201	Adapter
19	0515-2118	Screw M5, 60 mm long

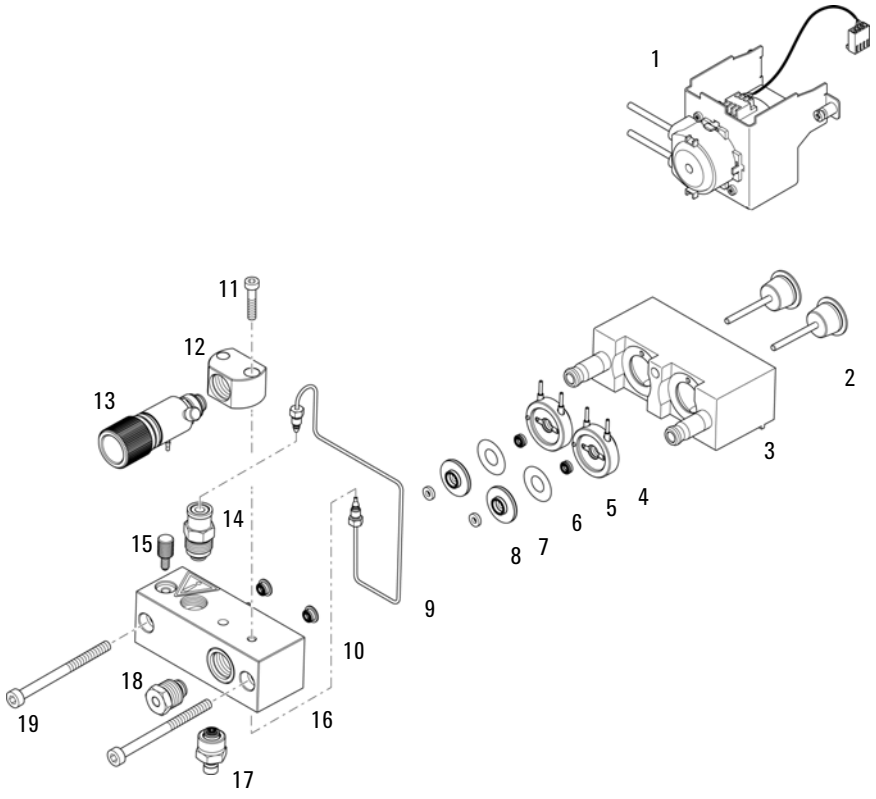

Figure 31 Pump Head Assembly With Seal Wash Option

Outlet Valve

p/n	Description
G1312-60067	Outlet valve, complete

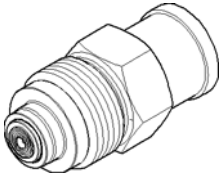

Figure 32 Outlet Valve

Purge Valve Assembly

Item	p/n	Description
1	G1312-60061	Purge valve assembly
2	01018-22707	PTFE frit (pack of 5)
3	5067-4728	Seal cap

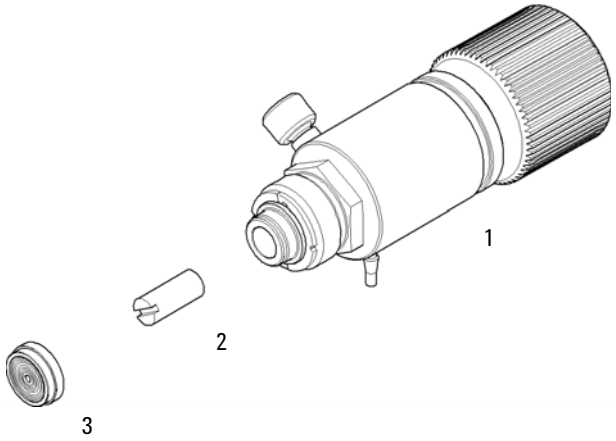

Active Inlet Valve Assembly

Item	p/n	Description
1	G1312-60025	Active inlet valve without cartridge
2	5062-8562	Active Inlet Valve Cartridge (400 bar)

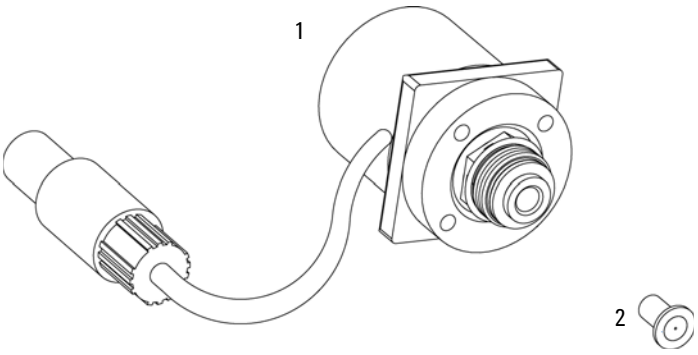

Figure 33 Active Inlet Valve Assembly

Accessory Kit

Accessory Kit (p/n G1312-68765)

p/n	Description
0890-1195	Drain tube
5063-6527	Tubing assembly, i.d. 6 mm, o.d. 9 mm, 1.2 m (to waste)
5181-1519	CAN cable, Agilent module to module, 1 m
5988-8453EN	Capillary/fitting starter kit brochure
9222-0519	Bag, plastic
G1312-87303	SS Capillary 400 x 0.17 mm, m/m, ps/ps
G1312-87304	SST capillary 700 mm, 0.17 mm i.d., 1/32 - 1/32
01200-60001	RRLC system configurator A.01.01 CD-ROM
G1311-90107	Algae note
5042-9954 (4x)	Tubing clip (2x), re-order 4/pk
G1311-60003 (4x)	Bottle-head assembly

Seal Wash Option G1312-68711

Table 22 Active Seal Wash Option kit for Binary pump

Description	Part Number
Seal wash pump assembly (includes pump casette and pump motor)	p/n 5065-9953
Pump casette (Silicone)	p/n 5042-8507
Support ring, seal wash (4 EA for Binary pump)	p/n 5062-2465
Secondary seal (pre-installed in support rings)	p/n 0905-1175
Gasket, wash seal (4 EA for binary pump) (for re-order pack of 6)	p/n 5062-2484
Seal keeper (4 EA for binary pump)	p/n 5001-3743
Silicone rubber tubing 1mm I.D. (3 m)	p/n 0890-1764
Seal (2 packs of 2 for binary pump)	p/n 5063-6589
Seals insert tool	p/n 01018-2370

Solvent Cabinet

Item	p/n	Description
1	5065-9981	Solvent cabinet, including all plastic parts
2	5043-0207	Name plate 1260
4	5042-8567	Leak pan
5	9301-1420	Solvent bottle, transparent
6	9301-1450	Solvent bottle, amber
7	G1311-60003	Bottle-head assembly

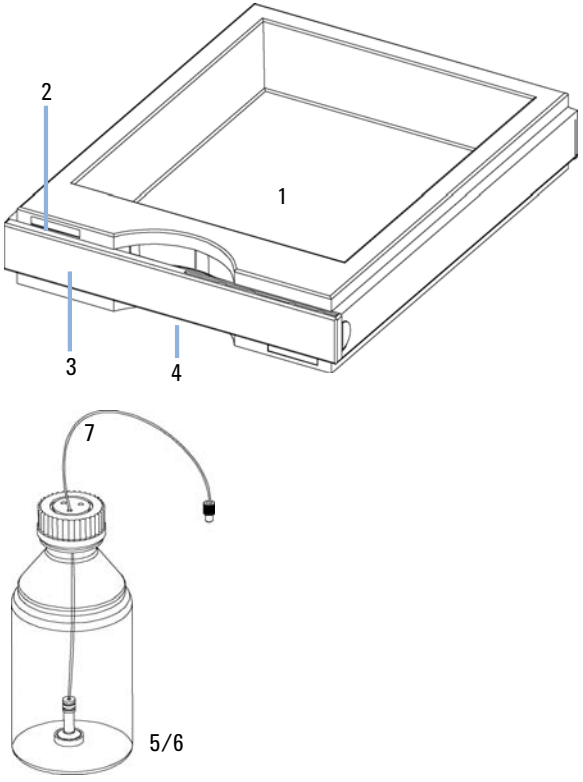

Figure 34 Solvent Cabinet Parts

Bottle Head Assembly

Item	p/n	Description
1	9301-1450	Solvent bottle, amber
2	9301-1420	Solvent bottle, transparent
3	G1311-60003	Bottle-head assembly
4	5063-6598	Ferrules with lock ring (10x)
5	5063-6599	Tube screw (10x)
6	5062-2483	Solvent tubing, 5 m
7	5062-8517	Inlet filter adapter (pack of 4)
8	5041-2168	Solvent inlet filter, 20 µm

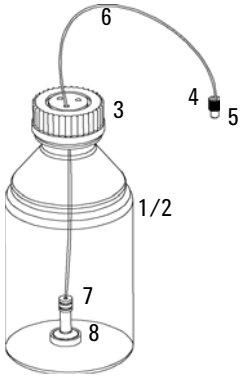

Figure 35 Bottle-Head Assembly Parts

Hydraulic Path with Solvent Selection Valve

Table 23 Hydraulic Path with Solvent Selection Valve

Item	Description	Part Number
1	Capillary, mixer to purge valve	p/n G1312-67308
2	Capillary, outlet ball valve to piston 2	p/n G1312-67300
3	Mixer	p/n G1312-87330
4	Bottle-head assembly	p/n G1311-60003
5	Capillary, damper to mixer	p/n G1312-67307
6	Restriction capillary	p/n G1312-67304
7	Mixing capillary	p/n G1312-67302
8	Connection tube	p/n G1311-67304
9	Capillary, pump to injector device Capillary, pump to thermostattable autosampler	p/n G1312-67305 p/n G1329-87300
10	Waste tube, 5 m	p/n 5062-2461
[1]	Capillary, damper to purge valve	p/n G1312-67301

[1] Capillary needed when pump used without mixer installed

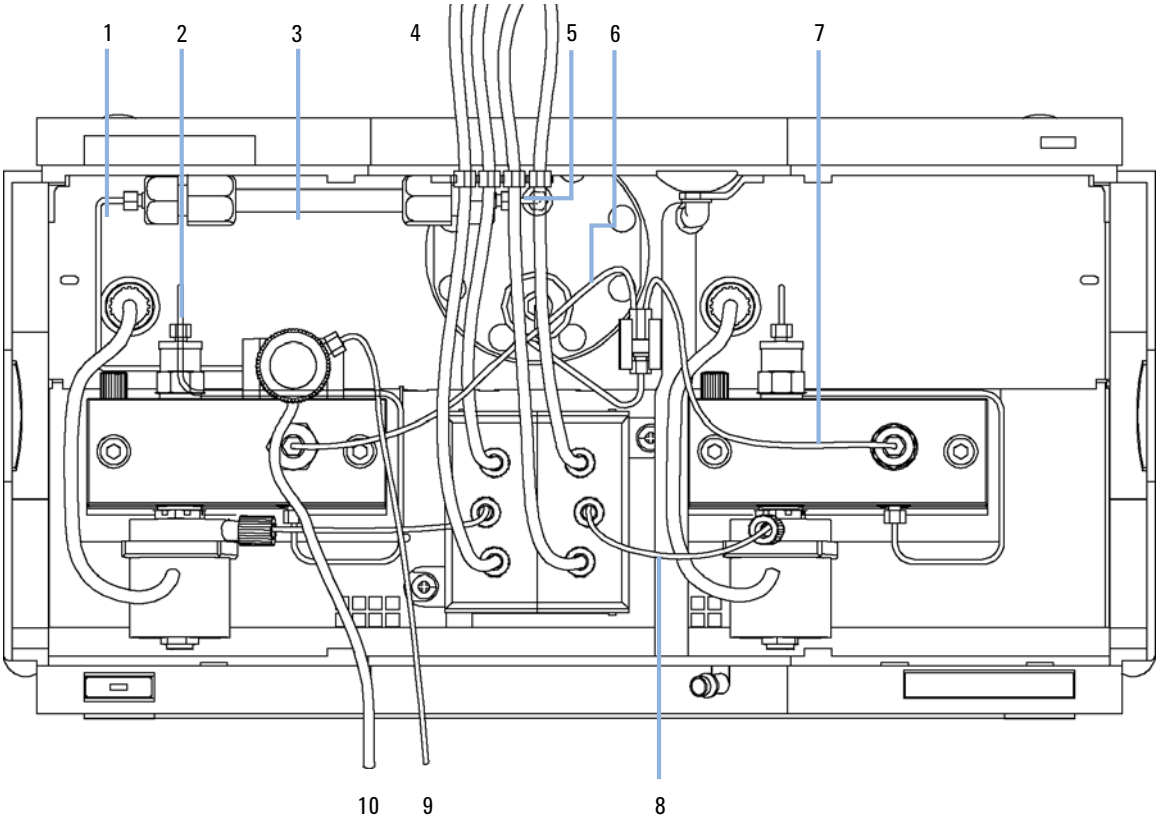

Figure 36 Hydraulic Path with Solvent Selection Valve

Hydraulic Path without Solvent Selection Valve

Table 24 Hydraulic Path without Solvent Selection Valve

Item	Description	Part Number
1	Capillary, mixer to purge valve	p/n G1312-67308
2	Capillary, outlet ball valve to piston 2	p/n G1312-67300
3	Mixer	p/n G1312-87330
4	Bottle-head assembly	p/n G1311-60003
5	Capillary, damper to mixer	p/n G1312-67307
6	Restriction capillary	p/n G1312-67304
7	Mixing capillary	p/n G1312-67302
8	Capillary, pump to injection device Capillary, pump to thermostattable autosampler	p/n G1312-67305 p/n G1329-87300
9	Waste tube, 5 m	p/n 5062-2461
10	Adapter, AIV to bottle-head assembly	p/n 0100-1847
[1]	Capillary, damper to purge valve	p/n G1312-67301

[1] Capillary needed when pump used without mixer installed

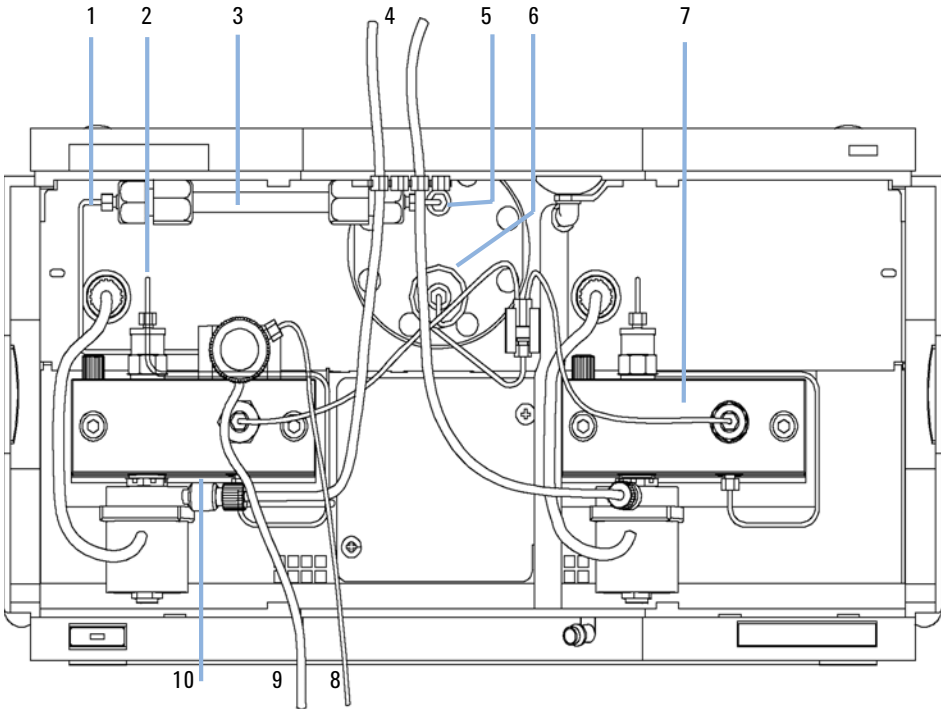

Figure 37 Hydraulic Path without Solvent Selection Valve

11
Identifying Cables

Cable Overview 192
Analog Cables 194
Remote Cables 196
BCD Cables 199
CAN/LAN Cables 201
External Contact Cable 202
Agilent Module to PC 203
Agilent 1200 Module to Printer 204

This chapter provides information on cables used with the Agilent 1200 Infinity Series modules.

Cable Overview

NOTE Never use cables other than the ones supplied by Agilent Technologies to ensure proper functionality and compliance with safety or EMC regulations.

Analog cables

p/n	Description
35900-60750	Agilent module to 3394/6 integrators
35900-60750	Agilent 35900A A/D converter
01046-60105	Analog cable (BNC to general purpose, spade lugs)

Remote cables

p/n	Description
03394-60600	Agilent module to 3396A Series I integrators
	3396 Series II / 3395A integrator, see details in section "Remote Cables" on page 196
03396-61010	Agilent module to 3396 Series III / 3395B integrators
5061-3378	Agilent module to Agilent 35900 A/D converters (or HP 1050/1046A/1049A)
01046-60201	Agilent module to general purpose

BCD cables

p/n	Description
03396-60560	Agilent module to 3396 integrators
G1351-81600	Agilent module to general purpose

CAN caables

p/n	Description
5181-1516	CAN cable, Agilent module to module, 0.5 m
5181-1519	CAN cable, Agilent module to module, 1 m

LAN cables

p/n	Description
5023-0203	Cross-over network cable, shielded, 3 m (for point to point connection)
5023-0202	Twisted pair network cable, shielded, 7 m (for point to point connection)

External Contact Cable

p/n	Description
G1103-61611	External contact cable - Agilent module interface board to general purposes

RS-232 cables

p/n	Description
G1530-60600	RS-232 cable, 2 m
RS232-61600	RS-232 cable, 2.5 m Instrument to PC, 9-to-9 pin (female). This cable has special pin-out, and is not compatible with connecting printers and plotters. It's also called "Null Modem Cable" with full handshaking where the wiring is made between pins 1-1, 2-3, 3-2, 4-6, 5-5, 6-4, 7-8, 8-7, 9-9.
5181-1561	RS-232 cable, 8 m

Analog Cables



One end of these cables provides a BNC connector to be connected to Agilent modules. The other end depends on the instrument to which connection is being made.

Agilent Module to 3394/6 Integrators

p/n 35900-60750	Pin 3394/6	Pin Agilent module	Signal Name
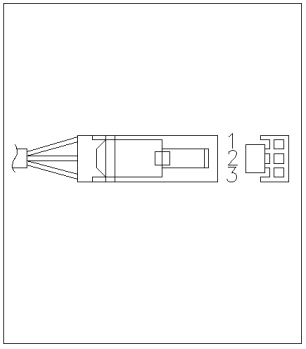	1		Not connected
	2	Shield	Analog -
	3	Center	Analog +

Agilent Module to BNC Connector

p/n 8120-1840	Pin BNC	Pin Agilent module	Signal Name
	Shield	Shield	Analog -
	Center	Center	Analog +

Agilent Module to General Purpose

p/n 01046-60105	Pin 3394/6	Pin Agilent module	Signal Name
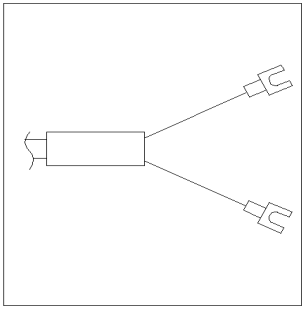	1		Not connected
	2	Black	Analog -
	3	Red	Analog +

Remote Cables



One end of these cables provides a Agilent Technologies APG (Analytical Products Group) remote connector to be connected to Agilent modules. The other end depends on the instrument to be connected to.

Agilent Module to 3396A Integrators

p/n 03394-60600	Pin 3394	Pin Agilent module	Signal Name	Active (TTL)
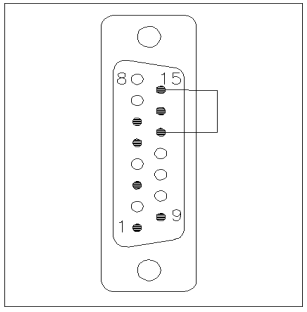	9	1 - White	Digital ground	
	NC	2 - Brown	Prepare run	Low
	3	3 - Gray	Start	Low
	NC	4 - Blue	Shut down	Low
	NC	5 - Pink	Not connected	
	NC	6 - Yellow	Power on	High
	5,14	7 - Red	Ready	High
	1	8 - Green	Stop	Low
	NC	9 - Black	Start request	Low
	13, 15		Not connected	

Agilent Module to 3396 Series II / 3395A Integrators

Use the cable Agilent module to 3396A Series I integrators (p/n 03394-60600) and cut pin #5 on the integrator side. Otherwise the integrator prints START; not ready.

Agilent Module to 3396 Series III / 3395B Integrators

p/n 03396-61010	Pin 33XX	Pin Agilent module	Signal Name	Active (TTL)
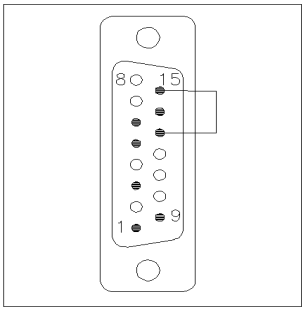	9	1 - White	Digital ground	
	NC	2 - Brown	Prepare run	Low
	3	3 - Gray	Start	Low
	NC	4 - Blue	Shut down	Low
	NC	5 - Pink	Not connected	
	NC	6 - Yellow	Power on	High
	14	7 - Red	Ready	High
	4	8 - Green	Stop	Low
	NC	9 - Black	Start request	Low
	13, 15		Not connected	

Agilent Module to Agilent 35900 A/D Converters

p/n 5061-3378	Pin 35900 A/D	Pin Agilent module	Signal Name	Active (TTL)
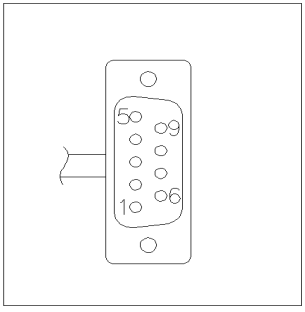	1 - White	1 - White	Digital ground	
	2 - Brown	2 - Brown	Prepare run	Low
	3 - Gray	3 - Gray	Start	Low
	4 - Blue	4 - Blue	Shut down	Low
	5 - Pink	5 - Pink	Not connected	
	6 - Yellow	6 - Yellow	Power on	High
	7 - Red	7 - Red	Ready	High
	8 - Green	8 - Green	Stop	Low
	9 - Black	9 - Black	Start request	Low

Agilent Module to General Purpose

p/n 01046-60201	Pin Universal	Pin Agilent module	Signal Name	Active (TTL)
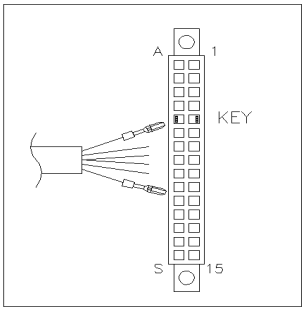		1 - White	Digital ground	
		2 - Brown	Prepare run	Low
		3 - Gray	Start	Low
		4 - Blue	Shut down	Low
		5 - Pink	Not connected	
		6 - Yellow	Power on	High
		7 - Red	Ready	High
		8 - Green	Stop	Low
		9 - Black	Start request	Low

BCD Cables

One end of these cables provides a 15-pin BCD connector to be connected to the Agilent modules. The other end depends on the instrument to be connected to

Agilent Module to General Purpose

p/n G1351-81600	Wire Color	Pin Agilent module	Signal Name	BCD Digit
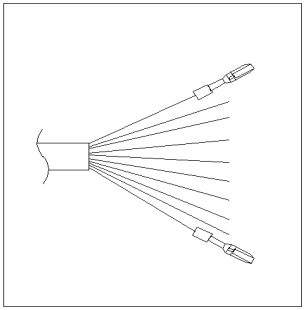	Green	1	BCD 5	20
	Violet	2	BCD 7	80
	Blue	3	BCD 6	40
	Yellow	4	BCD 4	10
	Black	5	BCD 0	1
	Orange	6	BCD 3	8
	Red	7	BCD 2	4
	Brown	8	BCD 1	2
	Gray	9	Digital ground	Gray
	Gray/pink	10	BCD 11	800
	Red/blue	11	BCD 10	400
	White/green	12	BCD 9	200
	Brown/green	13	BCD 8	100
	not connected	14		
	not connected	15	+ 5 V	Low

Agilent Module to 3396 Integrators

p/n 03396-60560	Pin 3396	Pin Agilent module	Signal Name	BCD Digit
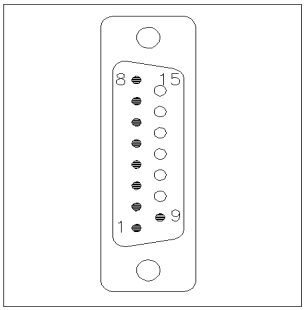	1	1	BCD 5	20
	2	2	BCD 7	80
	3	3	BCD 6	40
	4	4	BCD 4	10
	5	5	BCD0	1
	6	6	BCD 3	8
	7	7	BCD 2	4
	8	8	BCD 1	2
	9	9	Digital ground	
	NC	15	+ 5 V	Low

CAN/LAN Cables



Both ends of this cable provide a modular plug to be connected to Agilent modules CAN or LAN connectors.

CAN Cables

p/n	Description
5181-1516	CAN cable, Agilent module to module, 0.5 m
5181-1519	CAN cable, Agilent module to module, 1 m

LAN Cables

p/n	Description
5023-0203	Cross-over network cable, shielded, 3 m (for point to point connection)
5023-0202	Twisted pair network cable, shielded, 7 m (for point to point connection)

External Contact Cable



One end of this cable provides a 15-pin plug to be connected to Agilent modules interface board. The other end is for general purpose.

Agilent Module Interface Board to general purposes

p/n G1103-61611	Color	Pin Agilent module	Signal Name
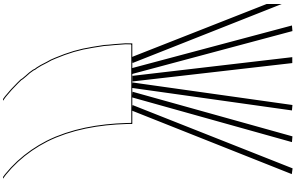	White	1	EXT 1
	Brown	2	EXT 1
	Green	3	EXT 2
	Yellow	4	EXT 2
	Grey	5	EXT 3
	Pink	6	EXT 3
	Blue	7	EXT 4
	Red	8	EXT 4
	Black	9	Not connected
	Violet	10	Not connected
	Grey/pink	11	Not connected
	Red/blue	12	Not connected
	White/green	13	Not connected
	Brown/green	14	Not connected
	White/yellow	15	Not connected

Agilent Module to PC

p/n	Description
G1530-60600	RS-232 cable, 2 m
RS232-61600	RS-232 cable, 2.5 m Instrument to PC, 9-to-9 pin (female). This cable has special pin-out, and is not compatible with connecting printers and plotters. It's also called "Null Modem Cable" with full handshaking where the wiring is made between pins 1-1, 2-3, 3-2, 4-6, 5-5, 6-4, 7-8, 8-7, 9-9.
5181-1561	RS-232 cable, 8 m

Agilent 1200 Module to Printer

p/n	Description
5181-1529	Cable Printer Serial & Parallel, is a SUB-D 9 pin female vs. Centronics connector on the other end (NOT FOR FW UPDATE). For use with G1323 Control Module.

12
Appendix

General Safety Information 206
The Waste Electrical and Electronic Equipment Directive 209
Batteries Information 210
Radio Interference 211
Sound Emission 212
Solvent Information 213
Agilent Technologies on Internet 214

This chapter provides addition information on safety, legal and web.

General Safety Information

The following general safety precautions must be observed during all phases of operation, service, and repair of this instrument. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture, and intended use of the instrument. Agilent Technologies assumes no liability for the customer's failure to comply with these requirements.

WARNING

Ensure the proper usage of the equipment.

The protection provided by the equipment may be impaired.

➔ The operator of this instrument is advised to use the equipment in a manner as specified in this manual.

Safety Standards

This is a Safety Class I instrument (provided with terminal for protective earthing) and has been manufactured and tested according to international safety standards.

Operation

Before applying power, comply with the installation section. Additionally the following must be observed.

Do not remove instrument covers when operating. Before the instrument is switched on, all protective earth terminals, extension cords, auto-transformers, and devices connected to it must be connected to a protective earth via a ground socket. Any interruption of the protective earth grounding will cause a potential shock hazard that could result in serious personal injury. Whenever it is likely that the protection has been impaired, the instrument must be made inoperative and be secured against any intended operation.

Make sure that only fuses with the required rated current and of the specified type (normal blow, time delay, and so on) are used for replacement. The use of repaired fuses and the short-circuiting of fuse holders must be avoided.

Some adjustments described in the manual, are made with power supplied to the instrument, and protective covers removed. Energy available at many points may, if contacted, result in personal injury.

Any adjustment, maintenance, and repair of the opened instrument under voltage should be avoided whenever possible. When inevitable, this has to be carried out by a skilled person who is aware of the hazard involved. Do not attempt internal service or adjustment unless another person, capable of rendering first aid and resuscitation, is present. Do not replace components with power cable connected.

Do not operate the instrument in the presence of flammable gases or fumes. Operation of any electrical instrument in such an environment constitutes a definite safety hazard.

Do not install substitute parts or make any unauthorized modification to the instrument.

Capacitors inside the instrument may still be charged, even though the instrument has been disconnected from its source of supply. Dangerous voltages, capable of causing serious personal injury, are present in this instrument. Use extreme caution when handling, testing and adjusting.

When working with solvents please observe appropriate safety procedures (e.g. goggles, safety gloves and protective clothing) as described in the material handling and safety data sheet by the solvent vendor, especially when toxic or hazardous solvents are used.

Safety Symbols

Table 25 Safety Symbols

Symbol	Description
	The apparatus is marked with this symbol when the user should refer to the instruction manual in order to protect risk of harm to the operator and to protect the apparatus against damage.
	Indicates dangerous voltages.
	Indicates a protected ground terminal.
	Indicates eye damage may result from directly viewing the light produced by the deuterium lamp used in this product.
	The apparatus is marked with this symbol when hot surfaces are available and the user should not touch it when heated up.

WARNING

A WARNING

alerts you to situations that could cause physical injury or death.

➔ Do not proceed beyond a warning until you have fully understood and met the indicated conditions.

CAUTION

A CAUTION

alerts you to situations that could cause loss of data, or damage of equipment.

➔ Do not proceed beyond a caution until you have fully understood and met the indicated conditions.

The Waste Electrical and Electronic Equipment Directive

Abstract

The Waste Electrical and Electronic Equipment (WEEE) Directive (2002/96/EC), adopted by EU Commission on 13 February 2003, is introducing producer responsibility on all electric and electronic appliances starting with 13 August 2005.

NOTE

This product complies with the WEEE Directive (2002/96/EC) marking requirements. The affixed label indicates that you must not discard this electrical/electronic product in domestic household waste.

Product Category:

With reference to the equipment types in the WEEE Directive Annex I, this product is classed as a Monitoring and Control Instrumentation product.

NOTE

Do not dispose off in domestic household waste

To return unwanted products, contact your local Agilent office, or see www.agilent.com for more information.

Batteries Information

WARNING

Lithium batteries may not be disposed-off into the domestic waste. Transportation of discharged Lithium batteries through carriers regulated by IATA/ICAO, ADR, RID, IMDG is not allowed.

Danger of explosion if battery is incorrectly replaced.

➔ Discharged Lithium batteries shall be disposed off locally according to national waste disposal regulations for batteries.

➔ Replace only with the same or equivalent type recommended by the equipment manufacturer.

WARNING

Lithiumbatteri - Eksplosionsfare ved fejlagtig håndtering.

Udskiftning må kun ske med batteri af samme fabrikat og type.

➔ Lever det brugte batteri tilbage til leverandøren.

WARNING

Lithiumbatteri - Eksplosionsfare.

Ved udskiftning benyttes kun batteri som anbefalt av apparatfabrikanten.

➔ Brukt batteri returneres appararleverandoren.

NOTE

Bij dit apparaat zijn batterijen geleverd. Wanneer deze leeg zijn, moet u ze niet weggooien maar inleveren als KCA.

Radio Interference

Cables supplied by Agilent Technologies are screened to provide optimized protection against radio interference. All cables are in compliance with safety or EMC regulations.

Test and Measurement

If test and measurement equipment is operated with unscreened cables, or used for measurements on open set-ups, the user has to assure that under operating conditions the radio interference limits are still met within the premises.

Sound Emission

Manufacturer's Declaration

This statement is provided to comply with the requirements of the German Sound Emission Directive of 18 January 1991.

This product has a sound pressure emission (at the operator position) < 70 dB.

- Sound Pressure Lp < 70 dB (A)
- At Operator Position
- Normal Operation
- According to ISO 7779:1988/EN 27779/1991 (Type Test)

Solvent Information

Observe the following recommendations on the use of solvents.

- Brown glass ware can avoid growth of algae.
- Small particles can permanently block capillaries and valves. Therefore always filter solvents through 0.4 µm filters.
- Avoid the use of the following steel-corrosive solvents:
  - Solutions of alkali halides and their respective acids (for example, lithium iodide, potassium chloride, and so on),
  - High concentrations of inorganic acids like sulfuric acid and nitric acid, especially at higher temperatures (if your chromatography method allows, replace by phosphoric acid or phosphate buffer which are less corrosive against stainless steel),
  - Halogenated solvents or mixtures which form radicals and/or acids, for example:

    $2CHCl_3 + O_2 \rightarrow 2COCl_2 + 2HCl$

    This reaction, in which stainless steel probably acts as a catalyst, occurs quickly with dried chloroform if the drying process removes the stabilizing alcohol,
  - Chromatographic grade ethers, which can contain peroxides (for example, THF, dioxane, di-isopropylether) such ethers should be filtered through dry aluminium oxide which adsorbs the peroxides,
  - Solvents containing strong complexing agents (e.g. EDTA),
  - Mixtures of carbon tetrachloride with 2-propanol or THF.

Agilent Technologies on Internet

For the latest information on products and services visit our worldwide web site on the Internet at:

http://www.agilent.com

Select Products/Chemical Analysis

It will provide also the latest firmware of the modules for download.

Index

solvent zero counter 94

8

8-bit configuration switch
on-board LAN 24
without On-Board LAN 26

A

active inlet valve 164, 164
active inlet valve 133, 166, 181
active seal wash 8, 73
adapter 58, 164, 166
Agilent Diagnostic software 84
Agilent Lab Advisor software 84
Agilent Lab Advisor 84
Agilent
on internet 214
algae growth 67
algae 64, 213
alternative seal material 74
ambient operating temperature 35
ambient non-operating temperature 35
analog output 37
analog signal 21
analog
cable 194
apg remote 22
assembly
bottle head 185
AUTO mode 13
AUX output 52

B

ball-screw drive 10
battery
safety information 210
BCD board 168
BCD
cable 199
bench space 34
binary pump checklist 40
blockage 103
bottle head assembly 185, 185
buffer application 64
buffer solutions 8

C

cable
analog 194
BCD 199
CAN 201
connecting APG remote 47
connecting CAN 47
connecting GPIB 47
connecting LAN 47
connecting the ChemStation 47
connecting the power 47
external contact 202
interface 50
LAN 201
remote 196
RS-232 203
cables
analog 192
BCD 192
CAN 193
external contact 193
LAN 193
overview 192
remote 192
RS-232 193
CAN
cable 201
changing solvents 60
checklist, binary pump 40
cleaning 134
column 8
Communication settings
RS-232C 27
communications 37
compensation sensor open 91
compensation sensor short 91
composition precision 37, 37
composition range 37
compressibility compensation 13, 36, 76
condensation 34
configuration
one stack 43, 43
two stack 46
connections, flow 54, 57
control software 53

D

damaged parts 40
damping unit 11
defect on arrival 40
degreaser spray 147
delay volume 37, 75
delay volume 12

delivery checklist 40
design 9
Diagnostic software 84
dimensions 35
dual-piston in-series design 9

E

electrical connections
descriptions of 16
electronic waste 209
electrostatic discharge (ESD) 168
EMF
early maintenance feedback 14
encoder missing 104
error messages
fan failed 92
error messages
compensation sensor open 91
compensation sensor short 91
encoder missing 104
ignition without cover 93, 93
index adjustment 109
index limit 108
index missing 110
initialization failed 112
inlet-valve fuse 101
inlet-valve missing 105
leak sensor open 90
leak sensor short 90
leak 92
missing pressure reading 99
motor drive power 103
pressure above upper limit 95
pressure below lower limit 96
pump head missing 107
remote timeout 89
selection valve failed 97
selection-valve fuse 100
servo restart failed 106
shut-down 88
stroke length 111
synchronization lost 89
temperature limit exceeded 102
temperature out of range 101
timeout 88
error message
wait timeout 113
error
solvent zero counter 94
Exchanging the Active Inlet Valve Cartridge 166
exchanging
active inlet valve 164, 164
active inlet valve 133, 166
inlet valve 151
interface board 168
outlet valve sieve 153
outlet valve sieve 133
outlet valve 133, 153
pistons 133, 146
pump seals 143
pump seals 133
purge valve frit 133
purge valve 133
solvent selection valve 157
wash seals 160
wash seals 133, 147
external contact
cable 202

F

fan failed 92
fastest gradient response 75
firmware
updates 170, 170
upgade/downgrade 170
upgrade/downgrade 170
flow accuracy 36
flow connections 54, 57
flow precision 36
flow range 36
frequency range 35

G

gas solubility 64
general error messages 88
gradient formation 36

H

hexagonal key, 3 mm 140, 146, 149
hexagonal key, 3 mm 147
hexagonal key, 4 mm 140, 146, 149
hexagonal key, 4 mm 147
highest injection precision 72
high-pressure mixing 8
hints for successful use 64
humidity 35
hydraulic path with solvent selection valve 186
hydraulic path without solvent selection valve 188
hydraulic system 36

I

index limit 108
index adjustment 109
index missing 110
initialization failed 112
initialization 12, 12
inlet valve 151
inlet-valve fuse 101
inlet-valve missing 105
insert tool 147
installation, pump module 48
installation
bench space 34
site requirements 31
instrument layout 15

interface board 168
interface cable 50
interfaces 18
internet 214
introduction to the pump 8

L

LAN
  cable 201
leak sensor open 90
leak test, evaluation 124
leak test 121
leak sensor short 90
leak 92
line frequency 35
line voltage 35
liquimeter 144
lithium batteries 210

M

main assemblies, overview 132
maintenance
  feedback 14
  replacing firmware 170, 170
message
  ignition without cover 93, 93
  remote timeout 89
minimum flow rate 64
missing pressure reading 99
missing parts 40
mixer 9
motor-drive power 103

N

non-operating altitude 35
non-operating temperature 35

O

operating Altitude 35
operating temperature 35
optimization
  stack configuration 43
outlet valve 133, 153, 179
overview
  pump 9

P

packaging
  damaged 40
parts identification
  cables 191
parts
  active inlet valve 181
  bottle head assembly 185
  damaged 40
  hydraulic path with solvent selection valve 186
  hydraulic path without solvent selection valve 188
  missing 40
  outlet valve 179
  pump housing and main assemblies 174
  pump housing and main assemblies 172
  solvent cabinet 184
performance specification 36
pH range 36
physical specifications 35
piston 10, 133, 146
power supply indicator 81
power consideration 32
power consumption 35
power cords 33
precision 64
pressure above upper limit 95
pressure below lower limit 96
pressure sensor readings 52
pressure test 116
pressure pulsation 13, 36, 76
pressure range 74
pressure, operating range 36
priming
  with a pump 60, 62
  with a syringe 60
  with a pump 72
  with a syringe 72
PTFE frit 133
pump head missing 107
pump seals 143
pump seals 64, 133
purge valve 64, 133
purge-valve assembly 11
purging the pump 60

R

radio interference 211
reassembling the pump head 149
recommended pH range 36
remote
  cable 196
removing the pump head 140
repair procedures 133
repairs
  replacing firmware 170, 170
reproducibility 64
restart without cover 94
results, pressure test 119
RS-232C
  cable 203
  communication settings 27
running the leak test 123
running the pressure test 118

S

safety class I 206
safety information
  lithium batteries 210
safety
  general information 206
  standards 35
  symbols 208
sapphire piston 10
screwdriver pozidriv #1 140
screwdriver pozidriv #1 147, 157
screwdriver, flat-head 147
seal wash 73
seal wash 10
  when to use 73
seal wear counter 144
seal, alternative material 74
seals 64, 133, 147, 160, 160
security lever 49
selection valve failed 97
selection-valve fuse 100
serial number
  information 17
servo restart failed 106
setable flow range 36
shut-down 88
sieve 133, 153
simple repair procedures 133
simple repairs 130
site requirements 31
  power cords 33
snap fastener 54, 57
solvent cabinet 55, 58
solvent filters
  checking 135
  cleaning 136
solvent inlet filter 64
solvent selection valve 8, 54, 157
solvent cabinet 64, 184
solvent filters
  prevent blocking 67
solvent information 66
solvents 213
sonic bath 153
sound emission 212
special interfaces 23
special settings
  boot-resident 29
  forced cold start 29
specification
  performance 36
  physical 35
specifications 31
stack configuration 47
  rear view 47
static mixer 75
status indicator 82
stroke length 111
stroke volume 11, 13
synchronization lost 89
syringe adapter 61
system setup and installation
  optimizing stack configuration 43

T

temperature limit exceeded 102
temperature out of range 101
temperature sensor 92
test functions 80
timeout 88
tools
  screwdriver pozidriv #1 140
  screwdriver pozidriv #1 157
  wrench 1/4 inch, slitted socket 140
  wrench 14 mm 153
troubleshooting
  error messages 80, 87
  status indicators 80, 81

U

unpacking the pump 40

V

vacuum degasser, when to use 72
vacuum degasser 37
vacuum degasser, operational hints 72
vacuum degasser 8, 64
valve
  solvent selection 157
variable stroke volume 13
variable reluctance motor 11
voltage range 35

W

wait timeout 113
wash seals 133
wash seals 147
waste
  electrical and electronic equipment 209
WEEE directive 209
weight 35
wrench 1/4 inch, slitted socket 140
wrench 1/4 inch 118, 123, 137
wrench 14 mm 137, 151, 153, 164, 166

www.agilent.com

In This Book

This manual contains technical reference information about the Agilent 1260 Infinity Binary Pump VL (G1312C). The manual describes the following:

- introduction,
- requirements,
- installation,
- configuring the pump,
- using the pump,
- optimizing performance,
- troubleshooting and diagnostics,
- maintenance,
- parts and materials,
- identifying cables,
- safety.

© Agilent Technologies 2008, 2010

Printed in Germany
06/10

G1312-90007

Agilent Technologies